



 



21. Interface Adaptor for SkyAir Series

21.1 DTA112BA51

Installation

Interface adaptor for SkyAir Series	Installation manual
DTA112B51, DTA112BA51	

Accessories Check if the following accessories are included in the kit.

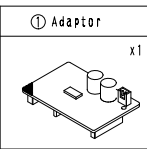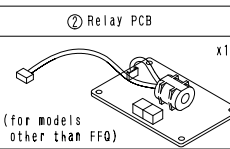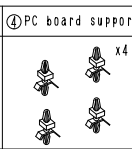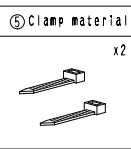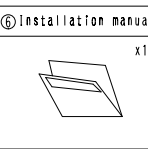① Adaptor	② Relay PCB	③ Relay harness	④ PC board support	⑤ Clamp material	⑥ Installation manual
 x1	 x1 (for models other than FFQ)	 x1 (for FFQ model)	 x4	 x2	 x1

Note Before opening control box lid, be sure cut off the all air conditioner power of indoor unit and outdoor unit, or you may get an electric shock.

① SYSTEM OUTLINE

- By connecting this kit to an optional controller for centralized control, all units of the SKY AIR Series in the system can be controlled as a group from the optional controller.
- One kit must be installed onto the master unit of each group.

② ELECTRIC WIRING for FFQ model

- (1) Mount the Adaptor ① on the indoor unit PCB by setting the triangle marks together, (Fig.1)
- (2) Insert the Relay harness ③ into the connector of the Adaptor ① (Fig.2)
- (3) Remove the remote control terminal block(X1M) from the control box mounted inside the indoor unit.
- (4) Connect the Relay harness ③ with the terminals F1 and F2 on the terminal block(X1M), (Fig.2)
- (5) Mount the remote control terminal block(X1M) on the inside of the control box as it was before removing it.
- (6) Bind the extra wires with the attached Clamp material ⑤ so that the wires do not go over the indoor unit PCB, (Fig.3)
- (7) Connect the wires from the terminals F1 and F2 to the centralized control, (Fig.2)

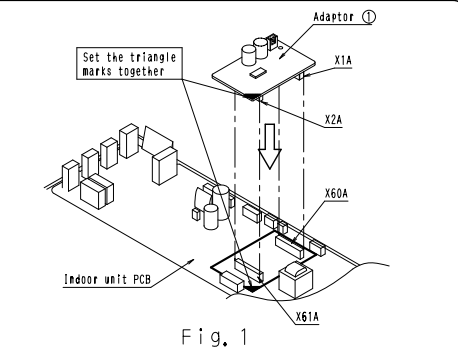


Fig. 1

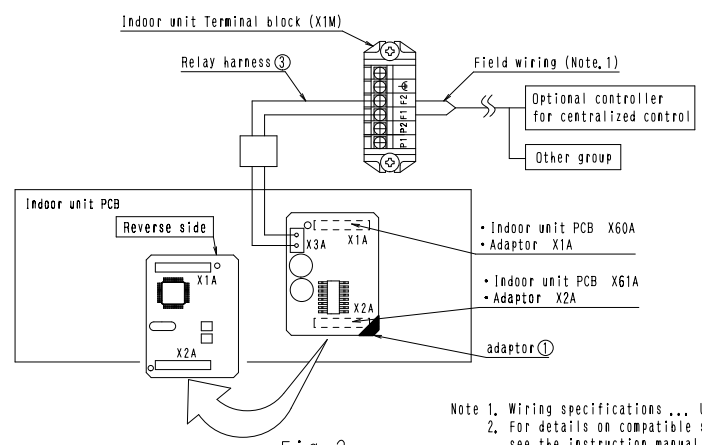


Fig. 2

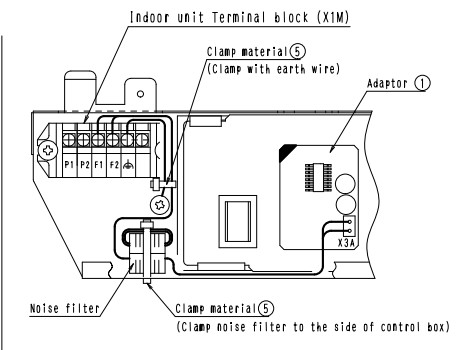


Fig. 3

Note 1. Wiring specifications ... Use a 0,75-1,25mm sheathed vinyl cord or cable (2 wires).
 2. For details on compatible systems and how to connect to optional controllers, see the instruction manual of the optional controller and technical reference materials.

1P107904C

3 ELECTRIC WIRING for MODELS OTHER THAN FFQ

- (1) Mount the adaptor ① on the indoor unit PCB by setting the triangle marks together, (Fig.1 in **ELECTRIC WIRING for FFQ model**)
- (2) Insert the harness from Relay PCB ② into the connector (X3A) of the Adaptor ①. (Fig.4)
- (3) Mount the Relay PCB ② on the required location referring to the figure of **Install position of Relay PCB**.
- (4) Bind the extra wires with the attached Clamp material ⑤ so that the wires do not go over the indoor unit PCB and the parts on the PCB do not get damaged,
- (5) Connect the wires from the terminals F1 and F2 to the centralized control, (Fig.4)


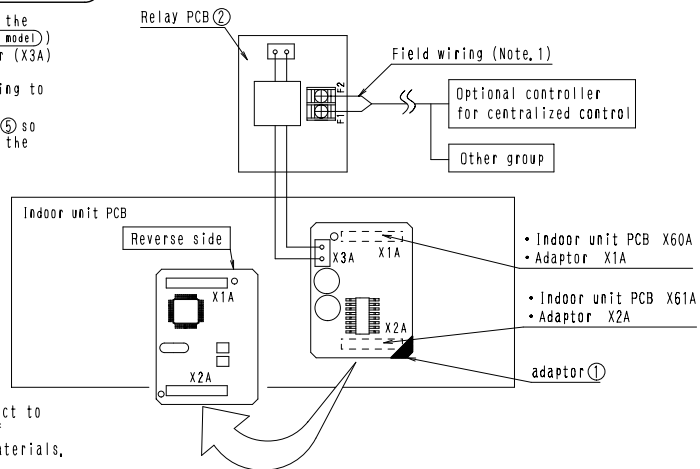


Fig. 4

- Note 1, Wiring specifications ... Use a 0,75-1,25mm sheathed vinyl cord or cable (2 wires),
2. For details on compatible systems and how to connect to optional controllers, see the instruction manual of the optional controller and technical reference materials,


< Ceiling Suspended Type >

FHQ

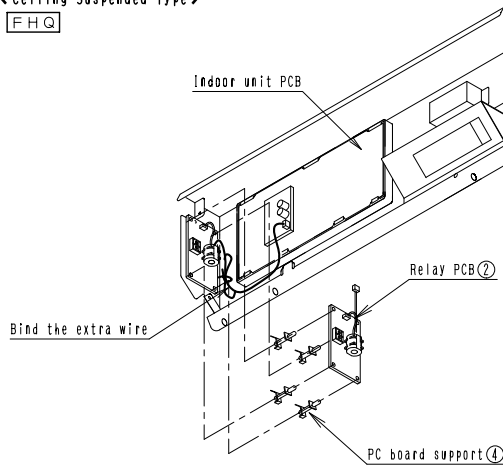


< Ceiling Mounted Built-In Type >

FBQ-B

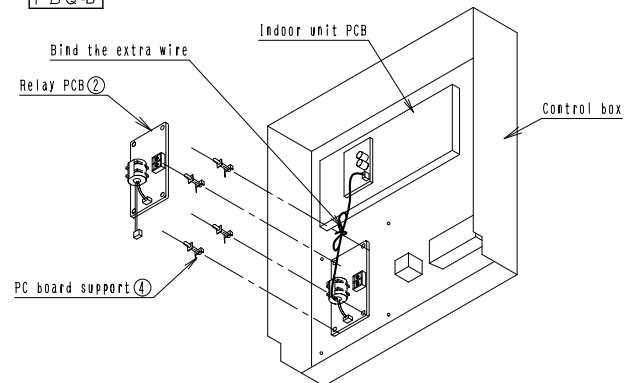

< Wall-mounted Type >

FAQ

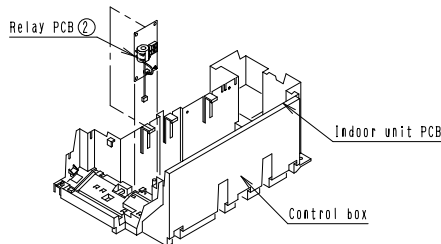

C: 1P107904C