

# HAIL GUARDS 3-6 TON INSTALLATION INSTRUCTIONS

© 2018 **DAIKIN COMPANY, L.P.**


5151 San Felipe, Suite 500, Houston, TX 77056

[www.daikincomfort.com](http://www.daikincomfort.com)

P/N: IOD-7083 Date: October 2018


Hail Guards are to be installed on the outside of the condenser coil. Below are installation drawings on how they are to be installed in the unit.

1. Below Figures 1 & 2 shows Hail Guard Panels before installation onto unit.
2. Prior to installing Hail Guards onto the unit, take the guards out of the box. Slide the top of the Hail Guard up and under the Top Panel flange, then push the bottom of the Hail Guard into position. With one hand holding guard up to unit, put one screw into the four corners of the guard to hold it onto the unit. Do the same for remaining guard. For installation of Hail Guard, see illustration 7. Use screws supplied with kit.

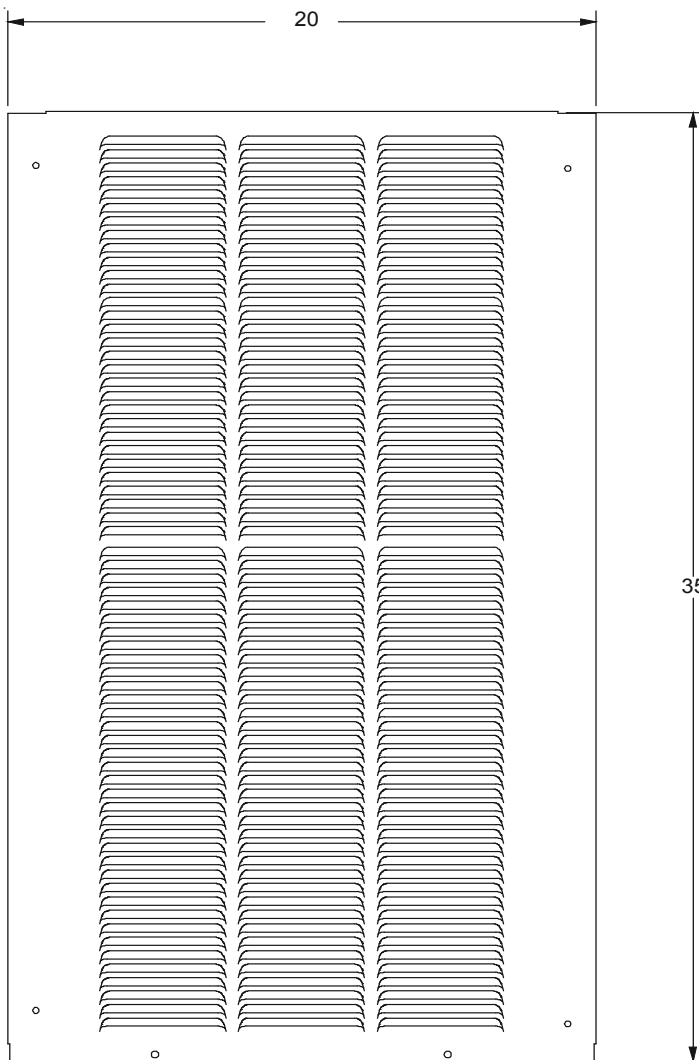

FRONT VIEW

**Hail Guards 3 Ton  
Figure 1**

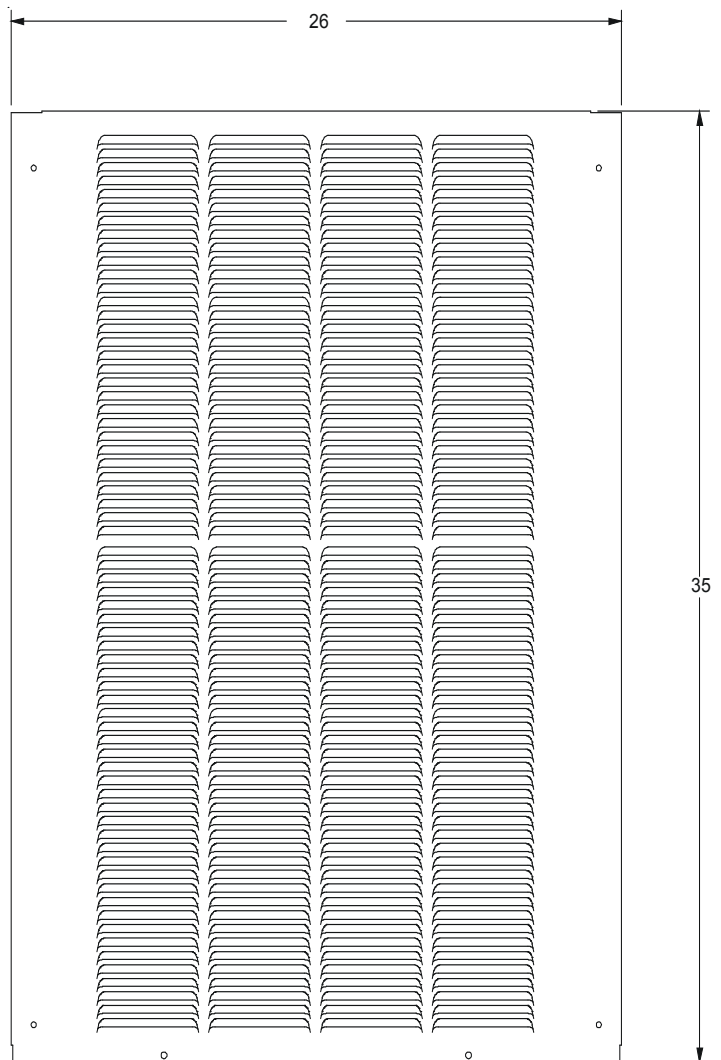


FRONT VIEW

**Hail Guards 3 Ton  
Figure 2**




1. Below Figures 3 & 4 shows Hail Guard Panels before installation on 4 & 5 Ton unit.

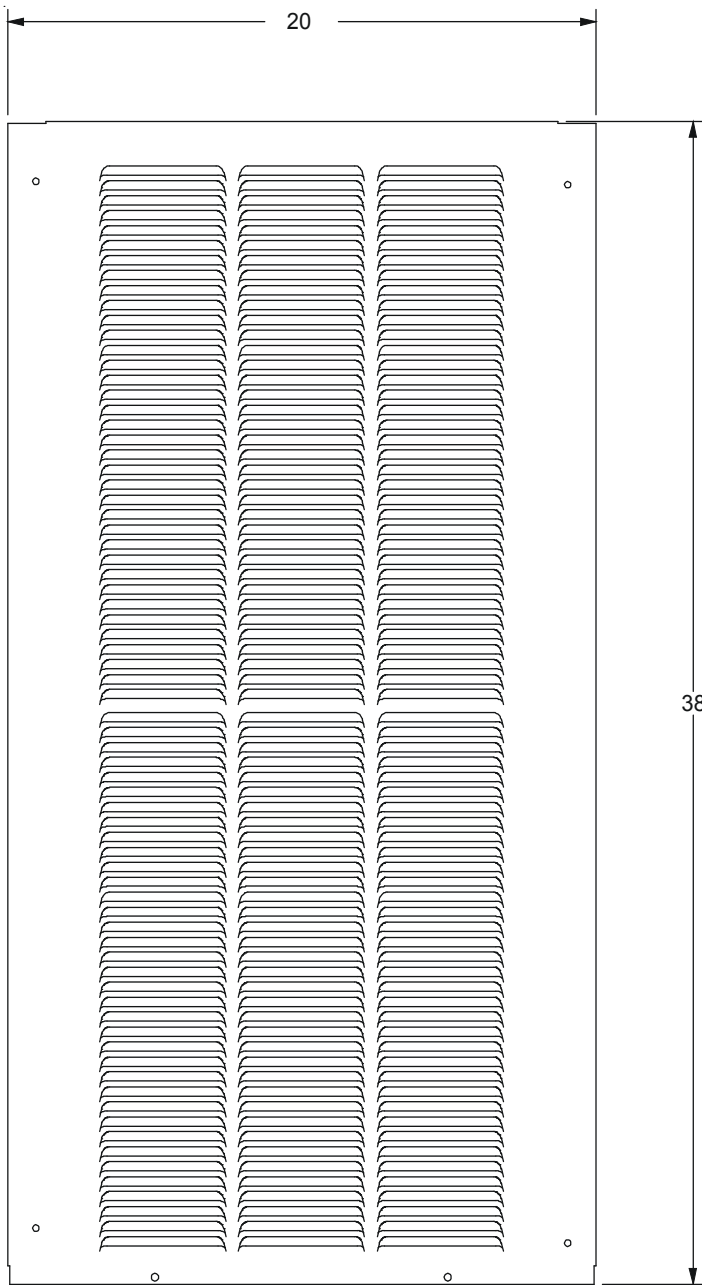

FRONT VIEW


**Hail Guards 4 & 5 Ton  
Figure 3**

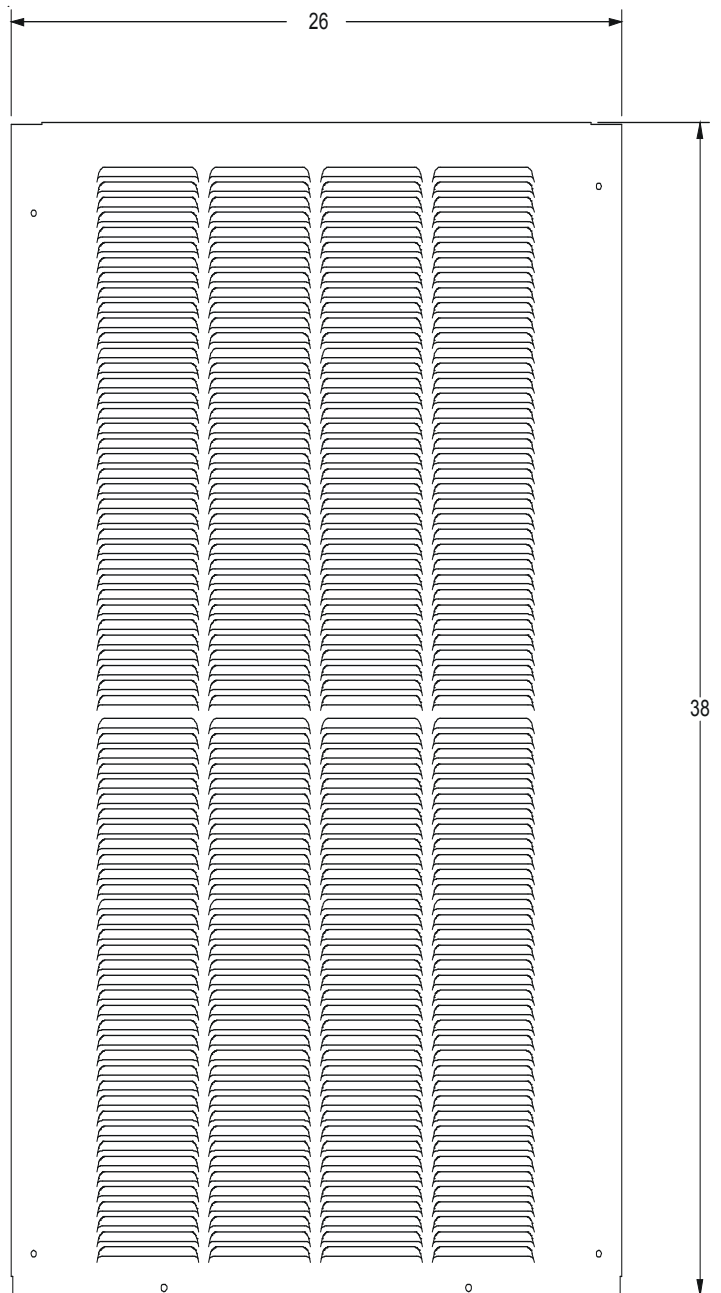

FRONT VIEW


**Hail Guards 4 & 5 Ton  
Figure 4**

1. Below Figures 5 & 6 shows Hail Guard Panels before installation on 6 Ton unit.

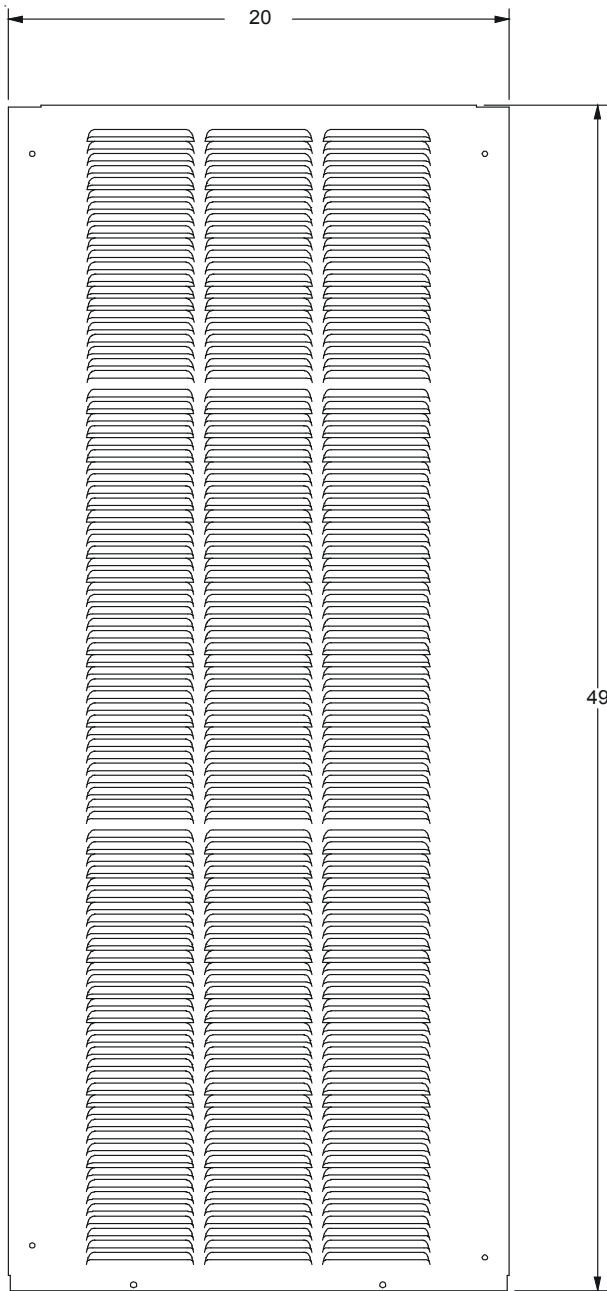


FRONT VIEW

**Hail Guards 6 Ton  
Figure 5**

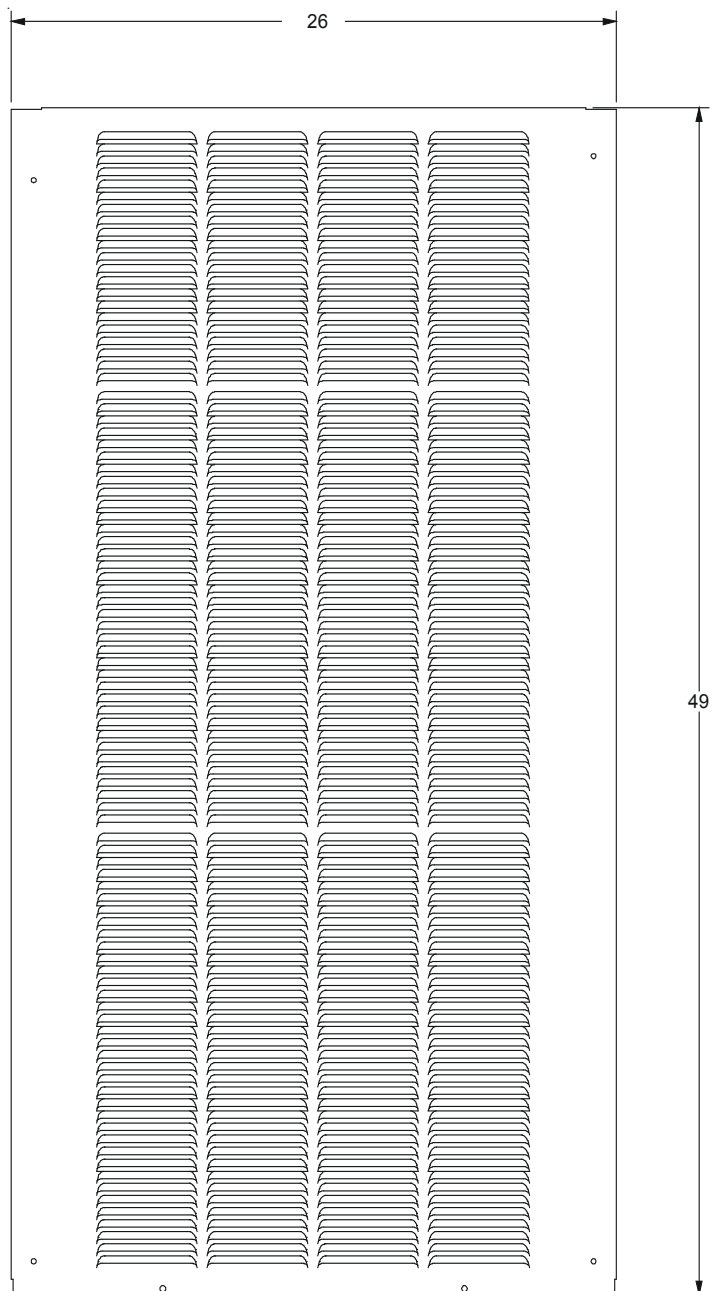


FRONT VIEW

**Hail Guards 6 Ton  
Figure 6**

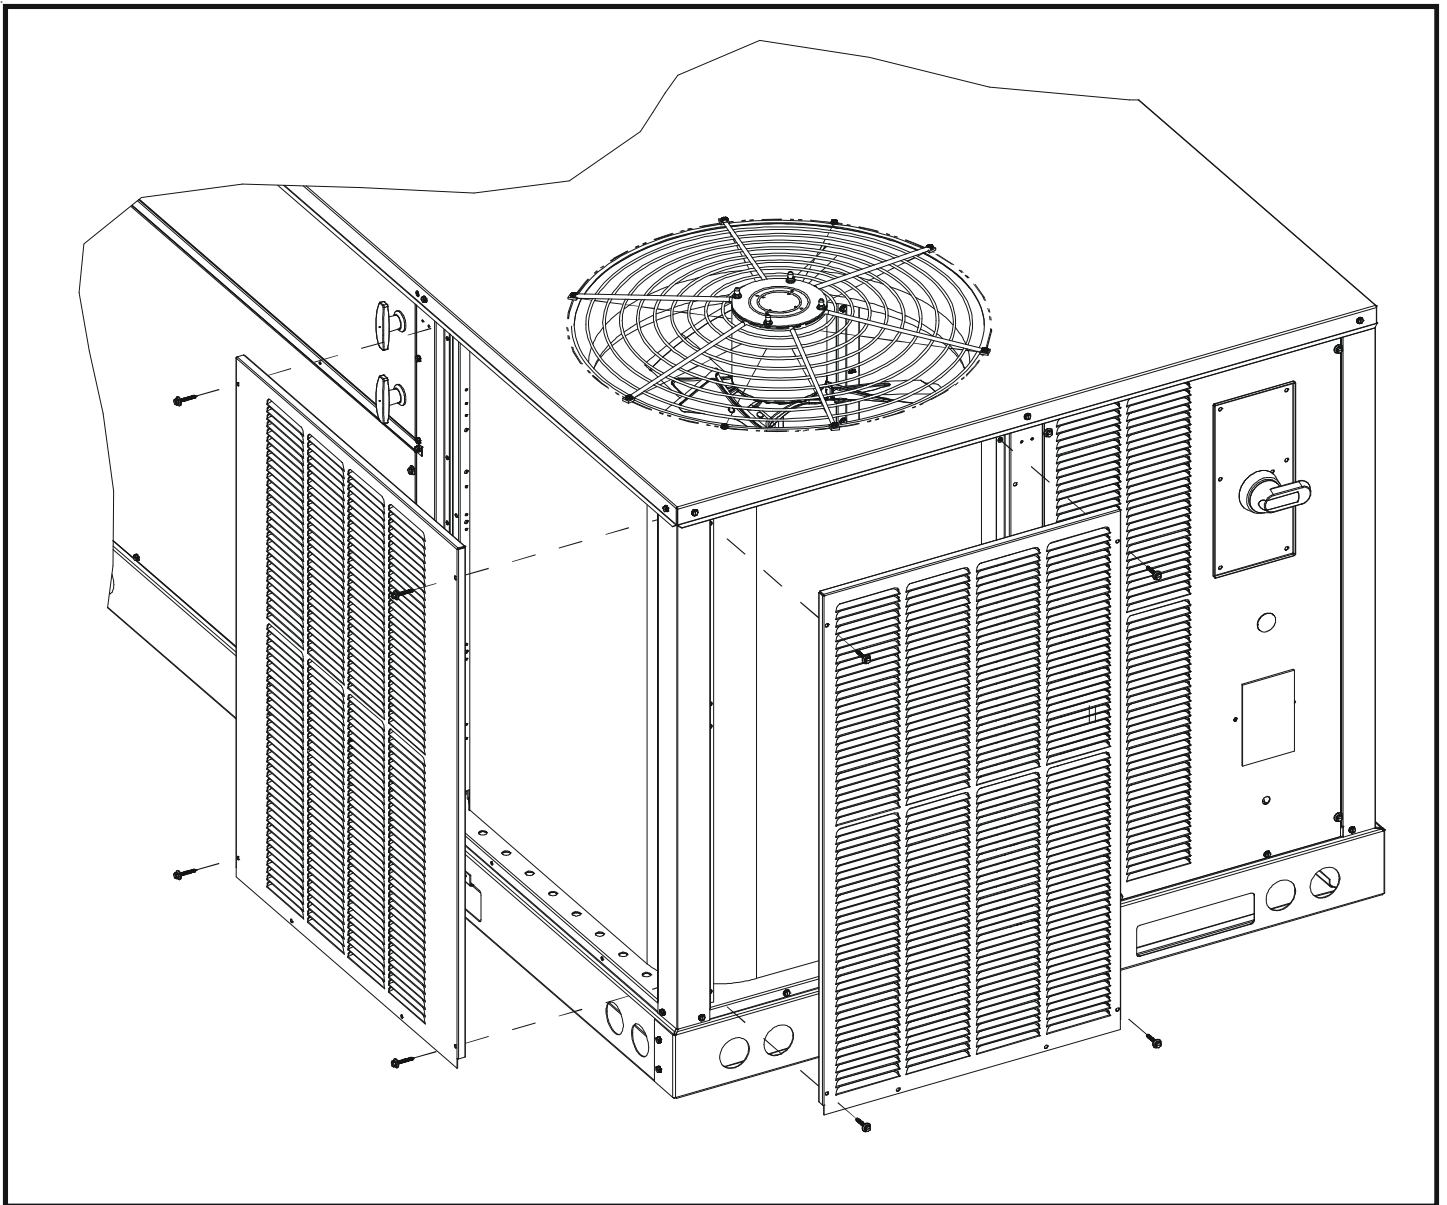

**Hail Guard Installation Figure 7  
(3-6 Ton Models)**

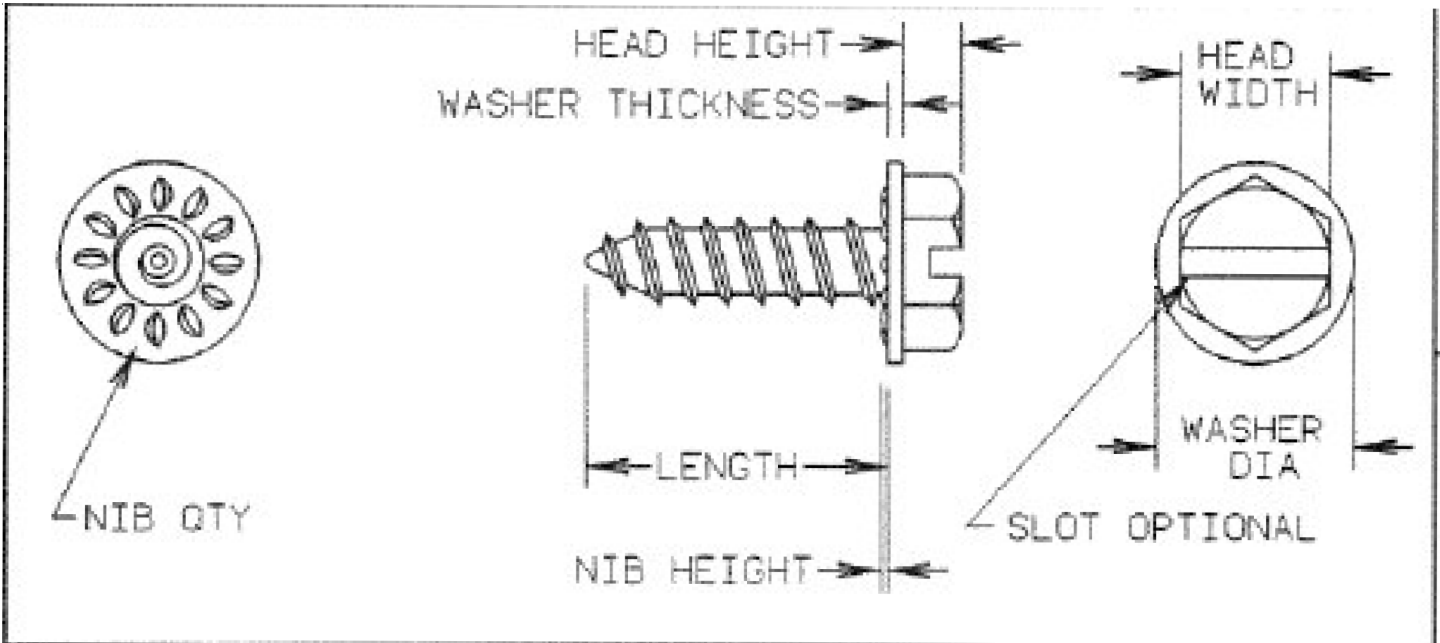

**Supplied Screws Figure 8**

**NOTE: ONLY USE THE .5" LONG SCREW SUPPLIED IN KIT. DO NOT USE LONGER SCREWS. LONGER SCREWS CAN DAMAGE THE COIL.**

**THIS PAGE IS INTENTIONALLY LEFT BLANK**

**THIS PAGE IS INTENTIONALLY LEFT BLANK**

NOTE: SPECIFICATIONS AND PERFORMANCE DATA LISTED HEREIN ARE SUBJECT TO CHANGE WITHOUT NOTICE

© 2018 **DAIKIN COMPANY, L.P.**

[www.daikincomfort.com](http://www.daikincomfort.com)