


# PACKAGED HEAT PUMP UNITS

## A/GPHH5 15.2 SEER2 "H" SERIES WITH R-32

### INSTALLATION INSTRUCTIONS

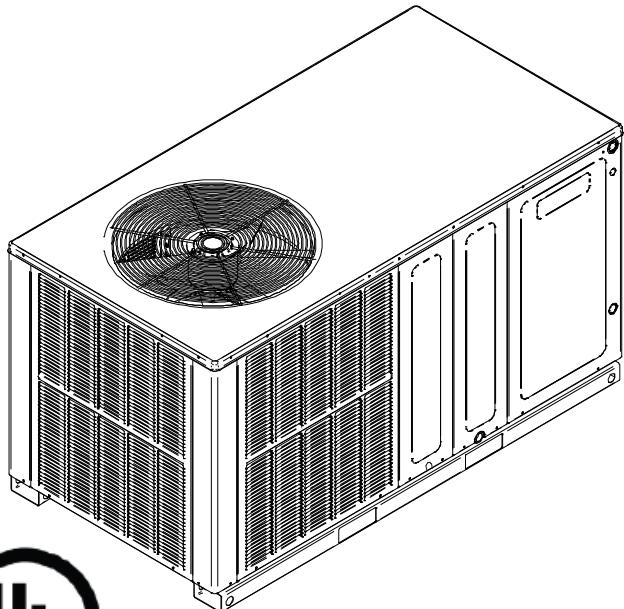

**LISTED**

**NOTE: THIS EQUIPMENT IS APPROVED TO USE ONLY WITH R-32 REFRIGERANT.**

**NOTE: \*PHH5 MODELS APPLY TO BOTH AMANA® BRAND AND GOODMAN PRODUCTS ONLY.**

#### ATTENTION INSTALLING PERSONNEL

Prior to installation, thoroughly familiarize yourself with this Installation Manual. Observe all safety warnings. During installation or repair, caution is to be observed.

It is your responsibility to install the product safely and to educate the customer on its safe use.



#### WARNING

ONLY PERSONNEL THAT HAVE BEEN TRAINED TO INSTALL, ADJUST, SERVICE, MAINTENANCE OR REPAIR (HEREINAFTER, "SERVICE") THE EQUIPMENT SPECIFIED IN THIS MANUAL SHOULD SERVICE THE EQUIPMENT.

THIS EQUIPMENT IS NOT INTENDED FOR USE BY PERSONS (INCLUDING CHILDREN) WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES, OR LACK OF EXPERIENCE AND KNOWLEDGE, UNLESS THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE BY A PERSON RESPONSIBLE FOR THEIR SAFETY.

CHILDREN SHOULD BE SUPERVISED TO ENSURE THAT THEY DO NOT PLAY WITH THE EQUIPMENT.

THE MANUFACTURER WILL NOT BE RESPONSIBLE FOR ANY INJURY OR PROPERTY DAMAGE ARISING FROM IMPROPER SUPERVISION, SERVICE OR SERVICE PROCEDURES. IF YOU SERVICE THIS UNIT, YOU ASSUME RESPONSIBILITY FOR ANY INJURY OR PROPERTY DAMAGE WHICH MAY RESULT. IN ADDITION, IN JURISDICTIONS THAT REQUIRE ONE OR MORE LICENSES TO SERVICE THE EQUIPMENT SPECIFIED IN THIS MANUAL, ONLY LICENSED PERSONNEL SHOULD SERVICE THE EQUIPMENT. IMPROPER SUPERVISION, INSTALLATION, ADJUSTMENT, SERVICING, MAINTENANCE OR REPAIR OF THE EQUIPMENT SPECIFIED IN THIS MANUAL, OR ATTEMPTING TO INSTALL, ADJUST, SERVICE OR REPAIR THE EQUIPMENT SPECIFIED IN THIS MANUAL WITHOUT PROPER SUPERVISION OR TRAINING MAY RESULT IN PRODUCT DAMAGE, PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.



#### WARNING

**DO NOT BYPASS SAFETY DEVICES.**

Our continuing commitment to quality products may mean a change in specifications without notice.

19001 Kermier Rd. Waller, TX 77484

[www.goodmanmfg.com](http://www.goodmanmfg.com) • [www.amana-hac.com](http://www.amana-hac.com)

© 2025 Daikin Comfort Technologies Manufacturing, Inc.

IOG-3039A  
06/2025

**Amana** is a registered trademark of Maytag Corporation or its related companies and is used under license.  
All rights reserved.



## Table of Contents

TO THE INSTALLER .....	3	EEM MOTOR .....	17
SHIPPING INSPECTION .....	3	EEM MOTOR SPEED ADJUSTMENT .....	17
TRANSPORTATION DAMAGE .....	3	ECM MOTOR .....	17
MESSAGE TO THE HOMEOWNER .....	3	ECM MOTOR SPEED ADJUSTMENT .....	17
REPLACEMENT PARTS .....	3	DIP SWITCH FUNCTIONS .....	18
ORDERING PARTS .....	3	CFM DELIVERY AND ADJUSTMENTS .....	18
IMPORTANT SAFETY INSTRUCTIONS .....	3	THERMOSTAT "FAN ONLY" MODE .....	18
RECOGNIZE SAFETY SYMBOLS, WORDS, AND LABELS .....	3	HUMIDITY CONTROL .....	18
CABLING .....	3	24 VOLT DEHUMIDISTAT WIRING .....	18
GENERAL INFORMATION .....	7	TWO-STAGE HEATING .....	18
QUALIFICATION OF WORKERS .....	7	THERMOSTAT WIRING .....	18
EPA REGULATIONS .....	7	TXV SUPERHEAT ADJUSTMENT .....	19
NATIONAL CODES .....	7	TWO STAGE COOLING APPLICATION .....	19
MAJOR COMPONENTS .....	7	CHECKING SUPERHEAT .....	19
PRE-INSTALLATION CHECKPOINTS .....	7	CHECKING SUBCOOLING .....	19
UNIT LOCATION .....	8	RDS FUNCTION .....	19
CLEARANCE AND ACCESSIBILITY .....	8	RDS OPERATION .....	20
OUTSIDE SLAB INSTALLATION .....	9	ELECTRIC HEAT INSTALLATION .....	20
ROOFTOP INSTALLATION .....	9	HEATER KIT .....	20
RIGGING .....	9	APHH5 MODELS .....	20
RIGGING DETAILS .....	9	MAINTENANCE .....	22
DUCTING .....	10	RECOVERY .....	22
CONNECTING THE RETURN AND SUPPLY FLEXIBLE DUCT IN MANUFACTURED OR MODULAR HOUSING APPLICATION....	10	CHARGING PROCEDURES .....	22
PLENUM APPLICATION .....	11	SERVICE .....	22
FILTERS .....	11	INADEQUATE AIR VOLUME THROUGH INDOOR COIL .....	22
PIPING .....	11	OUTSIDE AIR INTO RETURN DUCT .....	22
CONDENSATE DRAIN .....	11	UNDERCHARGE .....	22
ELECTRICAL WIRING .....	11	POOR "TERMINATING" SENSOR CONTACT .....	23
HIGH VOLTAGE WIRING .....	13	MALFUNCTIONING REVERSING VALVE .....	23
LOW VOLTAGE WIRING .....	13	CLEAN OUTSIDE COIL (QUALIFIED SERVICER ONLY) .....	23
INTERNAL WIRING: .....	13	CLEAN INDOOR COIL (QUALIFIED SERVICER ONLY) .....	23
START-UP PROCEDURE AND CHECKLIST .....	13	SERVICING MEASURES FOR THE REFRIGERANT .....	23
HEAT PUMP START-UP PROCEDURE .....	13	DETECTION SYSTEM .....	23
FINAL SYSTEM CHECKS .....	14	TROUBLESHOOTING CODE .....	24
COMPONENTS .....	14	BLOWER PERFORMANCE CHARTS .....	25
CONTACTOR .....	14	DIP SWITCH FUNCTION SELECTION CHARTS .....	27
CRANKCASE HEATER .....	14	TROUBLESHOOTING CHART .....	28
CONDENSER MOTOR .....	14	UNIT DIMENSIONS .....	29
COMPRESSOR .....	14	WIRING DIAGRAM .....	30
CONTACTOR RELAY .....	14	MAINTENANCE RECOMMENDATIONS .....	34
DEFROST CONTROL .....	14	START-UP CHECKLIST .....	35
OUTDOOR THERMOSTAT .....	14		
REVERSING VALVE COIL .....	14		
INDOOR BLOWER MOTOR .....	14		
BLOWER INTERLOCK RELAY .....	14		
EXPLANATION AND GUIDANCE (HEAT PUMP) .....	14		
DEFROST CONTROL .....	15		
SUGGESTED FIELD TESTING/ TROUBLESHOOTING .....	16		
TESTING DEFROST CONTROL .....	16		
TESTING DEFROST THERMOSTAT .....	16		
AIR FLOW MEASUREMENT AND ADJUSTMENT .....	16		
TOTAL EXTERNAL STATIC PRESSURE .....	16		
ADJUSTING SPEED TAP FOR INDOOR BLOWER MOTOR .....	17		



## RECOGNIZE THIS SYMBOL AS A SAFETY PRECAUTION

### TO THE INSTALLER

Carefully read all instructions for the installation prior to installing unit. Make sure each step or procedure is understood and any special considerations are taken into account before starting installation. Assemble all tools, hardware and supplies needed to complete the installation. Some items may need to be purchased locally. After deciding where to install unit, closely look the location over - both the inside and outside. Note any potential obstacles or problems that might be encountered as noted in this manual. Choose a more suitable location if necessary.

**IMPORTANT NOTE: IF A CRANKCASE HEATER IS USED, THE UNIT SHOULD BE ENERGIZED 24 HOURS PRIOR TO COMPRESSOR START UP TO ENSURE CRANKCASE HEATER HAS SUFFICIENTLY WARMED THE COMPRESSOR. COMPRESSOR DAMAGE MAY OCCUR IF THIS STEP IS NOT FOLLOWED.**

*Before using this manual, check the serial plate for proper model identification.*

*The installation and servicing of this equipment must be performed by qualified, experienced technicians only.*

### SHIPPING INSPECTION

#### TRANSPORTATION DAMAGE

Upon receiving the unit, inspect it for damage from shipment. Claims for damage, either shipping or concealed, should be filed immediately with the shipping company. Check the unit model number, specifications, electrical characteristics and accessories to determine if they are correct. In the event an incorrect unit is shipped, it must be returned to the supplier and must NOT be installed. The manufacturer assumes no responsibility for installation of incorrectly shipped units.

#### MESSAGE TO THE HOMEOWNER

These instructions are addressed primarily to the installer; however, useful maintenance information is included and should be kept, after installation, for future reference.

### REPLACEMENT PARTS

#### ORDERING PARTS

When reporting shortages or damages, or ordering repair parts, give the complete unit model and serial numbers as stamped on the unit's nameplate. Replacement parts for this appliance are available through your contractor or local distributor. For the location of your nearest distributor contact:

HOMEOWNER SUPPORT  
DAIKIN COMFORT TECHNOLOGIES  
MANUFACTURING, INC.  
19001 KERMIER ROAD  
WALLER, TEXAS 77484  
855-770-5678

### IMPORTANT SAFETY INSTRUCTIONS

#### RECOGNIZE SAFETY SYMBOLS, WORDS, AND LABELS

The following symbols and labels are used throughout this manual to indicate immediate or potential hazards. It is the owner's responsibility to read and comply with all safety information and instructions accompanying these symbols. Failure to heed safety information increases the risk of serious personal injury or death, property damage and/or product damage.

#### CABLING

Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.



#### WARNING

TO AVOID PROPERTY DAMAGE, PERSONAL INJURY OR DEATH, DO NOT USE THIS UNIT IF ANY PART HAS BEEN UNDER WATER. IMMEDIATELY CALL A QUALIFIED SERVICE TECHNICIAN TO INSPECT THE FURNACE AND TO REPLACE ANY PART OF THE CONTROL SYSTEM AND ANY GAS CONTROL HAVING BEEN UNDER WATER.



#### WARNING

THIS UNIT MUST NOT BE USED AS A "CONSTRUCTION HEATER" DURING THE FINISHING PHASES OF CONSTRUCTION ON A NEW STRUCTURE. THIS TYPE OF USE MAY RESULT IN PREMATURE FAILURE OF THE UNIT DUE TO EXTREMELY LOW RETURN AIR TEMPERATURE AND EXPOSURE TO CORROSIVE OR VERY DIRTY ATMOSPHERES.



#### WARNING

TO PREVENT THE RISK OF PROPERTY DAMAGE, PERSONAL INJURY, OR DEATH, DO NOT STORE COMBUSTIBLE MATERIALS OR USE GASOLINE OR OTHER FLAMMABLE LIQUIDS OR VAPORS IN THE VICINITY OF THIS APPLIANCE.



#### WARNING

DO NOT CONNECT TO OR USE ANY DEVICE THAT IS NOT LISTED IN THE APPLICABLE PRODUCT SPECIFICATIONS AS ACCEPTABLE FOR USE WITH THIS UNIT. SERIOUS PROPERTY DAMAGE, PERSONAL INJURY, REDUCED UNIT PERFORMANCE AND/OR HAZARDOUS CONDITIONS MAY RESULT FROM THE USE OF SUCH NON-APPROVED DEVICES.



## WARNING

**HIGH VOLTAGE!**  
DISCONNECT ALL POWER BEFORE SERVICING OR INSTALLING THIS UNIT. MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.



## WARNING

CONNECTING UNIT DUCT WORK TO UNAUTHORIZED HEAT PRODUCING DEVICES SUCH AS A FIREPLACE INSERT, STOVE, ETC. MAY RESULT IN PROPERTY DAMAGE, FIRE, CARBON MONOXIDE POISONING, EXPLOSION, PERSONAL INJURY OR DEATH.



## CAUTION

AUXILIARY DEVICES WHICH MAY BE A POTENTIAL IGNITION SOURCE SHALL NOT BE INSTALLED IN THE DUCT WORK. EXAMPLES OF SUCH POTENTIAL IGNITION SOURCES ARE HOT SURFACES WITH A TEMPERATURE EXCEEDING 700 °C AND ELECTRIC SWITCHING DEVICES.



## WARNING

DO NOT USE MEANS TO ACCELERATE THE DEFROSTING PROCESS OR TO CLEAN, OTHER THAN THOSE RECOMMENDED BY THE MANUFACTURER.

THE APPLIANCE SHALL BE STORED IN A ROOM WITHOUT CONTINUOUSLY OPERATING IGNITION SOURCES (FOR EXAMPLE: OPEN FLAMES, AN OPERATING GAS APPLIANCE OR AN OPERATING ELECTRIC HEATER).

DO NOT PIERCE OR BURN.

BE AWARE THAT REFRIGERANTS MAY NOT CONTAIN AN ODOR.



## WARNING

ONLY AUXILIARY DEVICES APPROVED BY THE APPLIANCE MANUFACTURER OR DECLARED SUITABLE WITH THE REFRIGERANT SHALL BE INSTALLED IN CONNECTING DUCTWORK.



## WARNING

LEAK DETECTION SYSTEM INSTALLED. UNIT MUST BE POWERED EXCEPT FOR SERVICE.



## WARNING

THIS UNIT IS EQUIPPED WITH ELECTRICALLY POWERED SAFETY MEASURES. TO BE EFFECTIVE, THE UNIT MUST BE ELECTRICALLY POWERED AT ALL TIMES AFTER INSTALLATION, OTHER THAN WHEN SERVICING.

## THE FOLLOWING INSTRUCTIONS ARE MANDATORY FOR A2L SYSTEMS AND SUPERSEDE OTHER INSTRUCTIONS

### WARNING

ONLY BRAZING TECHNIQUES AND APPROVED MECHANICAL JOINTS SHOULD BE USED TO CONNECT REFRIGERANT TUBING CONNECTIONS. NON-APPROVED MECHANICAL CONNECTORS AND OTHER METHODS ARE NOT PERMITTED IN THIS SYSTEM CONTAINING A2L REFRIGERANT. APPROVED MECHANICAL JOINTS WILL BE DETAILED IN THE PRODUCT'S SPECIFICATION SHEETS.

## DEEP VACUUM METHOD

The Deep Vacuum Method requires a vacuum pump rated for 500 microns or less. This method effectively and efficiently ensures the system is free of non-condensable air and moisture. The Triple Evacuation Method is detailed in the Service Manual for this product model as an alternative.

1. Connect the vacuum pump, micron gauge, and vacuum-rated hoses to both service valves. Evacuation must use both service valves to eliminate system mechanical seals.
2. Evacuate the system to less than 500 microns.
3. Isolate the pump from the system and hold the vacuum for 10 minutes (minimum). Typically, pressure will rise slowly during this period. If the pressure rises to less than 1000 microns and remains steady, the system is considered leak-free; proceed to system charging and startup.
4. If pressure rises above 1000 microns but holds steady below 2000 microns, non-condensable air or moisture may remain, or a small leak may be present. Return to step 2: If the same result is achieved, check for leaks and repair. Repeat the evacuation procedure.
5. If pressure rises above 2000 microns, a leak is present. Check for leaks and repair them. Then, repeat the evacuation procedure.

## ACCESSORY INSTALLATION

### WARNING

ALL ACCESSORIES THAT MAY BECOME A POTENTIAL IGNITION SOURCE IF INSTALLED, SUCH AS ELECTRONIC AIR CLEANERS, MUST ONLY BE POWERED THROUGH OUR ACCESSORY CONTROL BOARD KIT. IF AN ELECTRONIC AIR CLEANER IS ALREADY INSTALLED IN THE DUCT WORK AND NOT CONNECTED TO THE ACCESSORY CONTROL BOARD, IT WILL HAVE TO BE DISABLED OR REMOVED. ENSURE THAT ANY ADDITIONAL WIRING FROM THE INDOOR UNIT TO THE ACCESSORY CONTROL BOARD IS ROUTED AND PROTECTED FROM DAMAGE AND WEAR, AVOIDING THE FLUE PIPE AND ANY JOINTS THAT MAY NEED BRAZED OR DISCONNECTED FOR SERVICE.  
REFER TO THE PRODUCT SPECIFICATION SHEET FOR THE ACCESSORY CONTROL BOARD KIT PART NUMBER

## ALTITUDE ADJUSTMENT FACTOR TO CALCULATE MINIMUM ROOM AREA

The Indoor equipment mitigation requirements are calculated at sea level. For higher altitudes adjust the minimum room area specified on or near the Serial Plate by the corresponding altitude adjustment factor shown below. This table is provided as a reference.

Adjusted room area ( $A_{\min\ adj}$ ) is the product of the minimum room area specified on the serial plate and the adjustment factor AF, as shown in below formula

$$A_{\min\ adj} = A_{\min} (\text{serial plate}) * \text{AF}$$

Height in meters	Height in feet	Altitude Adjustment Factor (AF)
At sea level	At sea level	1.00
1~200	1~660	1.02
200~400	660~1320	1.03
400~600	1320~1970	1.05
600~800	1970~2630	1.07
800~1000	2630~3290	1.09
1000~1200	3290~3940	1.11
1200~1400	3940~4600	1.13
1400~1600	4600~5250	1.15
1600~1800	5250~5910	1.17
1800~2000	5910~6570	1.19
2000~2200	6570~7220	1.21
2200~2400	7220~7880	1.24
2400~2600	7880~8540	1.26
2600~2800	8540~9190	1.29
2800~3000	9190~9850	1.31
3000~3200	9850~10500	1.34

## GENERAL INFORMATION

The \*PHH5 series heat pumps are designed for OUTDOOR USE ONLY. This series is available in cooling Capacities of 2, 2 ½, 3, 3 ½, 4 and 5 nominal tons of cooling. Optional field installed heat kits are available in 5,8,10,15 and 20 KW. The units can be easily installed in manufactured or modular homes with existing high-static duct work. The units can also be easily converted to accommodate a plenum for normal or low-static applications. The \*PH series are self contained packaged units so the only connections needed for installation are the supply and return ducts, the line and low voltage wiring and drain connection. Rated performance is achieved after 20 hours of operation. Rated performance is delivered at the specified airflow. See outdoor unit specification sheet for split system models or product specification sheet for packaged and light commercial models. Specification sheets can be found at [www.goodmanmfg.com](http://www.goodmanmfg.com) for Goodman® brand products or [www.amana-hac.com](http://www.amana-hac.com) for Amana® brand products. Within either website, please select the Products and Services menu and then select the submenu for the type of product to be installed, such as heat pumps, to access a list of product pages that each contain links to that model's specification sheet.

### QUALIFICATION OF WORKERS

Personnel must be certified to service, work, and/or repair units with FLAMMABLE REFRIGERANTS. A certificate should document the competence and qualification achieved through training that included the substance of the following:

- Information about the explosion potential of FLAMMABLE REFRIGERANTS to show that flammables may be dangerous when handled without care.
- Information about POTENTIAL IGNITION SOURCES, especially those that are not obvious, such as lighters, light switches, vacuum cleaners, electric heaters.
- Information about the different safety concepts, including ventilated and unventilated areas.
- Information about refrigerant detectors, including function, operation, and service measures.
- Information about the concept of sealed components and sealed enclosures according to IEC 60079-15:2010.
- Information about the correct working procedures, including commissioning, maintenance, repair, decommissioning, and disposal procedures.

### EPA REGULATIONS

**IMPORTANT: THE UNITED STATES ENVIRONMENTAL PROTECTION AGENCY (EPA) HAS ISSUED VARIOUS REGULATIONS REGARDING THE INTRODUCTION AND DISPOSAL OF REFRIGERANTS IN THIS UNIT. FAILURE TO FOLLOW THESE REGULATIONS MAY HARM THE ENVIRONMENT AND CAN LEAD TO THE IMPOSITION OF SUBSTANTIAL FINES. BECAUSE REGULATIONS MAY VARY DUE TO PASSAGE OF NEW LAWS, WE SUGGEST A CERTIFIED TECHNICIAN PERFORM ANY WORK DONE ON THIS UNIT. SHOULD YOU HAVE ANY QUESTIONS PLEASE CONTACT THE LOCAL OFFICE OF THE EPA.**

### NATIONAL CODES

This product is designed and manufactured to permit installation in accordance with National Codes. It is the installer's responsibility to install the product in accordance with National Codes and/or prevailing local codes and regulations.

### MAJOR COMPONENTS

The unit includes a hermetically sealed refrigerating system (consisting of a compressor, condenser coil, evaporator coil with flowrator), an indoor blower, a condenser fan and all necessary internal electrical wiring. The heat pump also includes a reversing valve, solenoid, defrost thermostat and control and loss of charge protection. The system is factory-evacuated, charged and performance tested. Refrigerant amount and type are indicated on rating plate.

### PRE-INSTALLATION CHECKPOINTS

Carefully read all instructions for the installation prior to installing unit. Ensure each step or procedure is understood and any special considerations are taken into account before starting installation. Assemble all tools, hardware and supplies needed to complete the installation. Some items may need to be purchased locally.

Check that cabling /wiring will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks. A halide torch (or any other detector using a naked flame) shall not be used.

The following leak detection methods are deemed acceptable for all refrigerant systems.

Electronic leak detectors may be used to detect refrigerant leaks but, in the case of FLAMMABLE REFRIGERANTS, the sensitivity may not be adequate, or may need recalibration. (Detection equipment shall be calibrated in a refrigerant-free area.) Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used. Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed, and the appropriate percentage of gas (25 % maximum) is confirmed.

Leak detection fluids are also suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.

If a leak is suspected, all naked flames shall be removed/extinguished.

If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system.

Before attempting any installation, the following points should be considered:

- Structural strength of supporting members
- Clearances and provision for servicing
- Power supply and wiring
- Air duct connections
- Drain facilities and connections
- Location may be on any four sides of a home, manufactured or modular, to minimize noise

Consider the effect of outdoor fan noise on conditioned space and any adjacent occupied space. It is recommended that the unit be placed so that condenser air discharge does not blow toward windows less than 25 feet away.

The unit should be set on a solid, level foundation - preferably a concrete slab at least 4 inches thick. The slab should be above ground level and surrounded by a graveled area for good drainage. Any slab used as a unit's foundation should not adjoin the building as it is possible that sound and vibration may be transmitted to the structure. For rooftop installation, steel or treated wood beams should be used as unit support for load distribution.

Heat pumps require special location consideration in areas of heavy snow accumulation and/or areas with prolonged continuous subfreezing temperatures. Heat pump unit bases have holes under the outdoor coil to permit drainage of defrost water accumulation. The unit must be situated to permit free unobstructed drainage of the defrost water and ice. A minimum 2" clearance under the outdoor coil is required in the milder climates.

Heat Pump Elevation Chart	
Design Temperature	Suggested Minimum Elevation
+ 15° and above	2 - 1/2"
-5° to + 14°	8"
Below -5°	12"

## UNIT LOCATION

**NOTE: UNITS ARE DESIGNED FOR OUTDOOR INSTALLATION ONLY AT A MAX ALTITUDE OF 8,000 FEET ABOVE SEA LEVEL.**



### WARNING

THE APPLIANCE SHALL BE INSTALLED, OPERATED AND STORED IN A ROOM WITH A FLOOR AREA NOT LESS THAN THE MINIMUM ROOM AREA.



$\geq 15.3 \text{ m}^2$   
 $164.5 \text{ ft}^2$

### MINIMUM ROOM AREA FIGURE

**IMPORTANT NOTE: REFER TO THE ALTITUDE ADJUSTED ROOM AREA CALCULATION REFERENCED IN THIS MANUAL.**

### CLEARANCE AND ACCESSIBILITY

The unit is designed to be located outside the building with unobstructed condenser air inlet and discharge. Additionally, the unit must be situated to permit access for service and installation. Condenser air enters from three sides. Air discharges upward from the top of the unit. Refrigerant gauge connections are made on the right side of the unit as you face the compressor compartment. Electrical connections can be made either on the right or left sides of the unit. The best and most common application is for the unit to be located 10" from wall (4" minimum) with the connection side facing the wall. This "close to the wall" application minimizes exposed wiring.

Close to the wall application assures free, unobstructed air to the other two sides. In more confined application spaces, such as corners provide a minimum 12" clearance on all air inlet sides. Allow 36" minimum for service access to the compressor compartment and controls. The top of the unit should be completely unobstructed. If units are to be located under an overhang, there should be a minimum of 48" clearance and provisions made to deflect the warm discharge air out from the overhang.

## OUTSIDE SLAB INSTALLATION (FIGURE 1)

1. The unit must be mounted on a solid, level foundation.
2. Select a location that will minimize the length of the supply and return ducts.
3. Select a location where external water drainage cannot collect around the unit.
4. Consideration should also be given to shade, appearance and noise.

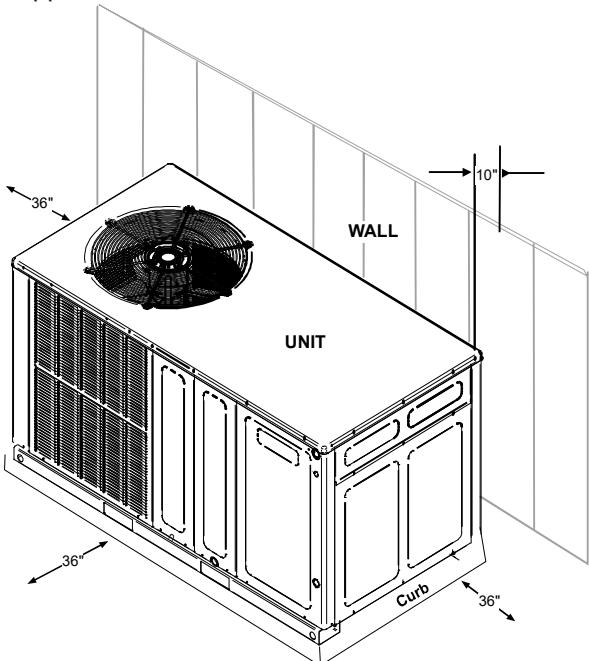


FIGURE 1

## ROOFTOP INSTALLATION (FIGURE 2)

1. Before locating the unit on the roof, make sure that the strength of the roof and beams is adequate to support the weight involved (See specification sheet for weight of units). This is very important and the installer's responsibility.
2. Make proper consideration for the weather-tight integrity of the roof and proper drainage of condensate.
3. To ensure proper condensate drainage, unit must be installed in a level position.
4. Consideration should also be given to shade, appearance and noise.

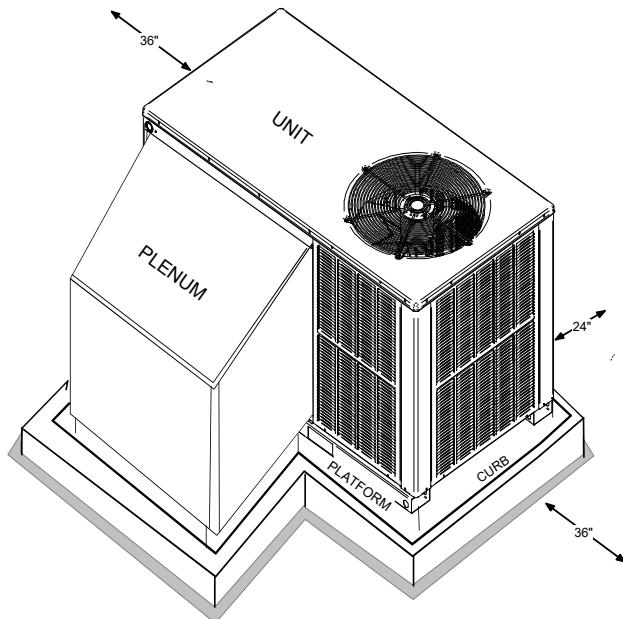


FIGURE 2

## RIGGING

### RIGGING DETAILS



#### WARNING

TO PREVENT PROPERTY DAMAGE, THE UNIT SHOULD REMAIN IN AN UPRIGHT POSITION DURING ALL RIGGING AND MOVING OPERATIONS. TO FACILITATE LIFTING AND MOVING WHEN A CRANE IS USED, PLACE THE UNIT IN AN ADEQUATE CABLE SLING.



#### WARNING

TO AVOID POSSIBLE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH, ENSURE THE ROOF HAS SUFFICIENT STRUCTURAL STRENGTH TO CARRY THE WEIGHT OF THE UNIT(S), ROOF CURB, SNOW LOADS, AND WATER LOAD AS REQUIRED BY LOCAL CODES. CONSULT A STRUCTURAL ENGINEER TO DETERMINE THE WEIGHT CAPABILITIES OF THE ROOF.



#### CAUTION

IF UNITS ARE LIFTED TWO AT A TIME, THE FORK HOLES ON THE CONDENSER END OF THE UNIT MUST NOT BE USED. MINIMUM FORK LENGTH IS 42" TO PREVENT DAMAGE TO THE UNIT; HOWEVER, 48" IS RECOMMENDED.

**NOTE: PROVISIONS FOR FORKS HAVE BEEN INCLUDED IN THE UNIT BASE FRAME. NO OTHER FORK LOCATIONS ARE APPROVED.**



#### CAUTION

TO AVOID POSSIBLE PERSONAL INJURY, A SAFE, FLAT SURFACE FOR SERVICE PERSONNEL SHOULD BE PROVIDED.



## WARNING

**TO PREVENT POSSIBLE EQUIPMENT DAMAGE, PROPERTY DAMAGE, PERSONAL INJURY OR DEATH, THE FOLLOWING BULLET POINTS MUST BE OBSERVED WHEN INSTALLING THE UNIT.**

Unit must be lifted by the four lifting holes located at the base frame corners.

- Lifting cables should be attached to the unit with shackles.
- The distance between the crane hook and the top of the unit must not be less than 60".
- Two spreader bars must span over the unit to prevent damage to the cabinet by the lift cables. Spreader bars must be of sufficient length so that cables do not come in contact with the unit during transport. Remove wood struts mounted beneath unit base frame before setting unit on roof curb. These struts are intended to protect unit base frame from fork lift damage. Removal is accomplished by extracting the sheet metal retainers and pulling the struts through the base of the unit. Refer to rigging label on the unit.

Refer to the Roof Curb Installation Instructions for proper curb installation. Curbing must be installed in compliance with the National Roofing Contractors Association Manual.


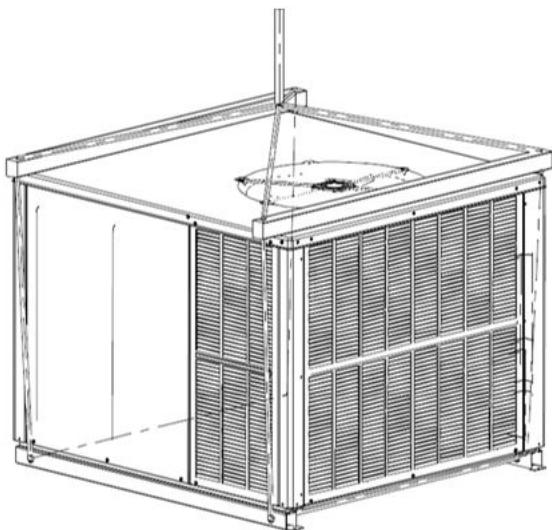


FIGURE 3

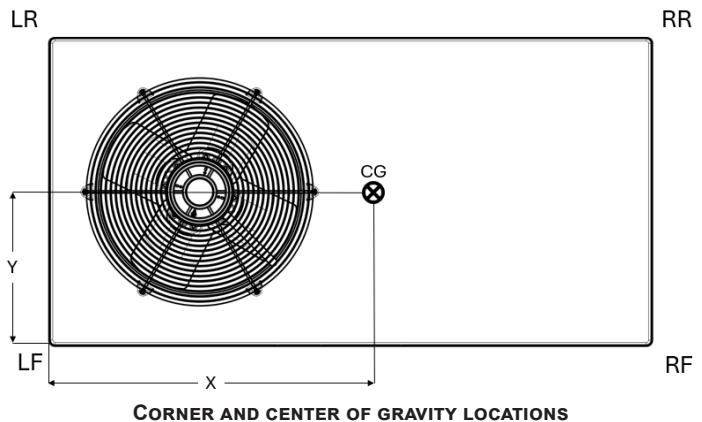

**NOTE: UNITS SHOULD BE LIFTED AT A POINT ABOVE CENTER OF GRAVITY.**

Model	Shipping Weight (lb)	Operating Weight (lb)	Corner Weights (lb)				X (in)	Y (in)
			LF	LR	RF	RR		
*PHH52431	354	344	90	80	89	85	33.38	16.31
*PHH53031	365	355	92	79	96	88	34.21	15.99
*PHH53631	403	393	89	118	114	72	31.24	16.44
*PHH54231	429	419	137	81	82	119	31.66	16.23
*PHH54831	430	420	137	81	82	120	31.74	16.27
*PHH56031	461	451	144	88	94	125	32.05	16.06

**CORNER WEIGHTS TABLE**

### DUCTING

Ducting work should be fabricated by the installing contractor in accordance with local codes. Industry manuals may be used as a guide when sizing and designing the duct system - such as NESCA (National Environmental Systems Contractors Association, 1501 Wilson Blvd., Arlington, Virginia 22209).

The unit should be placed as close as possible to the space to be air-conditioned allowing clearance dimensions as indicated. Ducts should run as directly as possible to supply and return outlets. Use of non-flammable weatherproof flexible connectors on both supply and return connections at the unit to reduce noise transmission is recommended.

It is preferable to install the unit on the roof of the structure if the registers or diffusers are located in the wall or ceiling. A slab installation is recommended when the registers are low on the wall or in the floor.

**CONNECTING THE RETURN AND SUPPLY FLEXIBLE DUCT IN MANUFACTURED OR MODULAR HOUSING APPLICATION**

The return and supply fittings are to be attached at the unit to a suitable square to round duct converter. Your distributor has a factory designed square to round converter transition. The model #'s of these kits are as



## WARNING

**DO NOT, UNDER ANY CIRCUMSTANCES, CONNECT RETURN DUCTWORK TO ANY OTHER HEAT PRODUCING DEVICES SUCH AS A FIREPLACE INSERT, STOVE, ETC. UNAUTHORIZED USE OF SUCH DEVICES MAY RESULT IN PROPERTY DAMAGE, FIRE, CARBON MONOXIDE POISONING, EXPLOSION, PERSONAL INJURY OR DEATH.**

follows: Small Chassis 25" SQRPCH101, Medium Chassis 27.5" SQRPCH102, Large and Extra Large Chassis 32.5:" and 36" SQRPCH103 (See Specification Sheets for Dimension details). The SQRPCH101 has 14" duct collar on supply and 16" duct collar (equivalent diameter, opening is oval) on the return. The SQRPCH102 and SQRPCH103 have 14" duct collar on supply and 18" duct collar (equivalent diameter, opening is oval) on the return. The collars are to be slipped into the openings, and the flanges bent around the converter.

The square to round converter is attached to the flanges of the square duct openings. The flexible duct is then clamped on to the collars. Once the duct is affixed to the unit, seal the collars and flanges with a proper waterproof sealant (See Figure 4).

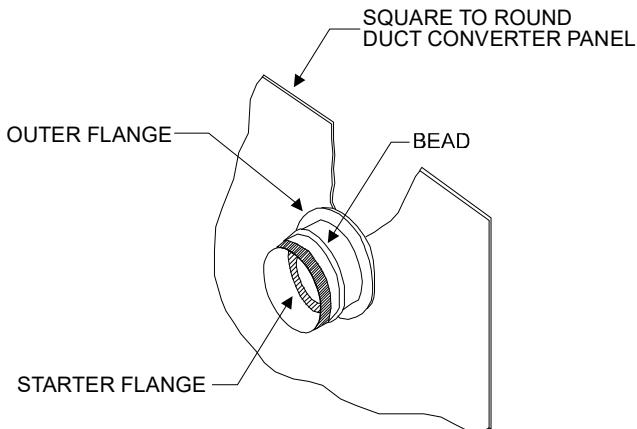


FIGURE 4

It is strongly encouraged to use appropriately sized ducts based upon the CFM for your application (unit's CFM). If duct sizing through industry manuals or air duct calculators require larger ducts than converter openings, run larger duct size up to unit converter openings and reduce with a reducer duct fitting or transition right at the unit.

#### PLENUM APPLICATION

A suitable plenum or square duct must be constructed. The duct cross-sectional area should be determined by industry duct sizing manuals or air duct calculators.

On ductwork exposed to outside air conditions of temperature and humidity, use an insulation with a good K factor, and a vapor barrier. Industry practices should be followed. Balancing dampers are recommended for each branch duct in the supply system. Ductwork should be properly supported from the unit. False ceilings or drop ceilings may be used as a return air plenum.

**NOTE: ADEQUATE RETURN GRILLS HAVE TO BE SUPPLIED FOR EACH ROOM FOR PROPER RETURN FOR THAT SPACE.**

**NOTE: PROPER SEALING OF ALL DUCT WORK AND AIR HANDLING COMPARTMENTS IS EXTREMELY IMPORTANT TO OVERALL UNIT EFFICIENCY.**

#### FILTERS

Filters are not provided with unit, and must be supplied

and installed in the return duct system by the installer. A field installed filter grille is recommended for easy and convenient access to the filters for periodic inspection and cleaning. Filters must have adequate face area for the rated quantity of the unit. See table below for recommended filter size.

Unit	2 Ton	2 1/2 Ton	3 Ton	3 1/2 Ton	5 Ton
Min. Filter Size	(1)20 x 20 x 1	(1)20 x 25 x 1	(1)25 x 25 x 1	(2)20 x 20 x 1	2(20) x 25 x 1

RECOMMENDED FILTER SIZES  
TABLE 1

## PIPING

#### CONDENSATE DRAIN

The condensate drain connection of the evaporator is a half coupling of  $\frac{3}{4}$ " N.P.T. A trap must be provided to have Proper condensate drainage.

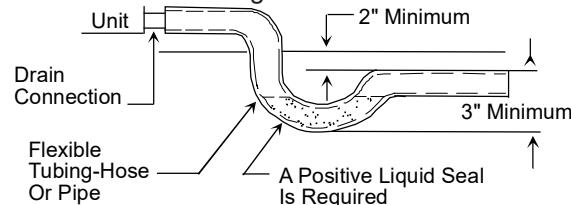


FIGURE 5

Install condensate drain trap as shown. Use  $\frac{3}{4}$ " drain connection size or larger. Do not operate without trap. Unit must be level or slightly inclined toward drain.

## ELECTRICAL WIRING



#### WARNING

**HIGH VOLTAGE -**  
PRIOR TO SERVICING THE UNIT OR REMOVING THE COMPRESSOR TERMINAL PLUG OR TERMINAL COVER, DISCONNECT ALL ELECTRICAL POWER FROM THE UNIT. MULTIPLE POWER SOURCES MAY BE PRESENT.



#### WARNING

**DO NOT OPERATE THE COMPRESSOR(S) WITHOUT THE TERMINAL PLUG FULLY ENGAGED OR THE TERMINAL COVER PROPERLY INSTALLED. GET AWAY IF UNUSUAL SOUNDS ARE HEARD FROM WITHIN THE COMPRESSOR. DISCONNECT ELECTRICAL POWER FROM THE UNIT.**



#### WARNING

**A TRIPPED CIRCUIT BREAKER OR BLOWN FUSE MAY INDICATE THAT AN ELECTRICAL PROBLEM EXISTS.**  
**DO NOT RESET A CIRCUIT BREAKER OR REPLACE FUSES WITHOUT FIRST PERFORMING THOROUGH ELECTRICAL TROUBLESHOOTING AND TESTING PROCEDURES.**



## WARNING

**HERMETIC COMPRESSOR ELECTRICAL TERMINAL VENTING CAN BE DANGEROUS. IN CERTAIN CIRCUMSTANCES, THE TERMINAL MAY BE EXPELLED, VENTING THE REFRIGERANT VAPOR AND COMPRESSOR OIL CONTAINED WITHIN THE COMPRESSOR HOUSING AND SYSTEM. BE ALERT FOR SOUNDS OF ARCING (SIZZLING, SPUTTERING, OR POPPING) INSIDE THE COMPRESSOR. IMMEDIATELY GET AWAY IF YOU HEAR THESE SOUNDS AND DISCONNECT ELECTRICAL POWER FROM THE UNIT.**

Never operate the compressor without the terminal cover secured and properly in place or without the electrical plug fully seated and engaged to the terminal posts.

If a terminal is damaged, electrically overloaded, or short circuits to ground, there is a remote possibility that the terminal can be suddenly expelled from the terminal housing thereby venting the refrigerant and compressor oil mixture to atmosphere.

This discharge can be ignited from electrical arcing, or other open sources of ignition, and can cause potentially severe or fatal injury. This event is known as "Terminal Venting."

To reduce the possibility of external ignition, all open flames or other heat sources must be extinguished, and all electrical power must be turned off prior to opening the terminal cover or removing the electrical plug and servicing the system.

Proper sealed system evacuation is required during servicing to maintain adequate internal system cleanliness while eliminating contaminates.

Be alert for sounds of arcing (sizzling, sputtering, or popping) inside the compressor. IMMEDIATELY GET AWAY from the unit if you hear these sounds and disconnect electrical power.

**NOTE: NEVER OPERATE THE COMPRESSOR IN A VACUUM OR IN REVERSE OPERATION.**



## CAUTION

**TO AVOID PROPERTY DAMAGE OR PERSONAL INJURY DUE TO FIRE, USE ONLY COPPER CONDUCTORS.**

All wiring should be made in accordance with the National Electrical Code. The local Power Company should be consulted to determine the availability of sufficient power to operate the unit. The voltage, frequency, and phase at the power supply should be checked to make sure it corresponds to the unit's RATED VOLTAGE REQUIREMENT.

Install a branch circuit fused disconnect near the unit, in accordance with the N.E.C. or local codes. Wire sizes and overcurrent protection should be determined from the unit nameplate ampacity and in accordance with Table 2 (page 13) or the N.E.C. Under no circumstances should wiring be sized smaller than is recommended by either of these two sources.

Fuses smaller than that recommended on the wiring diagrams could result in unnecessary fuse failure or service calls. The use of protective devices of larger size than indicated could result in extensive damage to the equipment. The manufacturer bears no responsibility for damage caused to equipment as result of the use of larger than is recommended size protective devices.


All units have undergone a run test prior to packaging for shipment. This equipment has been started at minimum rated voltage and checked for satisfactory operation. Do not attempt to operate this unit if the voltage is not within the minimum and maximum voltages shown on nameplate.

The units are designed for operation on 60 hertz current and at voltages as shown on the rating plate. All internal wiring in the unit is complete. It is necessary to bring in the power supply to the contactor as shown on the unit wiring diagram which is supplied with each unit. The low voltage wiring must be connected between the unit control panel and the room thermostat.

All exterior wiring must be within approved weatherproof conduit. The unit must be **permanently grounded** in accordance with local codes, or in absence of local codes, with N.E.C ANSI/ NFPA NO. 70 latest edition by using ground lug in the control box.

**DO NOT EXCEED THE MAXIMUM OVERCURRENT DEVICE SIZE SHOWN ON UNIT DATA PLATE.**


**Fuses or HACR type circuit breakers may be used where codes permit.**

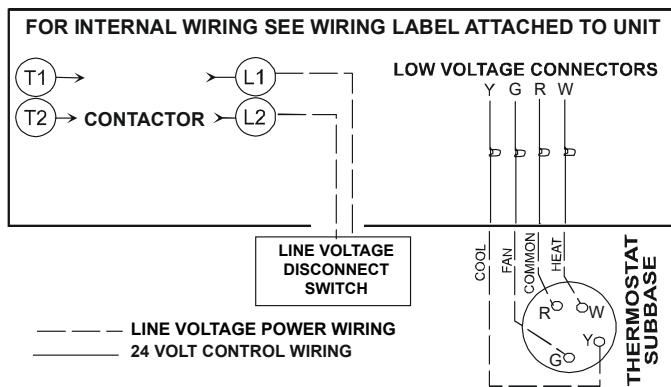

**FIGURE 6**

**NOTE: UNITS ARE EQUIPPED WITH A SINGLE POLE CONTACTOR. CAUTION MUST BE EXERCISED WHEN SERVICING AS ONLY ONE LEG OF THE POWER SUPPLY IS BROKEN WITH THE CONTACTOR.**

To wire the unit, make the following high and low voltage connections.

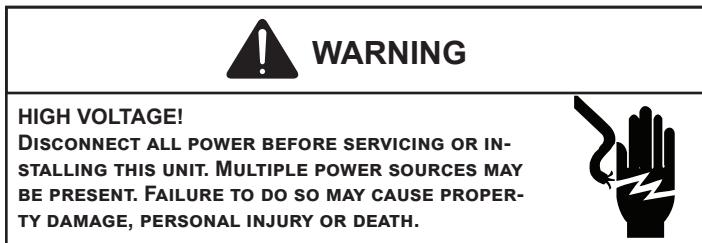

#### HIGH VOLTAGE WIRING:

Rated Voltage	Minimum Supply Voltage	Maximum Supply Voltage
208/240V	197	253

#### UNIT VOLTAGE

**NOTE: THE UNIT TRANSFORMER IS FACTORY CONNECTED FOR 240V OPERATION. IF THE UNIT IS TO OPERATE ON 208V, RECONNECT THE TRANSFORMER PRIMARY LEAD AS SHOWN ON THE UNIT WIRING DIAGRAM.**

Connect incoming power leads to terminals L1 & L2 on contactor in the electrical control section, using wire sizes specified in wiring table.

BRANCH CIRCUIT AMPACITY	15	20	25	30	35	40	45	50
SUPPLY WIRE LENGTH - FEET								
200	6	4	4	4	3	3	2	2
150	8	6	6	4	4	4	3	3
100	10	8	8	6	6	6	4	4
50	14	12	10	10	8	8	6	6

TABLE 2

#### LOW VOLTAGE WIRING:

Heat Pumps - Connect 24V wires from the thermostat to the corresponding wires in the control box using No. 18AWG as shown in TABLE 3.

TERMINAL	THERMOSTAT
Red	R (24V)
Green	G (Fan)
Orange	O (Rev. Valve)
White	W1 (Heat, 2nd)*
Brown	W2 (Heat 3rd)*
Yellow	Y (Cool)
C (Blue)	C (Common)

\*OPTIONAL FIELD INSTALLED HEAT CONNECTIONS  
TABLE 3


#### INTERNAL WIRING:

A diagram detailing the internal wiring of this unit is located on the electrical box cover. If any of the original wire supplied with the appliance must be replaced, the wire gauge and insulation must be the same as the original wiring.

1. For branch circuit wiring (main power supply to unit disconnect), the minimum wire size for the length of the run can be determined from Table 2 using the circuit ampacity found on the unit rating plate. From the unit disconnect to unit, the smallest wire size allowable in Table 2 may be used for the ampacity, **as the Disconnect must be in sight of the unit.**
2. Wire size based on 60°C rated wire insulation and 30°C Ambient Temperature (86°F).
3. For more than 3 conductors in a raceway or cable, see the N.E.C. for derating the ampacity of each conductor.

#### START-UP PROCEDURE AND CHECKLIST

Begin with power turned off at all disconnects.

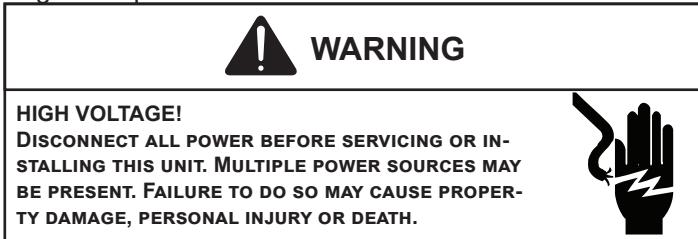

#### HEAT PUMP START-UP PROCEDURE

1. Check the cooling mode for the heat pump by placing the thermostat in COOL mode and the fan to AUTO. The reversing valve is energized when the thermostat is placed in the cooling position. A clicking sound should be noticeable from the reversing valve. By lowering the temperature setting to call for cooling, the contactor is energized. The compressor, blower and fan should then be running. After the cooling mode is checked out, turn the thermostat system switch to "OFF".
2. Turn the thermostat system switch to "HEAT" and fan switch to "AUTO".
3. Slowly raise the heating temperature setting. When the heating first stage makes contact, stop raising the temperature setting. The compressor, blower and fan should now be running with the reversing valve in the de-energized (heating) position. After giving the unit time to settle out, make sure the unit is supplying heated air.
4. If the outdoor ambient is above 80°F, the unit may trip on its high pressure cutout when in heating mode. The compressor should stop. The heating cycle must be thoroughly checked, so postpone the test to another day when conditions are more suitable but - DO NOT FAIL TO TEST.
5. If the outdoor ambient is low and the unit operates properly on the heating cycle, you may check the pressure cutout operation by blocking off the indoor return air until the unit trips. If unit operates properly in the heating cycle, raise the temperature setting until the heating second stage makes contact. Supplemental resistance heat, if installed should now come on. Make sure it operates properly.

**NOTE: 15.2 SEER2 MODELS HAVE TWO STAGES OF COMPRESSOR HEAT. DURING RESISTANCE HEAT TEST, INCREASE TEMPERATURE SETTING UNTIL THIRD STAGE HEAT IS ENERGIZED.**

**NOTE: IF OUTDOOR THERMOSTATS ARE INSTALLED THE OUTDOOR AMBIENT MUST BE BELOW THE SETPOINT OF THESE THERMOSTATS FOR THE HEATERS TO OPERATE. IT MAY BE NECESSARY TO JUMPER THESE THERMOSTATS TO CHECK HEATER OPERATION IF OUTDOOR AMBIENT IS MILD.**

6. For thermostats with emergency heat switch. The emergency heat switch is located at the bottom of the thermostat. Move the switch to emergency heat. The heat pump will stop, the blower will continue to run, all heaters will come on and the thermostat emergency heat light will come on.
7. If checking the unit in the wintertime, when the outdoor coil is cold enough to actuate the defrost control, observe at least one defrost cycle to make sure the unit defrosts completely.

#### **FINAL SYSTEM CHECKS**

Check to see if all supply and return air grilles are adjusted and the air distribution system is balanced for the best compromise between heating and cooling. Check for air leaks in the ductwork. See Sections on **Air Flow Measurement and Adjustment** and **Refrigerant Charge Check**. Make sure the unit is free of "rattles", and the tubing in the unit is free from excessive vibration. Also make sure tubes or lines are not rubbing against each other or sheet metal surfaces or edges. If so, correct the trouble. Set the thermostat at the appropriate setting for cooling and heating or automatic changeover for normal use. Be sure the Owner is instructed on the unit operation, filter, servicing, correct thermostat operation, etc. The foregoing "Start-up Procedure and Check List" is recommended to serve as an indication that the unit will operate normally.

## **COMPONENTS**

1. **Contactor** - This control is activated (closed) by the room thermostat for both heating and cooling. The contactor has a 24V coil and supplies power to the compressor and outdoor fan motor.
2. **Crankcase Heater** - This item is "ON" whenever power is supplied to the unit and the crankcase heater thermostat is closed. Crankcase heater thermostat closes at 67° and opens at 85°. It warms the compressor crankcase thereby preventing liquid migration and subsequent compressor damage. The insert type heater is self regulating. It is connected electrically to the contactor L1 and L2 terminals.
3. **Condenser Motor** - This item is activated by the contactor during heating and cooling, except during defrost and emergency heat operation.
4. **Compressor** - This item is activated by the contactor for heating and cooling, except during emergency heat. It is protected by an internal overload.

5. **Contactor Relay** - This control is activated by the thermostat (24V coil) and supplies power to the contactor.
6. **Defrost Control** - The Defrost control provides time/temperature initiation and termination of the defrost cycle. When a Defrost cycle is initiated, the defrost control shifts the reversing valve to "cooling" mode, stops the outdoor fan and brings on supplemental heat. Normally, a Defrost cycle will take only 2-3 minutes unless system is low on charge or outdoor conditions are severe (windy and cold). The defrost control also provides for a 3 minute off cycle compressor delay.
7. **Outdoor Thermostat** - These optional controls are used to prevent full electric heater operation at varying outdoor ambient (0° F-to 45° F). They are normally open above their set points and closed below to permit staging of indoor supplement heater operation. If the outdoor ambient temperature is below 0°F (-18°C) with 50% or higher RH, an outdoor thermostat (OT) must be installed and set at (0°) on the dial. Failure to comply with this requirement may result in damage to the product which may not be covered by the manufacturer's warranty.
8. **Reversing Valve Coil** - This coil is activated by the thermostat, in the cooling mode and during defrost. It positions the reversing valve pilot valve for cooling operation.
9. **Indoor Blower Motor Units with ECM Motors** - The ECM model indoor blower motor is activated by the room thermostat by COOLING/HEATING or fan ON position. The motor is energized by a 24 volt control signal (from thermostat Y, G or W) for ECM motors. ECM motors are constant torque motors with very low power consumption.  
(See **Air Flow Measurement and Adjustment** for speed adjustment instructions).
10. **Blower Interlock Relay** - This relay is used to energize the blower during the electric heat operation. Some room thermostats do not energize the motor during electric heat. This relay insures blower operation when the room thermostat energizes heat. This relay has a 240 volt coil and an 8 amp contact relay. This relay is energized by the electric heat kit sequencer.

## **EXPLANATION AND GUIDANCE (HEAT PUMP)**

The heat pump is a relatively simple device. It operates exactly as a Summer Air Conditioner unit when it is on the cooling cycle. Therefore, all the charts and data for service that apply to summer air conditioning apply to the heat pump when it is on the cooling cycle, and most apply on the heating cycle except that "condenser" becomes "evaporator", "evaporator" becomes "condenser", "cooling" becomes "heating".

When the heat pump is on the heating cycle, it is necessary to redirect the refrigerant flow through the refrigerant circuit external to the compressor. This is accomplished with a reversing valve. Thus, the hot discharge vapor from the compressor is directed to the indoor coil (evaporator on the cooling cycle) where the heat is removed, and the vapor condenses to liquid. It then goes through the expansion device to the outdoor coil (condenser on the cooling cycle) where the liquid is evaporated, and the vapor goes to the compressor.

When the solenoid valve coil is operated either from heating to cooling or vice versa, the piston in the reversing valve to the low pressure (high pressure) reverse positions in the reversing valve.


Figure 7 shows a schematic of a heat pump on the cooling cycle and the heating cycle. In addition to a reversing valve, a heat pump is equipped with an expansion device and check valve for the indoor coil, and similar equipment for the outdoor coil. It is also provided with a defrost control system. The expansion devices are flowrator distributors and perform the same function on the heating cycle as on the cooling cycle. The flowrator distributors also act as check valves to allow for the reverse of refrigerant flow.

When the heat pump is on the heating cycle, the outdoor coil is functioning as an evaporator. The temperature of the refrigerant in the outdoor coil must be below the temperature of the outdoor air in order to extract heat from the air. Thus, the greater the difference in the outdoor temperature and the outdoor coil temperature, the greater the heating capacity of the heat pump. This phenomenon is a characteristic of a heat pump. It is a good practice to provide supplementary heat for all heat pump installations in areas where the temperature drops below 45°F. It is also a good practice to provide sufficient supplementary heat to handle the entire heating requirement should there be a component failure of the heat pump, such as a compressor, or refrigerant leak, etc.


Since the temperature of the liquid refrigerant in the outdoor coil on the heating cycle is generally below freezing point, frost forms on the surfaces of the outdoor coil under certain weather conditions of temperature and relative humidity. Therefore, it is necessary to reverse the flow of the refrigerant to provide hot gas in the outdoor coil to melt the frost accumulation. This is accomplished by reversing the heat pump to the cooling cycle. At the same time, the outdoor fan stops to hasten the temperature rise of the outdoor coil and lessen the time required for defrosting. The indoor blower continues to run and the supplementary heaters are energized.

## SYSTEM OPERATION

Typical Heat Pump System in Cooling

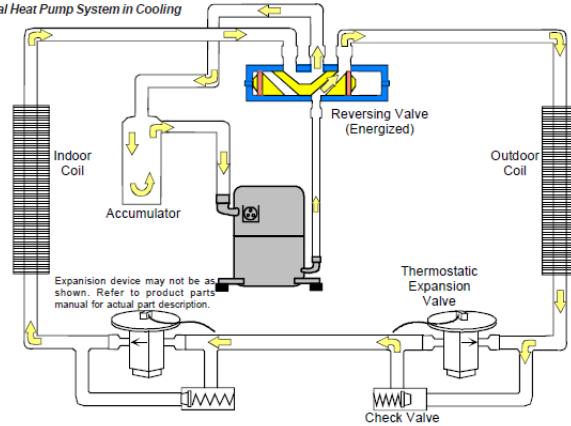

Typical Heat Pump System in Heating

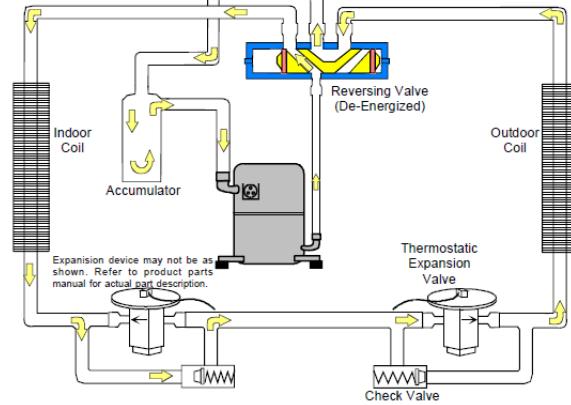

HEAT PUMP REFRIGERANT CIRCUIT  
FIGURE 7

## DEFROST CONTROL

During operation the power to the circuit board is controlled by a temperature sensor, which is clamped to a feeder tube entering the outdoor coil. Defrost timing periods of 30, 60 and 90 minutes may be selected by setting the circuit board jumper to 30, 60 and 90 respectively. Accumulation of time for the timing period selected starts when the sensor closes (approximately  $30 \pm 5^\circ\text{F}$ ), and when the wall thermostat calls for heat. At the end of the timing period, the unit's defrost cycle will be initiated provided the sensor remains closed. When the sensor opens (approximately  $60 \pm 5^\circ\text{F}$ ), the defrost cycle is terminated and the timing period is reset. If the defrost cycle is not terminated due to the sensor temperature, a twelve minute override interrupts the unit's defrost period.

## **SUGGESTED FIELD TESTING/ TROUBLESHOOTING**

## TESTING DEFROST CONTROL

**NOTE: PCBDM161 DEFROST CONTROLS HAVE A THREE (3) MINUTE COMPRESSOR OFF CYCLE DELAY.**

**NOTE: THE PCBDM161 DEFROST CONTROLS ARE SHIPPED FROM THE FACTORY WITH THE COMPRESSOR DELAY OPTION SELECTED. THIS WILL DE-ENERGIZE THE COMPRESSOR CONTACTOR FOR 30 SECONDS ON DEFROST INITIATION AND DEFROST TERMINATION. IF THE JUMPER IS SET TO NORMAL, THE COMPRESSOR WILL CONTINUE TO RUN DURING DEFROST INITIATION AND DEFROST TERMINATION. THE CONTROL WILL ALSO IGNORE THE LOW-PRESSURE SWITCH CONNECTED TO R-PS1 AND PS2 FOR 5 MINUTES UPON DEFROST INITIATION AND 5 MINUTES AFTER DEFROST TERMINATION.**


To check the defrost control for proper sequencing, proceed as follows: With power ON; unit not running.

1. Jumper defrost thermostat by placing a jumper wire across the terminals "DFT" and "R"/"R-DFT" at defrost control board.
2. Remove jumper from timer pins and jump across test pins on defrost control board.

**NOTE: Do NOT USE SCREWDRIVER OR FIELD SUPPLIED JUMPER TO TEST THE CONTROL.**

3. Set thermostat to call for heating. System should go into defrost within 23 seconds.
4. Immediately remove jumper from test pins.
5. Using VOM (VOLT OHM METER) check for voltage across terminals "C & O". Meter should read 24 volts.
6. Using VOM check for voltage across fan terminals DF1 and DF2 on the board. Should read line voltage (208-230 VAC) indicating the relay is open in the defrost mode.
7. Using VOM check for voltage across "W"/"W2" & "C" terminals on the board. Should read 24 volts.
8. If not as above, replace control board.
9. Set thermostat to off position and disconnect power. Remove jumper from defrost thermostat and replace timer jumper to the desired defrost time.

**NOTE: REMOVE JUMPER ACROSS DEFROST THERMOSTAT BEFORE RETURNING SYSTEM TO SERVICE.**

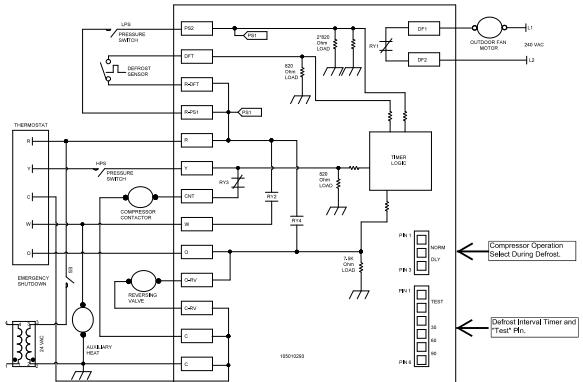

**PCBDM161 DEFROST CONTROL  
FIGURE 8**

## TESTING DEFROST THERMOSTAT

1. Install a thermocouple type temperature test lead on the tube adjacent to the defrost control. Insulate the lead point of contact.
2. Check the temperature at which the control closes its contacts by lowering the temperature of the control. It should close at approximately 30°F.
3. Check the temperature at which the control opens its contacts by raising the temperature of the control. It should open at approximately 60°F.
4. If not as above, replace control.

## AIR FLOW MEASUREMENT AND ADJUSTMENT


After reviewing section on DUCTING, proceed with airflow measurements and adjustments. Unit's blower curves (in Specification Sheets) are based on external static pressure (ESP, in. of W.C.). The duct openings on the unit are considered internal static pressure, so as long as ESP is maintained, the unit will deliver the proper air up to the maximum static pressure listed for the CFM required by the application (i.e. home, building, etc.).

In general 400 CFM per ton of cooling capacity is a rule of thumb. Some applications depending on the sensible and latent capacity requirements may need only 350 CFM or up to 425 CFM per ton. Check condition space load requirements (from load calculations) and equipment expanded ratings data to match CFM and capacity. After unit is set and ducted, verify ESP with a 1" inclined manometer with pitot tubes or a Magnahelic gauge and confirm CFM to blower curves in the specification sheets. All units have multiple speed blower motors. If factory selected speed is not utilized, the speed tap can be changed.

**NOTE: NEVER RUN CFM BELOW 300 CFM PER TON,  
EVAPORATOR FREEZING OR POOR UNIT PERFORMANCE IS  
POSSIBLE.**

## **TOTAL EXTERNAL STATIC PRESSURE**

1. Using a digital manometer measure the static pressure of the return duct at the inlet of the unit (Negative Pressure).

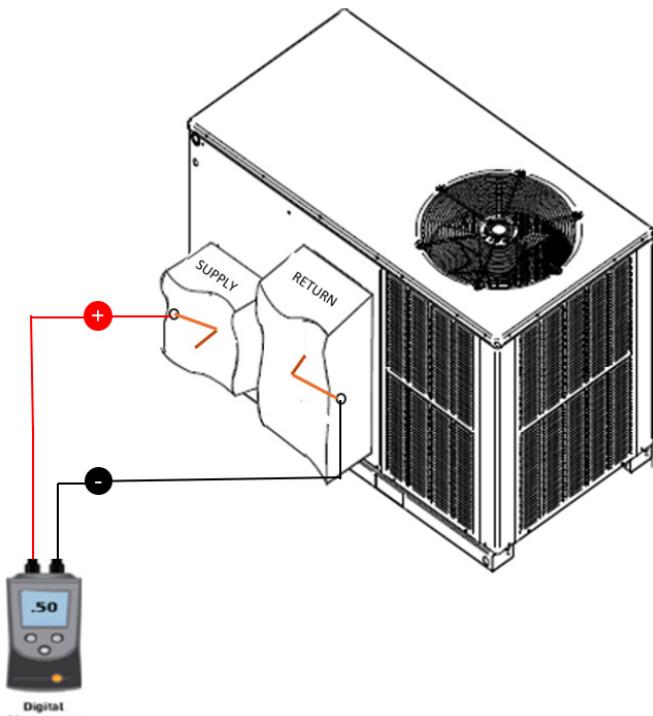

TOTAL EXTERNAL STATIC  
FIGURE 9

2. Measure the static pressure of the supply duct (Positive Pressure).
3. Add the two readings together.

**EXAMPLE:**

static reading from return duct = -.1" w.c.

static reading from supply duct = .3" w.c.

total external static pressure on this system = .4" w.c.

**NOTE: BOTH READINGS MAY BE TAKEN  
SIMULTANEOUSLY AND READ DIRECTLY ON THE  
MANOMETER IF SO DESIRED.**


4. Consult proper table for quantity of air.

If the external static pressure exceeds the maximum allowable static, check for closed dampers, dirty filter, undersized or poorly laid out ductwork.



**WARNING**

**HIGH VOLTAGE!**  
DISCONNECT ALL POWER BEFORE SERVICING OR INSTALLING THIS UNIT. MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.

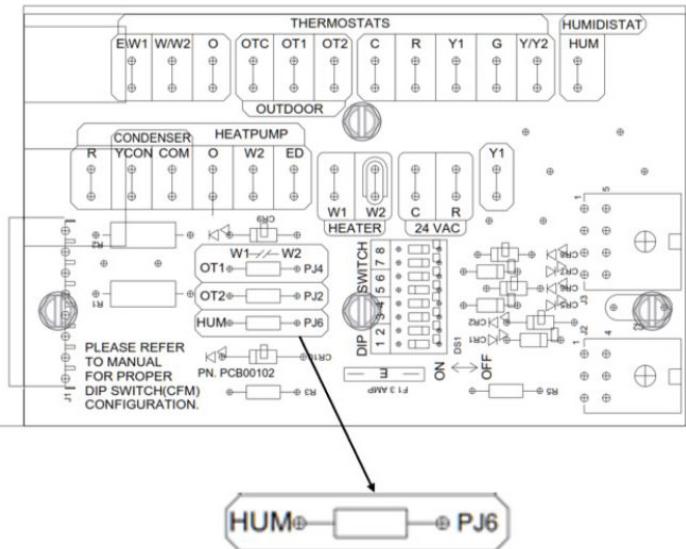

ECM BLOWER MOTOR INTERFACE MODULE  
FIGURE 10

## ADJUST SPEED TAP FOR INDOOR BLOWER MOTOR

### GPHH5\*\*31

**NOTE: GPHH5 MODELS ARE EQUIPPED WITH A MULTI-SPEED EEM MOTOR.**

### EEM MOTOR

The blower motor speed for the EEM motor is controlled by three 24V low voltage leads: green, yellow, and white. The green lead sets the speed for fan-only mode. The yellow lead sets the speed for cooling and heat pump heating mode (if applicable).

### EEM MOTOR SPEED ADJUSTMENT

The white lead sets the speed for electric heat mode (emergency heat and second stage heat, if applicable). The leads are factory connected as follows: Green to T1, Yellow to T2, and White to T3. T1 is the low speed setting and is dedicated to fan-only mode. T2 is medium speed cooling and T3 is medium speed heating. T4 is high speed cooling and T5 is high speed heating. To adjust the blower speed, move the yellow and/or white wires to T4 and T5.

**NOTE: IF MORE THAN ONE LEAD IS ENERGIZED AT THE SAME TIME, THE MOTOR WILL USE THE HIGHER SPEED SETTING.**

**NOTE: \*PHH UNITS ARE RATED FOR A MAXIMUM E.S.P. OF 0.8 EXCEPT WHEN USING A 20KW ELECTRIC HEATER. (THE MAXIMUM STATIC FOR 20 KW ELECTRIC HEAT IS 0.5 E.S.P.) WHEN THESE UNITS ARE INSTALLED IN THE 0.5 - 0.8**

**E.S.P. RANGE, THE WHITE LEAD (ELECTRIC HEAT) MUST BE MOVED TO T5 FOR PROPER OPERATION OF THE ELECTRIC HEATERS.**

#### **APHH5\*\*31**

**NOTE: APHH5 MODELS ARE EQUIPPED WITH A VARIABLE SPEED ECM MOTOR WITH A ELECTRONIC CONTROL BOARD.**

#### **ECM MOTOR**

The ECM control board should be set to the dip switch #4 in the "ON" position for single stage units - APHH5[24-30]31 and to the "OFF" position for the two-stage units APHH5[36-48]31. The remaining dip switches shall be verified and adjusted during installation to the tap settings as required. The ECM motor provides many features not available on the traditional PSC motor. These features include:

- Improved Efficiency
- Constant CFM
- Soft Start and Stop
- Improved Humidity Control

#### **ECM MOTOR SPEED ADJUSTMENT**

Each ECM blower motor has been preprogrammed for operation at 4 distinct air flow levels when operating in Cooling/Heat Pump mode or Electric Heat mode. These 4 distinct levels may also be adjusted slightly lower or higher if desired. The adjustment between levels and the trim adjustments are made by changing the dip switch(s) either to an "OFF" or "ON" position. See Blower Performance Data tables in rear of manual.

#### **DIP SWITCH FUNCTIONS**

The ECM motor has an electronic control that contains eight (8) 2-position dip switches. The function of these dip switches is shown in Table below. Dip switch 4 ON energizes Y1 signal to the ECM motor anytime Y/Y2 is energized. The indoor motor will not operate properly if switch is not set correctly for the model.

Switches	Function
1, 2	Electric Heat
3	N/A
4	Indoor Thermostat
5, 6	Cooling & Heat Pump CFM
7, 8	CFM Trim Adjust

**APHH5 DIP SWITCH FUNCTIONS**

#### **CFM DELIVERY AND ADJUSTMENTS**

See the Blower Performance Section and DIP switch setting section.

#### **THERMOSTAT "FAN ONLY" MODE**

##### **Alternate Fan Only Speed**

APHH5 models are equipped with ECM variable speed motors. Two FAN ONLY speeds are possible with these motors. To utilize the LOW HEAT blower speed for FAN ONLY operation, connect the wire from the thermostat's G terminal to the PCBEM103 VSTB control board's G terminal.

To utilize the alternate FAN ONLY speed, connect the wire from the thermostat's G terminal to the unstripped green wire in the control box. This alternate FAN ONLY blower speed is approximately 63% of the HIGH COOL speed.

#### **HUMIDITY CONTROL**

APHH5 Models are equipped with humidity control feature. When using a Humidistat (normally closed), cut jumper PJ6 on the PCBEM103 VSTB control board. The Humidistat will only affect both low stage and high stage cooling air flow by adjusting the Airflow to 85%.

#### **24 VOLT DEHUMIDISTAT WIRING**

The optional usage of a dehumidistat allows the unit's circulator blower to operate at a slightly lower speed (approximately 80% of desired cooling speed) during a combined thermostat call for cooling and dehumidistat call for dehumidification. This can be done through an independent dehumidistat. This lower blower speed enhances dehumidification of the conditioned air as it passes through the air conditioning coil. For proper function, a dehumidistat applied to this package unit must operate on 24 VAC and utilize a switch which opens on humidity rise. Refer to the unit wiring diagram for additional wiring details.


To install/connect a dehumidistat:

1. Turn OFF power to unit.
2. To enable the dehumidify function, locate the **PCBEM103 VSTB** in the unit's control box section. Locate the jumper label "**HUM**" "**PJ6**" on the interface module. Cut the jumper to enable dehumidification.
3. Secure the dehumidistat control wire (typically the white lead) to the gray, unstripped wire in the unit's control box.
4. Secure the dehumidistat low voltage power wire (typically the black lead) to the thermostat "R" (Red) wire in control box.
5. Secure the dehumidistat ground wire (typically the green lead) to the ground screw to the unit's sheet metal control box.

**NOTE: GROUND WIRE MAY NOT BE PRESENT ON ALL DEHUMIDISTATS.**

6. Turn ON power to unit. Once the HUM jumper is cut at the ECM motor interface module, the dehumidify function is enabled during a combination call for cooling (T-Stat) and dehumidification (DehumStat).

**(NOTE: REFER TO SPECIFIC DEHUMIDIFICATION STAT USED FOR WIRING DETAILS.)**

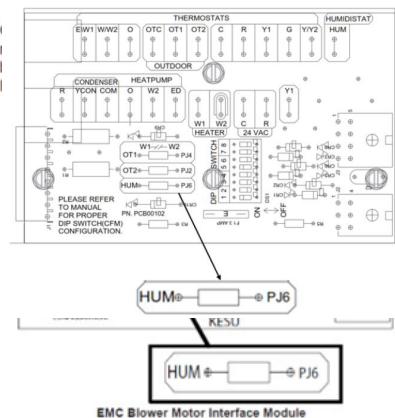

Refer to the unit wiring diagram for electrical connections. When installed, the unit must be electrically grounded in accordance with local codes or in the absence of local codes, with the National Electrical Code, ANSI/NFPA No. 70, and/or the CSA C22.1 Electrical Code. Ensure low voltage connections are waterproof.

FIGURE 11

## TWO-STAGE HEATING

When using staged electric heat, cut jumper PJ4 on the PCBEM103 VSTB control board.

## THERMOSTAT WIRING

Use thermostat wiring diagrams provided with the thermostat when making these connections.

## TXV SUPERHEAT ADJUSTMENT

**NOTE: SUPERHEAT ADJUSTMENTS SHOULD NOT BE MADE UNTIL INDOOR AMBIENT CONDITIONS HAVE STABILIZED AND CORRECT AIR FLOW (CFM) HAS BEEN VERIFIED. THIS COULD TAKE UP TO 24 HOURS DEPENDING ON INDOOR TEMPERATURE AND HUMIDITY. BEFORE CHECKING SUPERHEAT, RUN THE UNIT IN COOLING FOR 15-20 MINUTES OR UNTIL REFRIGERANT PRESSURE STABILIZES.**  
**NOTE: TXV ADJUSTMENTS SHOULD NOT EXCEED ONE TURN CLOCKWISE (CW) OR COUNTERCLOCKWISE (CCW) FROM THE FACTORY SETTING.**

Unscrew the cover from the expansion valve, locate the adjustment screw, and turn in clockwise (in) to increase superheat or counterclockwise (out) to decrease superheat. It is recommended to make small adjustments at a time, 1/8 - 1/4 turn increments. Replace adjustment cap. Wait a minimum of 15 minutes between adjustments to allow time for the TXV and pressure to stabilize.

## REFRIGERANT CHARGE CHECK

**NOTE: FOR OPTIMAL PERFORMANCE, FOLLOW CHARGING INSTRUCTIONS BELOW.**

## UNITS WITH TXV

### Single Stage Cooling Application:

Refer to the Unit Subcooling and Superheat table.

### Two Stage Cooling Application:

Run unit on Low Stage cooling and refer to Unit Subcooling

and Superheat table.

1. Purge gauge lines. Connect service gauge manifold to access fittings. Run system at least 15 minutes to allow pressure to stabilize.
2. Temporarily install thermometer on liquid (small) line near liquid line access fitting with adequate contact and insulation for best possible reading.
3. Check subcooling and superheat. The appropriate range for each model is available in the Unit Subcooling and Superheat table.
  - a. If subcooling and superheat are low, adjust TXV superheat, then check subcooling.

**NOTE: TO ADJUST SUPERHEAT, TURN THE VALVE STEM CLOCKWISE TO INCREASE AND COUNTERCLOCKWISE TO DECREASE. REFER TO TXV SUPERHEAT ADJUSTMENT REFERENCED IN THIS MANUAL.**

- a. If subcooling is low and superheat is high, add charge to raise subcooling then check superheat.
- c. If subcooling and superheat are high, adjust TXV superheat, then check subcooling.
- d. If subcooling is high and superheat is low, adjust TXV superheat and remove charge to lower the subcooling.

**NOTE: Do NOT ADJUST THE CHARGE BASED ON SUCTION PRESSURE UNLESS THERE IS A GROSS UNDERCHARGE. IF AN UNDERCHARGE IS SUSPECTED, RECOVER THE CHARGE, RE-EVACUATE THE SYSTEM, AND RECHARGE PER DATA PLATE. NO ADJUSTMENTS SHOULD BE MADE IF SUSPECTING A CHARGE ISSUE.**

4. Disconnect manifold set, installation is complete.

Design Superheat & Subcool					
Model	Superheat ±2°F	Subcooling ±1°F	Expansion Device	Cooling Stage	Outdoor Ambient (°F)
*PHH52431	10.0	7.0	TXV	HIGH	95
*PHH53031	12.5	7.5	TXV	HIGH	95
*PHH53631	12.0	9.5	TXV	Low	82
*PHH54231	15.0	6.0	TXV	Low	82
*PHH54831	14.5	8.5	TXV	Low	82
*PHH56031	15.5	11.0	TXV	Low	82

TABLE 5

## CHECKING SUPERHEAT

Superheat can be determined as follows:

1. Read suction pressure. Determine Saturated Suction Temperature from tables or pressure gauge saturated temperature scale.
2. Read suction line temperature.
3. Use the following formula:

**SUPERHEAT = SUCTION LINE TEMP. - SAT. SUCTION TEMP.**

**EXAMPLE:**

- a. Suction Pressure = 143
- b. Corresponding Temp. °F. = 50
- c. Thermometer on Suction Line = 59°F

To obtain the degrees temperature of superheat, subtract 50.0 from 59.0°F. The difference is 9° Superheat. The 9° Superheat would fall in the  $\pm$  range of allowable superheat.

#### CHECKING SUBCOOLING

**NOTE: UNITS WITH A TXV SHOULD BE CHARGED TO SUBCOOLING ONLY.**

#### SUBCOOLING FORMULA = SATURATED LIQUID LINE TEMPERATURE - LIQUID LINE TEMPERATURE

##### EXAMPLE:

- a. Liquid Line Pressure = 417 PSI
- b. Corresponding Temp. = 120°F
- c. Thermometer on Liquid line = 109°F.

To obtain the amount of subcooling, subtract 109°F from 120°F. The difference is 11° subcooling. See the specification sheet or technical information manual for the design subcooling range for your unit.

#### RDS FUNCTION

The mitigation system is a stationary device that detects the presence of R-32 refrigerant above 25% LFL using refrigerant sensors and then initiates mitigation actions. The mitigation system's primary function is to reduce the concentration of leaked R-32 refrigerant to prevent serious safety hazards. The mitigation actions are accomplished by halting HVAC operation and continuing indoor blower operation to provide airflow. Once refrigerant concentration reaches below a safe threshold, the unit will remain in mitigation mode for five minutes to evacuate any remaining R-32 refrigerant within the unit. Upon completion, the unit will resume its normal operation.

#### RDS OPERATION

The mitigation system is controlled by a refrigerant sensor(s), which is secured to a designated location(s) for active monitoring. If a leak is detected, HVAC operation is disabled and the indoor blower fan is activated, providing airflow at or above the minimum required airflow to evacuate excess concentration. If a Zone Control system is installed in the ductwork attached to this system, the Zone controller must be powered through a Daikin Zoning/Accessory PCB to ensure that the Zoning Dampers open during mitigation mode to provide ventilation throughout all ducting. If the unit is installed with a communicating thermostat, the thermostat will display relevant alerts/information concerning mitigation mode. Once sensors read concentration levels below a safe threshold, a five-minute timer will initiate. Once the time is over, the unit will resume its normal operation. If the sensors detect another concentration excess, the unit will go back into mitigation mode and will repeat the same process. **ELECTRIC HEAT**

## INSTALLATION

### HEATER KIT

**NOTE: A SEPARATE POWER SUPPLY IS REQUIRED FOR THE HKTPD HEATER KITS.**

Refer to the Heat Kit Electrical Data (Blower Only, Heat Mode) specification table below for heater kit match up and heater kit electrical data information. See specific kit installation manual for installation instructions.

This series of electric heat pump package equipment is designed to accept a field installed electric heat kit. The unit is equipped to easily install the HKTPD Series Electric Heat Kit. Full Installation Instructions are included in this kit. Please use this document for guidance in field equipping the package unit with electric heat.

Choose the heat kit that fits the application for the specific installation. Permanently mark the unit's nameplate with the model being installed. High and low voltage connections are detailed in the heat kit instructions.

Indoor Blower motor speed tap selection may need to be modified to accommodate normal continuous operation to prevent a nuisance trip. See following tables.

### APH5 MODELS

See "Blower Performance" section for Electric Heat DIP Switch settings.

Model and Heat Kit Usage	Circuit #1		Circuit #2		Single-Point Kit		Actual kW / BTU@ 240V
	MCA <sup>1</sup>	MOD <sup>2</sup>	MCA <sup>1</sup>	MOD <sup>2</sup>	MCA <sup>1</sup>	MOP <sup>2</sup>	
<b>*PHH52431**</b>	4.3	---	---	---	46	50	---
HKP-05C*	21 / 25	25 / 25	---	---	58	60	4.75 / 16,200
HKR-08C*	32 / 36	35 / 40	---	---	71	80	7 / 23,800
HKP-10C*	43 / 49	45 / 50	---	---	71	80	9.5 / 32,400
<b>*PHH53031**</b>	4.3	---	---	---	48	50	---
HKP-05C*	21 / 25	25 / 25	---	---	60	60	4.75 / 16,200
HKR-08C*	32 / 36	35 / 40	---	---	73	80	7 / 23,800
HKP-10C*	43 / 49	45 / 50	21 / 25	25 / 25	97	100	9.5 / 32,400
HKP-15C*	43 / 49	45 / 50	21 / 25	25 / 25	97	100	14.25 / 48,600
<b>*PHH53631**</b>	4.3	---	---	---	49.8	60	---
HKP-05C*	21 / 25	25 / 25	---	---	61.5	70	4.75 / 16,200
HKR-08C*	32 / 36	35 / 40	---	---	74.5	80	7 / 23,800
HKP-10C*	43 / 49	45 / 50	21 / 25	25 / 25	99.2	100	9.5 / 32,400
HKP-15C*	43 / 49	45 / 50	21 / 25	25 / 25	99.2	100	14.25 / 48,600
<b>*PHH54231**</b>	6.8	---	---	---	53	60	---
HKP-05C*	21 / 25	25 / 25	---	---	65	70	4.75 / 16,200
HKR-08C*	32 / 36	35 / 40	---	---	78	80	7 / 23,800
HKP-10C*	43 / 49	45 / 50	---	---	102	110	9.5 / 32,400
HKP-15C*	43 / 49	45 / 50	21 / 25	25 / 25	127	130	14.25 / 48,600
HKP-20C	43 / 49	45 / 50	43 / 49	45 / 50	127	130	19.0 / 64,800
<b>*PHH54831**</b>	6.8	---	---	---	59	70	---
HKP-05C*	21 / 25	25 / 25	---	---	71	80	4.75 / 16,200
HKR-08C*	32 / 36	35 / 40	---	---	84	90	7 / 23,800
HKP-10C*	43 / 49	45 / 50	21 / 25	25 / 25	109	110	9.5 / 32,400
HKP-15C*	43 / 49	45 / 50	43 / 49	45 / 50	134	130	14.25 / 48,600
HKP-20C	43 / 49	45 / 50	43 / 49	45 / 50	134	130	19.0 / 64,800
<b>*PHH56031**</b>	6.8	---	---	---	59	70	---
HKP-05C*	21 / 25	25 / 25	---	---	71	80	4.75 / 16,200
HKR-08C*	32 / 36	35 / 40	---	---	84	90	7 / 23,800
HKP-10C*	43 / 49	45 / 50	---	---	109	110	9.5 / 32,400
HKP-15C*	43 / 49	45 / 50	21 / 25	25 / 25	134	130	14.25 / 48,600
HKP-20C	43 / 49	45 / 50	43 / 49	45 / 50	134	130	19.0 / 64,800

<sup>1</sup> Minimum Circuit Ampacity @ 208 / 240 V

<sup>2</sup> Maximum Overcurrent Protection Device @ 208 / 240 V

\* Revision level that may or may not be designated

C Circuit breaker option

HKP-15C and HKP-20C replace HKR-15C and HKR-20C respectively to meet new UL1995 requirements.

### HEATER KIT ELECTRICAL DATA

Part Number	Max E.S.P.		Circuit 1		Circuit 2		Output @ 240V	
	IN. W.C	kPa	MCA	MOP	MCA	MOP	kW	BTU/hr
HKTPD051	0.8	0.19	28.74	25	-	-	4.75	16200
HKTPD081	0.8	0.19	36.46	40	-	-	7.00	23800
HKTPD101	0.8	0.19	49.48	50	-	-	9.50	32400
HKTPD151	0.8	0.19	49.48	50	24.74	25	14.25	48600
HKTPD191	0.5	0.12	49.48	50	36.46	25	19.00	64800
HKTPD201	0.8	0.19	49.48	50	36.46	25	19.00	64800

*PHH5					
Model	Heater Kit Part #				
	HKTPD051	HKTPD081	HKTPD101	HKTPD151	HKTPD201
*PHH52431	X	X	X		
*PHH53031	X	X	X	X	
*PHH53631	X	X	X	X	
*PHH54231	X	X	X	X	X
*PHH54831	X	X	X	X	X
*PHH56031	X	X	X	X	X

Speed Tap Selection for 0.0 - 0.5 E.S.P.					
Model	Heater Kit Part #				
	HKTPD051	HKTPD081	HKTPD101	HKTPD151	HKTPD201
GPHH52431	T3	T3	T3		
GPHH53031	T3	T3	T3	T5	
GPHH53631	T3	T3	T3	T5	
GPHH54231	T3	T3	T3	T3	T5
GPHH54831	T3	T3	T3	T3	T5
GPHH56031	T3	T3	T3	T3	T5

Speed Tap Selection for 0.5 - 0.8 E.S.P.					
Model	Heater Kit Part #				
	HKTPD051	HKTPD081	HKTPD101	HKTPD151	HKTPD201
GPHH52431	T5	T5	T5		
GPHH53031	T5	T5	T5	T5	
GPHH53631	T5	T5	T5	T5	
GPHH54231	T5	T5	T5	T5	T5
GPHH54831	T5	T5	T5	T5	T5
GPHH56031	T5	T5	T5	T5	T5

Minimum Airflow [scfm] for 0.0 - 0.5 E.S.P.					
Model	Heater Kit Part #				
	HKTPD051	HKTPD081	HKTPD101	HKTPD151	HKTPD201
APHH52431	735	735	735		
APHH53031	949	949	949	1095	
APHH53631	1092	1092	1092	1210	
APHH54231	1242	1242	1242	1242	1347
APHH54831	1531	1531	1531	1531	1618
APHH56031	1645	1645	1645	1645	1685

Minimum Airflow [scfm] for 0.5 - 0.8 E.S.P.					
Model	Heater Kit Part #				
	HKTPD051	HKTPD081	HKTPD101	HKTPD151	HKTPD201
APHH52431	865	865	865		
APHH53031	1095	1095	1095	1095	
APHH53631	1210	1210	1210	1210	
APHH54231	1347	1347	1347	1347	1347
APHH54831	1618	1618	1618	1618	1618
APHH56031	1685	1685	1685	1685	1685

## MAINTENANCE



### WARNING

#### HIGH VOLTAGE!

DISCONNECT ALL POWER BEFORE SERVICING OR INSTALLING THIS UNIT. MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY, OR DEATH.



The Self Contained Package Heat Pump should operate for many years without excessive service calls if the unit is installed properly. However it is recommended that the homeowner inspect the unit before a seasonal start up. The coils should be free of debris so adequate airflow is achieved. The return and supply registers should be free of any obstructions. The filters should be cleaned or replaced. These few steps will help to keep the product up time to a maximum. The Troubleshooting Chart in this manual should help in identifying problems if the unit does not operate properly.

#### RECOVERY

When removing refrigerant from a system, either for servicing or decommissioning, all refrigerants must be removed safely.

When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed. Ensure that the correct number of cylinders for holding the total system charge is available. All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i.e. special cylinders for the recovery of refrigerant). Cylinders shall be complete with pressure-relief valve and associated shut-off valves in good working order. Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs.

All recovery equipment must be suitable for the recovery of A2L refrigerant and in good working order. Ensure that you follow the manufacturer's instructions carefully. In addition, a set of calibrated weighing scales shall be available and in good working order. Hoses shall be complete with leak-free disconnect couplings and in good condition.

The recovered refrigerant shall be processed according to local legislation in the correct recovery cylinder, and the relevant waste transfer note arranged. Do not mix refrigerants in recovery units and especially not in cylinders.

If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant. The compressor body shall not be heated by an open flame or other ignition sources to accelerate this process. When oil is drained from a system, it shall be carried out safely.

#### CHARGING PROCEDURES

In addition to conventional charging procedures, the following requirements shall be followed.

- Ensure that contamination of different refrigerants does not occur when using charging equipment.
- Hoses or lines shall be as short as possible to minimize the amount of refrigerant contained in them.
- Cylinders shall be kept in an appropriate position according to the instructions.
- Ensure that the REFRIGERATING SYSTEM is grounded prior to charging the system with refrigerant.
- Extreme care shall be taken not to overfill the REFRIGERATING SYSTEM.

Prior to recharging the system, it shall be pressure-tested with the appropriate purging gas. The system shall be leak-tested on completion of charging but prior to commissioning. A follow up leak test shall be carried out prior to leaving the site.

**NOTE: "EARTHING" IS DEFINED AS ACHIEVING AN EARTH GROUND BY CONNECTING THE EQUIPMENT'S SUPPLIED GROUNDING LUG TO THE EARTH. THIS SHOULD BE VERIFIED BY A CERTIFIED TECHNICIAN.**

#### SERVICE

**NOTE: THE FOLLOWING INFORMATION IS FOR USE BY QUALIFIED SERVICE AGENCY ONLY: OTHERS SHOULD NOT ATTEMPT TO SERVICE THIS EQUIPMENT.**

***Common Causes of Unsatisfactory Operation of Heat Pump on the Heating Cycle.***

#### INADEQUATE AIR VOLUME THROUGH INDOOR COIL

When a heat pump is in the heating cycle, the indoor coil is functioning as a condenser. The return air filter must always be clean, and sufficient air volume must pass through the indoor coil to prevent excessive discharge pressure, and high pressure cut out.

#### OUTSIDE AIR INTO RETURN DUCT

Do not introduce cold outside air into the return duct of a heat pump installation. Do not allow air entering the indoor coil to drop below 65°F. Air below this temperature will cause low discharge pressure, thus low suction pressure, and excessive defrost cycling resulting in low heating output. It may also cause false defrosting.

#### UNDERCHARGE

An undercharged heat pump on the heating cycle will cause low discharge pressure resulting in low suction pressure and frost accumulation on the outdoor coil.

## POOR “TERMINATING” SENSOR CONTACT

The unit's defrost terminating sensor must make good thermal contact with the outdoor coil tubing. Poor contact may not terminate the unit's defrost cycle quickly enough to prevent the unit from cutting out on high discharge pressure.

## MALFUNCTIONING REVERSING VALVE

This may be due to:

1. Solenoid not energized - In order to determine if the solenoid is energized, touch the nut that holds the solenoid cover in place with a screwdriver. If the nut magnetically holds the screwdriver, the solenoid is energized and the unit is in the cooling cycle.
2. No voltage at unit's solenoid - Check unit voltage. If no voltage, check wiring circuit.
3. Valve will not shift:
  - a. Undercharged - check for leaks;
  - b. Valve Body Damaged - Replace valve;
  - c. Unit Properly Charged - If it is on the heating cycle, raise the discharge pressure by restricting airflow through the indoor coil. If the valve does not shift, tap it lightly on both ends with a screwdriver handle. Do Not Tap The Valve Body. If the unit is on the cooling cycle, raise the discharge pressure by restricting airflow through the outdoor coil. If the valve does not shift after the above attempts, cut the unit off and wait until the discharge and suction pressure equalize, and repeat above steps. If the valve does not shift, replace it.

## CLEAN OUTSIDE COIL (QUALIFIED SERVICER ONLY)

The coil with the outside air flowing over it should be inspected annually and cleaned as frequently as necessary to keep the finned areas free of lint, hair and debris.

## CLEAN INDOOR COIL (QUALIFIED SERVICER ONLY)

Before cleaning the indoor coil, A2L sensor must be removed from the unit to avoid damage and contamination. Air filters should also be removed before performing maintenance. The coil with the filtered air flowing over it should be inspected and cleaned as frequently as necessary to keep the finned areas free of debris. Coil cleaning should be performed, utilizing an approved cleaning method and cleaning agent, from inside-out (opposite operating airflow direction) to prevent damage to the tube, fin coil, and any other components. Prior to resuming unit operation, ensure to reinstall the A2L sensor.

## SERVICING MEASURES FOR THE REFRIGERANT DETECTION SYSTEM

Before servicing, identify the mode of operation of the system by reading the LED flashing pattern on the PCB within the control box and matching the LED flashing pattern with mode of operation in the REFRIGERANT DETECTION SYSTEM TROUBLESHOOTING GUIDE on the wiring diagram which is attached on the back side of the control box panel (RDS PCB Fault Code table). After identifying the mode of operation, take recommended actions as specified in the Recommended Actions for PCB LED Flashing Codes table.

REFRIGERANT SENSORS for REFRIGERANT DETECTION SYSTEMS shall only be replaced with sensors specified by the manufacturer. If REFRIGERANT SENSOR requires replacement, please replace with Sensata R32 Sensor PN#RGD-00ML12 (Daikin PN#SER2A08012).

LED STATUS	
MODE	LED FLASHING PATTERN
NORMAL OPERATION	SLOW LED FLASHING PATTERN (2 SECONDS ON 2 SECONDS OFF)
R-32 LEAK ALARM	FAST LED FLASHING PATTERN
DELAY MODE	LED WILL BE ON CONTINUOUSLY
SYSTEM VERIFICATION MODE	FAST LED FLASHING PATTERN
CONTROL BOARD INTERNAL FAULT	LED WILL FLASH 2 TIMES AND THEN BE OFF FOR 5 SECONDS
R32 SENSOR COMMUNICATION FAULT	LED WILL FLASH 3 TIMES AND THEN BE OFF FOR 5 SECONDS
R32 SENSOR FAULT	LED WILL FLASH 4 TIMES AND THEN BE OFF FOR 5 SECONDS

## RDS PCB FAULT CODE TABLE

# TROUBLESHOOTING CODE

LED TROUBLESHOOT STATUS				
MODE	DEFINITION	LED FLASHING PATTERN	RECOMMENDED ACTIONS	NOTES
1	Normal Operation	No faults to report.	Slow LED flashing pattern (2 seconds on and 2 seconds off)	No actions needed.
2	R32 Leak Alarm	R32 leak is currently being detected.	Fast LED Flashing Pattern	A technician will need to find the refrigerant leak and address it. Units shall be thawed before servicing.  In terms of the controls, no action is needed. The controls and sensor are working fine.
3	Delay Mode	After R32 leak or alarm has been cleared, the unit will remain in alarm mode for 5 minutes before returning to normal operation.	LED will be on continuously	No action needed - If the system was previously experiencing an actual R32 Leak, the refrigerant can no longer be detected by the sensor meaning it's either gone and the system won't work anymore or there was a false alarm. If the system was experiencing a Fault, the fault is gone and the system will return to normal operation in 5 min.  After any alarm or fault, it is required to remain in R32 mitigation mode for 5 minutes.
4	System Verification Mode	Manual test run by contractor to simulate R32 Leak Alarm (test will last for 5 minutes max).	Fast LED Flashing Pattern	No actions needed.  To enter system verification test mode, press the button on the control 2 times within 5 seconds. The control will enter a simulated R32 Leak Alarm state and remain in that mode for 5 minutes. After 5 minutes, the control will return to Normal Operation automatically. If the contractor wants to end the test early they need to press the button one time.
5	Control Board Internal Fault	Control board has detected an issue with the R32 detection system.	LED will flash 2 times and then be off for 5 seconds, before repeating pattern	1) Unplug and plug the R32 sensor back in. Cycle power to the system. 2) If the control is in "Normal Operation" or "Delay Mode", there is no more issue. If not, continue with diagnostics 3) Unplug R32 sensor and leave unplugged. Cycle power to the system 4) If the control still displays "Control Board Internal Fault" (2 flash pattern), replace the control. If the control now displays "R32 Sensor Communication Fault" (3 flash pattern), replace the sensor.  This error could indicate an on board relay failure or a short with the sensor communications. A sensor communication short could occur on the board itself or external to the board. These steps will determine if the error is on the board or external to the board.
6	R32 Sensor Communication Fault	Control board does not have communications with R32 sensor.	LED will flash 3 times and then be off for 5 seconds, before repeating pattern	1) Unplug and plug the R32 sensor back in. Cycle power to the system. 2) If control is in "Normal Operation" or "Delay Mode", there is no more issue. If not, continue with diagnostics. 3) If the control still displays "R32 Sensor Communication Fault" (3 flash pattern), replace both the sensor and the PCB.  If the control cannot talk to the sensor there could be a problem with the sensor, a problem with the sensor harness or a problem internal to the control. The field will not be able to measure anything to reliably fix this error assuming the connector is properly secured to the control. Replacing both is the only option.
7	R32 Sensor Fault	R32 Sensor has reported an internal issue.	LED will flash 4 times and then be off for 5 seconds, before repeating pattern	Replace R32 sensor.  Communications to the sensor are perfectly fine. The sensor itself is reporting an internal fault.

## RECOMMENDED ACTIONS FOR PCB LED FLASHING CODES TABLE

	warning; flammable materials
	service indicator; read technical manual
	operator's manual; operating instructions
	warning; low burning velocity material
	UN GHS flame symbol

## MARKING SYMBOL TABLE

## \*PHH5(24 - 60)31 BLOWER PERFORMANCE

Model	Speed	Volts	NEW E.S.P. (In. of H <sub>2</sub> O)								
			0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	
*PHH52431**	T1	230	CFM	914	866	818	770	722	674	626	578
			Watts	69	80	91	102	114	125	136	147
	T2 / T3	230	CFM	1092	1038	989	936	888	832	782	721
			Watts	130	141	151	160	172	181	189	201
	T4 / T5	230	CFM	1231	1179	1127	1074	1022	969	917	865
			Watts	168	180	193	205	218	230	243	255
*PHH53031**	T1	230	CFM	1005	961	918	874	831	787	744	700
			Watts	91	102	114	125	137	149	160	172
	T2 / T3	230	CFM	1286	1242	1196	1151	1105	1059	1009	948
			Watts	191	196	207	219	233	241	252	264
	T4 / T5	230	CFM	1462	1409	1357	1305	1252	1200	1147	1095
			Watts	241	253	266	278	291	303	315	328
*PHH53631**	T1	230	CFM	855	802	750	697	644	591	824	770
			Watts	76	88	100	112	123	133	206	219
	T2 / T3	230	CFM	1405	1365	1325	1284	1242	1199	1156	1112
			Watts	224	243	262	280	291	302	312	321
	T4 / T5	230	CFM	1577	1525	1472	1420	1367	1315	1263	1210
			Watts	277	290	302	314	327	339	352	364
*PHH54231**	T1	230	CFM	1101	1052	1015	970	928	886	848	809
			Watts	132	144	158	168	179	190	201	211
	T2 / T3	230	CFM	1536	1484	1440	1403	1363	1336	1294	1230
			Watts	274	285	280	311	327	337	346	359
	T4 / T5	230	CFM	1645	1602	1560	1517	1475	1433	1390	1347
			Watts	285	297	309	321	333	346	358	370
*PHH54831**	T1	230	CFM	1143	1088	1050	1011	962	928	905	855
			Watts	139	149	164	178	186	196	208	218
	T2 / T3	230	CFM	1828	1775	1722	1677	1635	1593	1548	1498
			Watts	403	416	428	439	452	465	477	484
	T4 / T5	230	CFM	2002	1935	1885	1827	1767	1732	1669	1618
			Watts	498	521	516	534	551	567	571	574
*PHH56031**	T1	230	CFM	1412	1353	1300	1256	1214	1170	1123	1077
			Watts	211	220	228	236	248	258	269	281
	T2 / T3	230	CFM	1965	1908	1857	1812	1770	1731	1695	1658
			Watts	476	489	500	509	520	530	541	551
	T4 / T5	230	CFM	2049	1948	1914	1851	1811	1770	1738	1685
			Watts	506	522	528	548	544	548	556	568

### NOTES:

1. Data shown is dry coil. Wet coil pressure drop is approx.
2. Data shown does not include filter pressure drop, approx. 0.08" H<sub>2</sub>O.
3. Reduce airflow by 2% for 208V operation.
4. For high static applications, see blower performance table above for selecting appropriate speed tap.

## \*PHH5[24-60]31 BLOWER PERFORMANCE

*PHH52431					
Cooling/HP Speed	Adjust Tap	CFM*	Electric Heat	Adjust Tap	CFM*
A	Minus	698	A	Minus	698
	Normal	775		Normal	775
	Plus	853		Plus	853
B	Minus	788	B	Minus	788
	Normal**	875		Normal	875
	Plus	963		Plus	963
C	Minus	878	C	Minus	878
	Normal	975		Normal	975
	Plus	1073		Plus	1073
D	Minus	968	D	Minus	968
	Normal	1075		Normal	1075
	Plus	1183		Plus	1183

\* - @0.1 - 0.8 ESP

\*\* - Rated Cooling Speed

The Electric Heat airflow should not be less than the Cooling airflow selected during install.

*PHH53031					
Cooling/HP	Adjust Tap	CFM*	Electric Heat	Adjust Tap	CFM*
A	Minus	855	A	Minus	855
	Normal	950		Normal	950
	Plus	1045		Plus	1045
B	Minus	945	B	Minus	945
	Normal**	1050		Normal	1050
	Plus	1155		Plus	1155
C	Minus	1035	C	Minus	1035
	Normal	1150		Normal	1150
	Plus	1265		Plus	1265
D	Minus	1125	D	Minus	1125
	Normal	1250		Normal	1250
	Plus	1375		Plus	1375

\* - @0.1 - 0.8 ESP

\*\* - Rated Cooling Speed

The Electric Heat airflow should not be less than the Cooling airflow selected during install.

### \*PHH53631

Cooling/HP Speed	Adjust Tap	CFM*	Electric Heat	Adjust Tap	CFM*
A	Minus	990	A	Minus	990
	Normal	1100		Normal	1100
	Plus	1210		Plus	1210
B	Minus	1080	B	Minus	1080
	Normal**	1200		Normal	1200
	Plus	1320		Plus	1320
C	Minus	1170	C	Minus	1170
	Normal	1300		Normal	1300
	Plus	1430		Plus	1430
D	Minus	1260	D	Minus	1260
	Normal	1400		Normal	1400
	Plus	1540		Plus	1540

\* - @0.1 - 0.8 ESP

\*\* - Rated Cooling Speed

The Electric Heat airflow should not be less than the Cooling airflow selected during install.

### \*PHH54831

Cooling/HP Speed	Adjust Tap	CFM*	Electric Heat	Adjust Tap	CFM*
A	Minus	1350	A	Minus	1350
	Normal	1500		Normal	1500
	Plus	1650		Plus	1650
B	Minus	1440	B	Minus	1440
	Normal**	1600		Normal	1600
	Plus	1760		Plus	1760
C	Minus	1530	C	Minus	1530
	Normal	1700		Normal	1700
	Plus	1870		Plus	1870
D	Minus	1620	D	Minus	1620
	Normal	1800		Normal	1800
	Plus	1980		Plus	1980

\* - @0.1 - 0.8 ESP

\*\* - Rated Cooling Speed

The Electric Heat airflow should not be less than the Cooling airflow selected during install.

### \*PHH54231

Cooling/HP Speed	Adjust Tap	CFM*	Electric Heat	Adjust Tap	CFM*
A	Minus	1080	A	Minus	1080
	Normal	1200		Normal	1200
	Plus	1320		Plus	1320
B	Minus	1170	B	Minus	1170
	Normal**	1300		Normal	1300
	Plus	1430		Plus	1430
C	Minus	1260	C	Minus	1260
	Normal	1400		Normal	1400
	Plus	1540		Plus	1540
D	Minus	1350	D	Minus	1350
	Normal	1500		Normal	1500
	Plus	1650		Plus	1650

\* - @0.1 - 0.8 ESP

\*\* - Rated Cooling Speed

The Electric Heat airflow should not be less than the Cooling airflow selected during install.

### \*PHH56031

Cooling/HP Speed	Adjust Tap	CFM*	Electric Heat	Adjust Tap	CFM*
A	Minus	1485	A	Minus	1485
	Normal	1650		Normal	1650
	Plus	1815		Plus	1815
B	Minus	1530	B	Minus	1530
	Normal**	1700		Normal	1700
	Plus	1870		Plus	1870
C	Minus	1575	C	Minus	1575
	Normal	1750		Normal	1750
	Plus	1925		Plus	1925
D	Minus	1620	D	Minus	1620
	Normal	1800		Normal	1800
	Plus	1980		Plus	1980

\* - @0.1 - 0.8 ESP

\*\* - Rated Cooling Speed

The Electric Heat airflow should not be less than the Cooling airflow selected during install.


## \*PHH5 DIP SWITCH FUNCTION SELECTION

Electric Heat DIP Switch Settings		
Speed Tap	Switch 1	Switch 2
A	OFF	OFF
B	ON	OFF
C	OFF	ON
D	ON	ON

Cooling/HP DIP Switch Settings		
Speed Tap	Switch 5	Switch 6
A	OFF	OFF
B	ON	OFF
C	OFF	ON
D	ON	ON

DIP Switch Settings for Single & Two-Stage Thermostat		
Thermostat	Switch 3	Switch 4
Single-Stage	N/A	ON
Two-Stage	N/A	OFF

Speed Tap Adjustment Through DIP Switches		
CFM	Switch 7	Switch 8
Plus 10%	ON	OFF
Normal	OFF	OFF
Minus 10%	OFF	ON

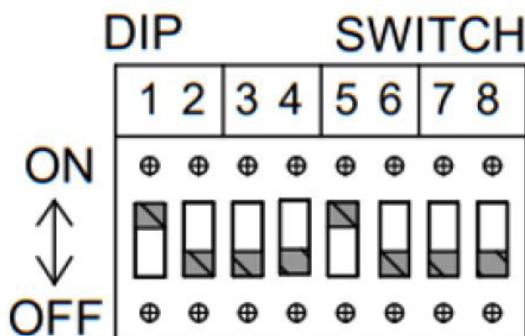


### DEFAULT DIP SWITCH SETTING

Switches	Function
1, 2	Electric Heat
3	N/A
4	Indoor Thermostat
5, 6	Cooling & Heat Pump CFM
7, 8	CFM Trim Adjust





DIP Switch Functions

## TROUBLESHOOTING CHART

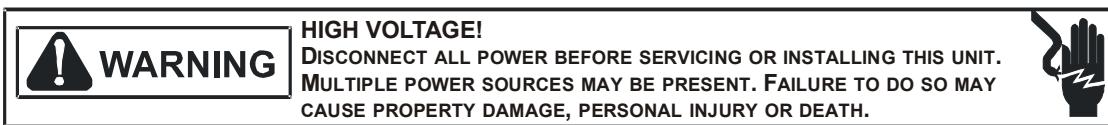

SYMPTOM	POSSIBLE CAUSE	REMEDY
High head - low suction	a. Restriction in liquid line or flowrator	a. Remove or replace with proper size flowrator.
High head - high or normal suction	a. Dirty condenser coil b. Overcharged c. Condenser fan not running	a. Clean coil b. Correct System charge c. Repair or Replace
Low head - high suction	a. Incorrect flowrator b. Defective compressor valves c. Flowrator not seating properly	a. Replace with correct flowrator b. Replace compressor c. Check for debris under flowrator or deformed flowrator. Remove debris or replace flowrator.
Unit will not run	a. Power off or loose electrical connection b. Thermostat out of calibration set too c. Defective contactor  d. Blown fuses or tripped breaker  e. Transformer defective f. High or low pressure control open (Optional)  g. Compressor overload contacts open	a. Check for unit voltage at contactor in unit  b. Reset c. Check for 24 volts at contactor coil replace if contacts are open d. Replace fuse or reset breaker Check wiring - replace transformer  f. Reset high pressure control or check unit charge  High pressure control opens at 610 psig Low pressure control opens at 22 psig g. Replace compressor  NOTE: Wait at least 2 hours for overload to reset
Condenser fan runs, compressor doesn't	a. Loose connection b. Compressor stuck, grounded or open winding open internal overload c. Low voltage connection d. Capacitor weak, open, or shorted	a. Check for unit voltage at compressor check & tighten all connections b. Wait at least 2 hours for overload to reset If still open, replace the compressor. c. At compressor terminals, voltage must be within 10 % of nameplate volts when unit is operating d. Check capacitor. If defective, replace.
Low suction - cool compressor Iced evaporator coil	a. Low indoor airflow	a. Increase speed of blower or reduce restriction - replace air filters
Compressor short cycles	a. Defective overload protector b. Unit cycling on low pressure control c. High pressure switch cuts out	a. Replace - check for correct voltage b. Check refrigerant charge and / or airflow c. Check airflow (Indoor & outdoor)
Registers sweat	a. Low airflow	a. Increase speed of blower or reduce restriction - replace air filters
High suction pressure	a. Excessive load b. Defective compressor c. Reversing valve not seating properly.	a. Recheck load calculation b. Replace c. Replace
Insufficient cooling	a. Improperly sized unit b. Improper airflow  c. Incorrect refrigerant charge.  d. Incorrect voltage	a. Recalculate load b. Check - should be approximately 400 CFM per ton  c. Charge per procedure attached to unit service panel d. At compressor terminals, voltage must be within 10% of nameplate volts when unit is operating
Evaporator coil freezing or frosting	a. Low airflow  b. Low refrigerant charge  c. Operating unit in cooling mode below 65°F outdoor temperature	a. Check - should be approximately 400 CFM per ton, dirty air filters, all duct outlets open b. Properly charge unit c. Install or check low ambient control, should be open below 65°F outdoor temperature


## UNIT DIMENSIONS

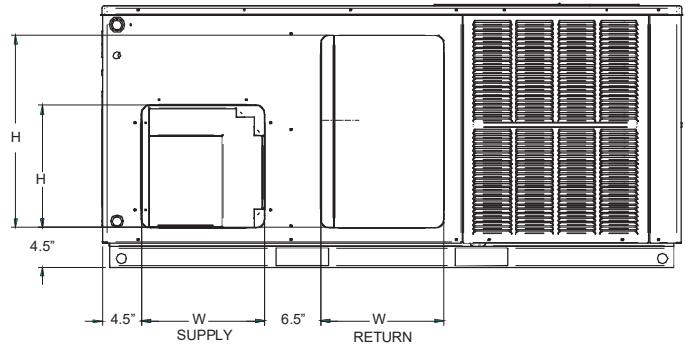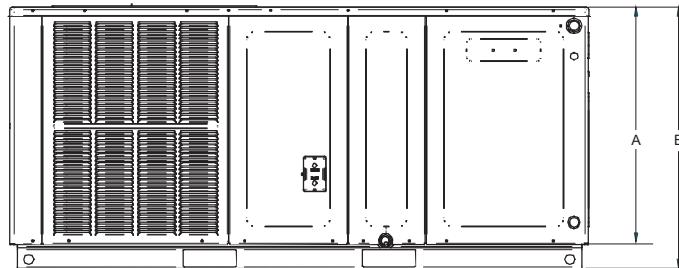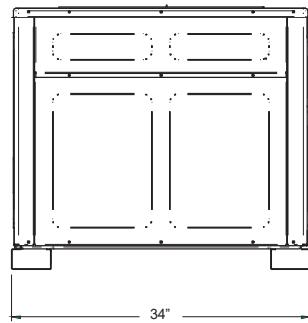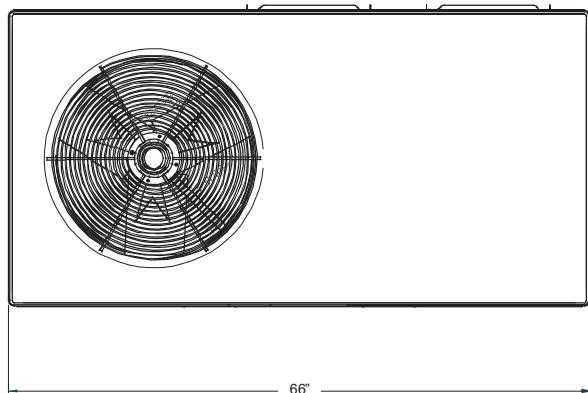


BACK VIEW  
(DUCT OPENINGS)

Model	Unit Dimensions				Chassis Size	
			Height			
	W	D	A	B		
*PHH52431**	66	34	27½	30	Small	
*PHH53031**	66	34	27½	30	Small	
*PHH53631**	66	34	32½	35	Medium	
*PHH54231**	66	34	32½	35	Medium	
*PHH54831**	66	34	32½	35	Medium	
*PHH56031**	66	34	36	38½	Large	

Model	Duct Openings			
	Supply		Return	
	W	H	W	H
*PHH52431**	14	14	14	22
*PHH53031**	14	14	14	22
*PHH53631**	14	14	14	24
*PHH54231**	14	14	14	24
*PHH54831**	14	14	14	24
*PHH56031**	14	14	14	24

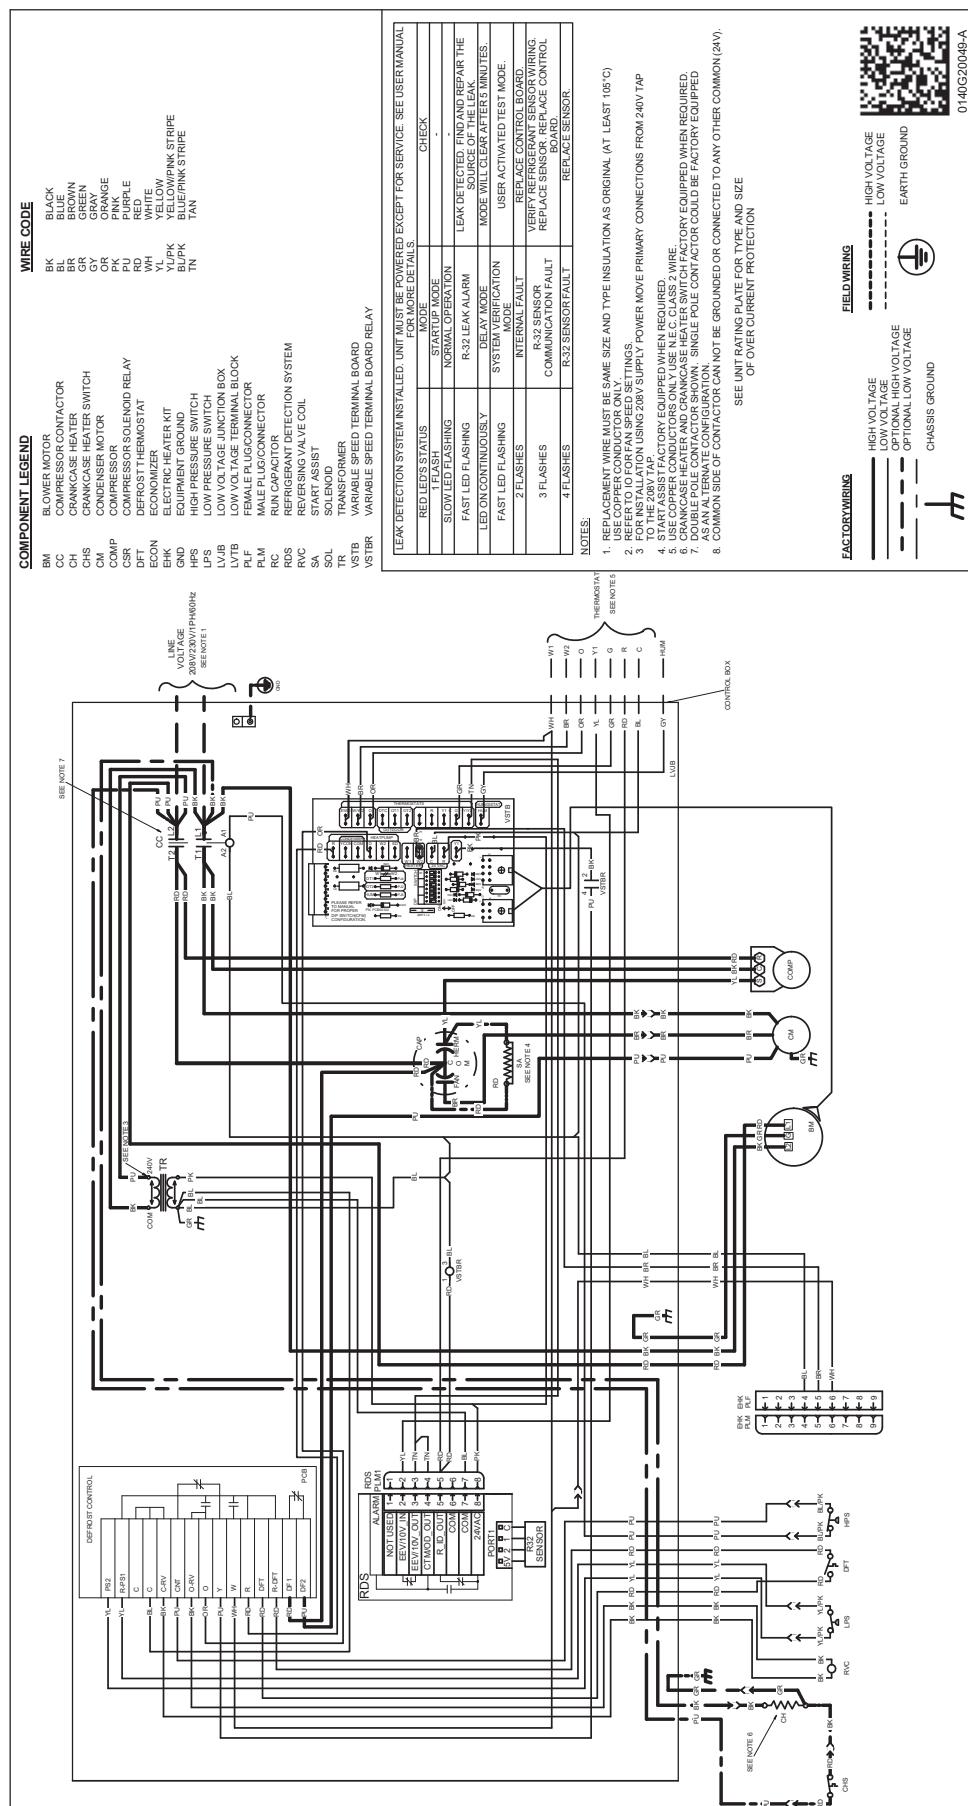


Wiring is subject to change. Always refer to the wiring diagram on the unit for the most up-to-date wiring.

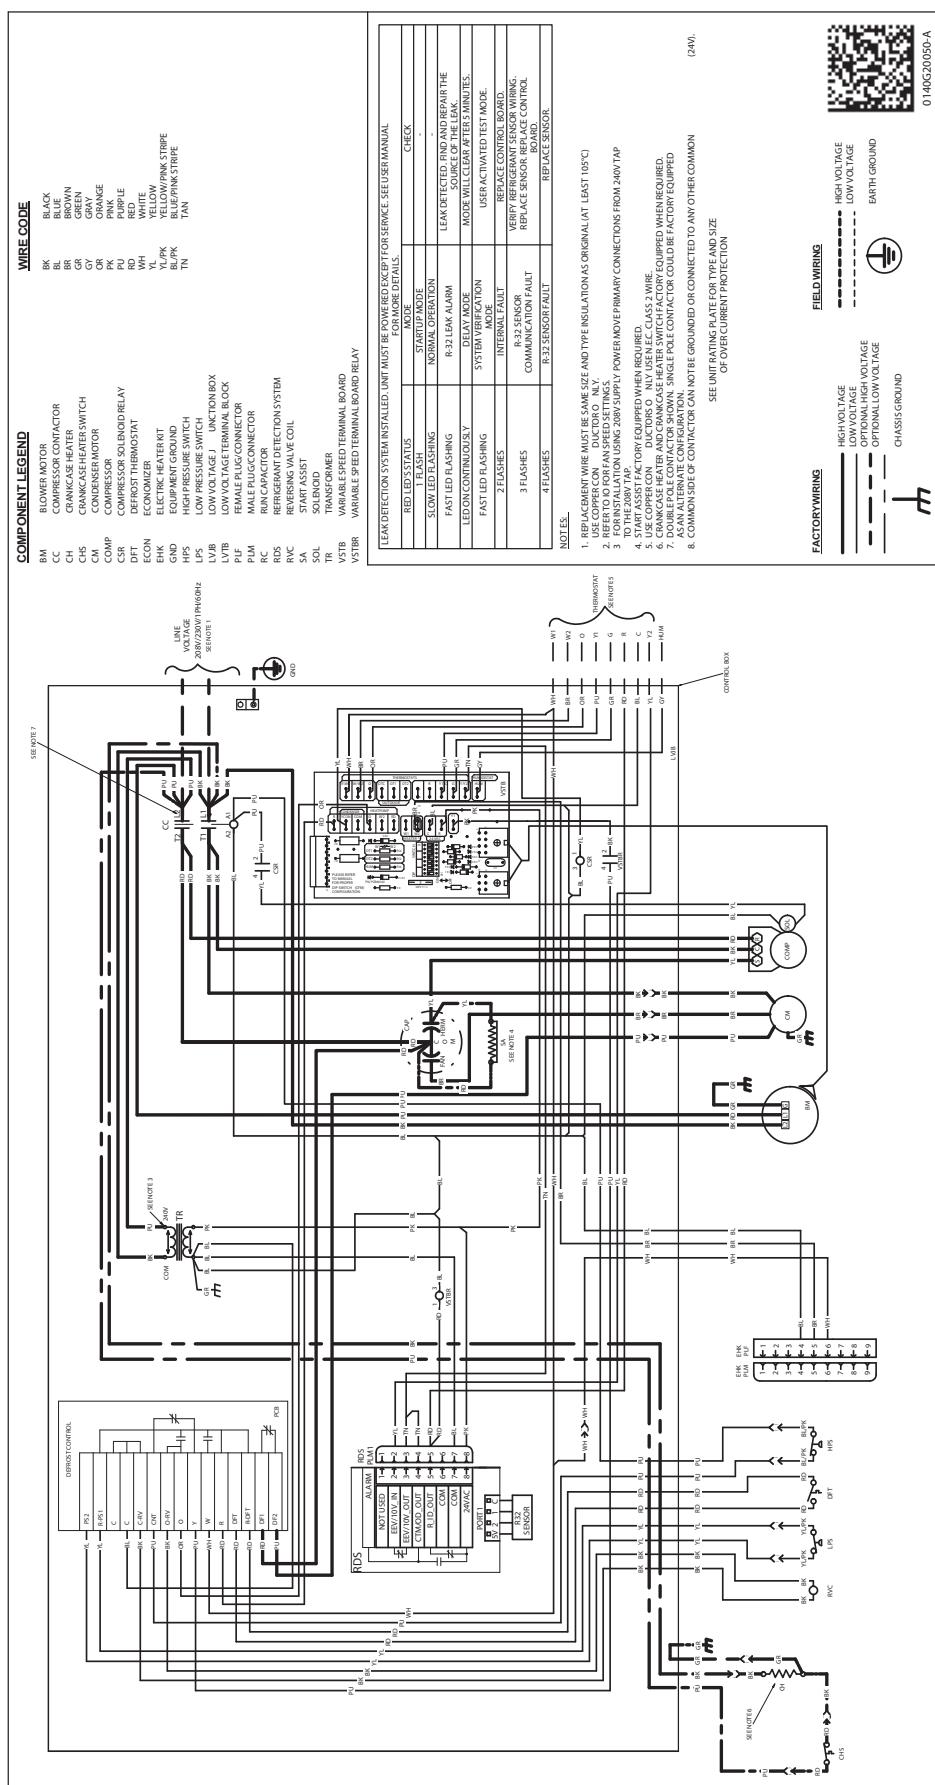

Wiring is subject to change. Always refer to the wiring diagram on the unit for the most up-to-date wiring.

## WIRING DIAGRAM


**GPHH5[24-30]31\***

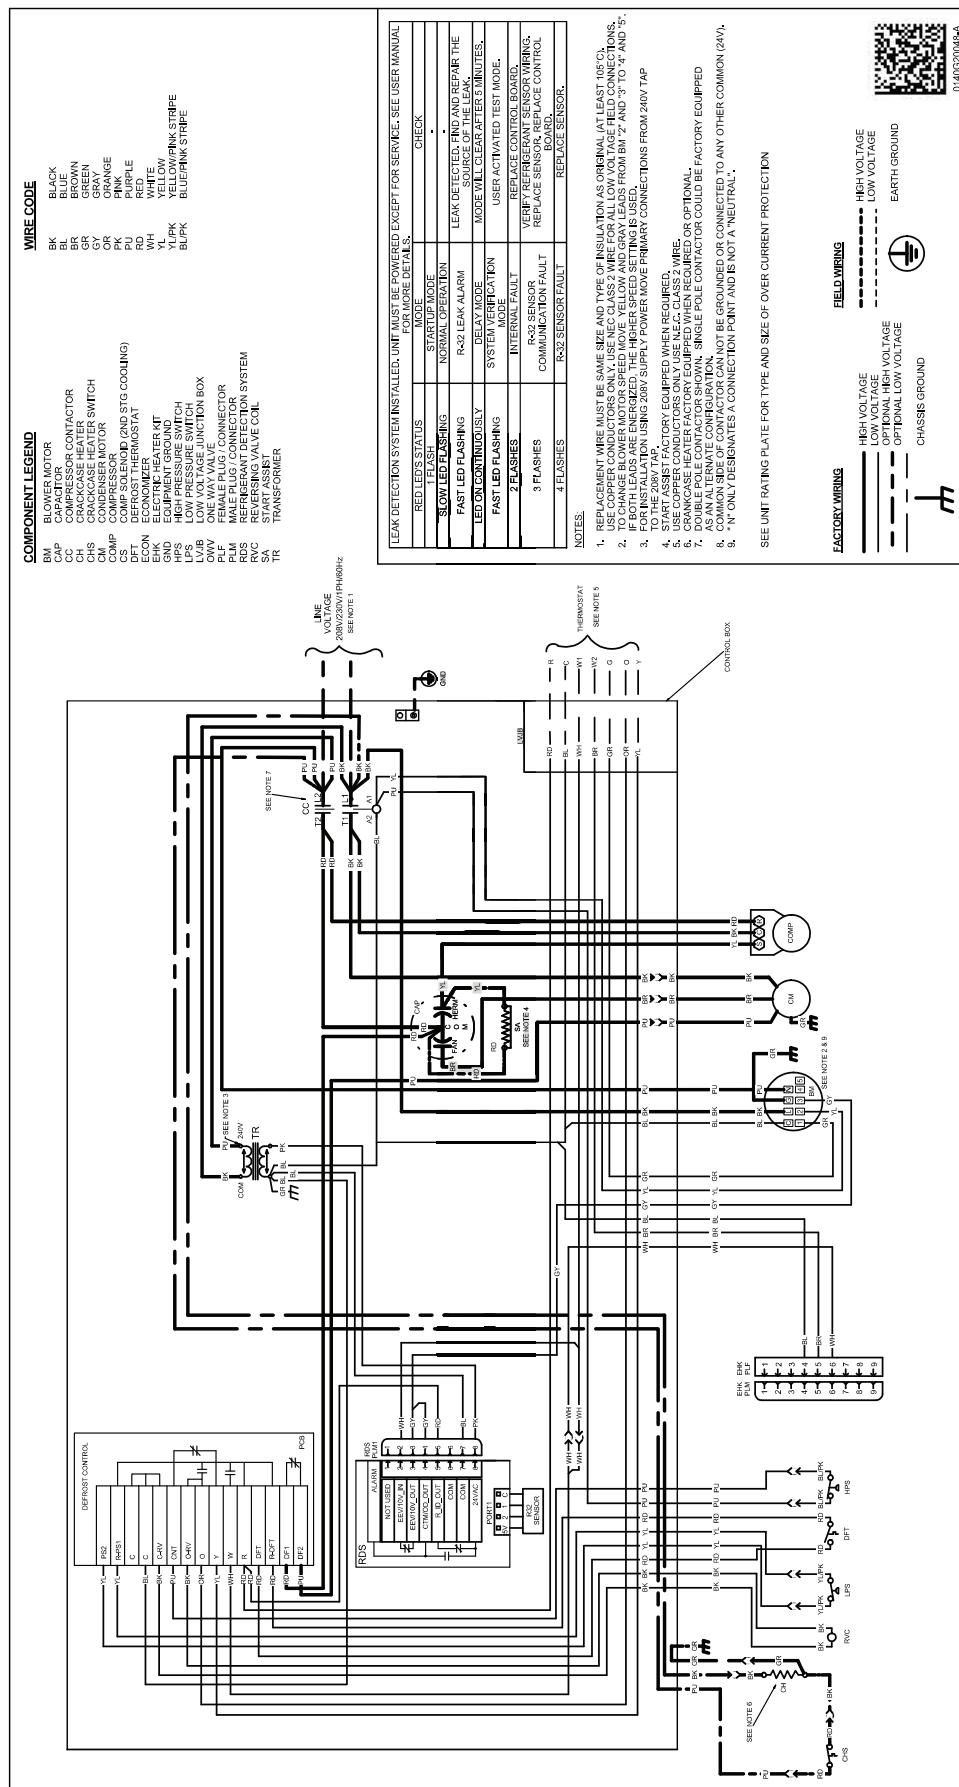

Wiring is subject to change. Always refer to the wiring diagram on the unit for the most up-to-date wiring.

## WIRING DIAGRAM

**GPHH5[36-60]31\***

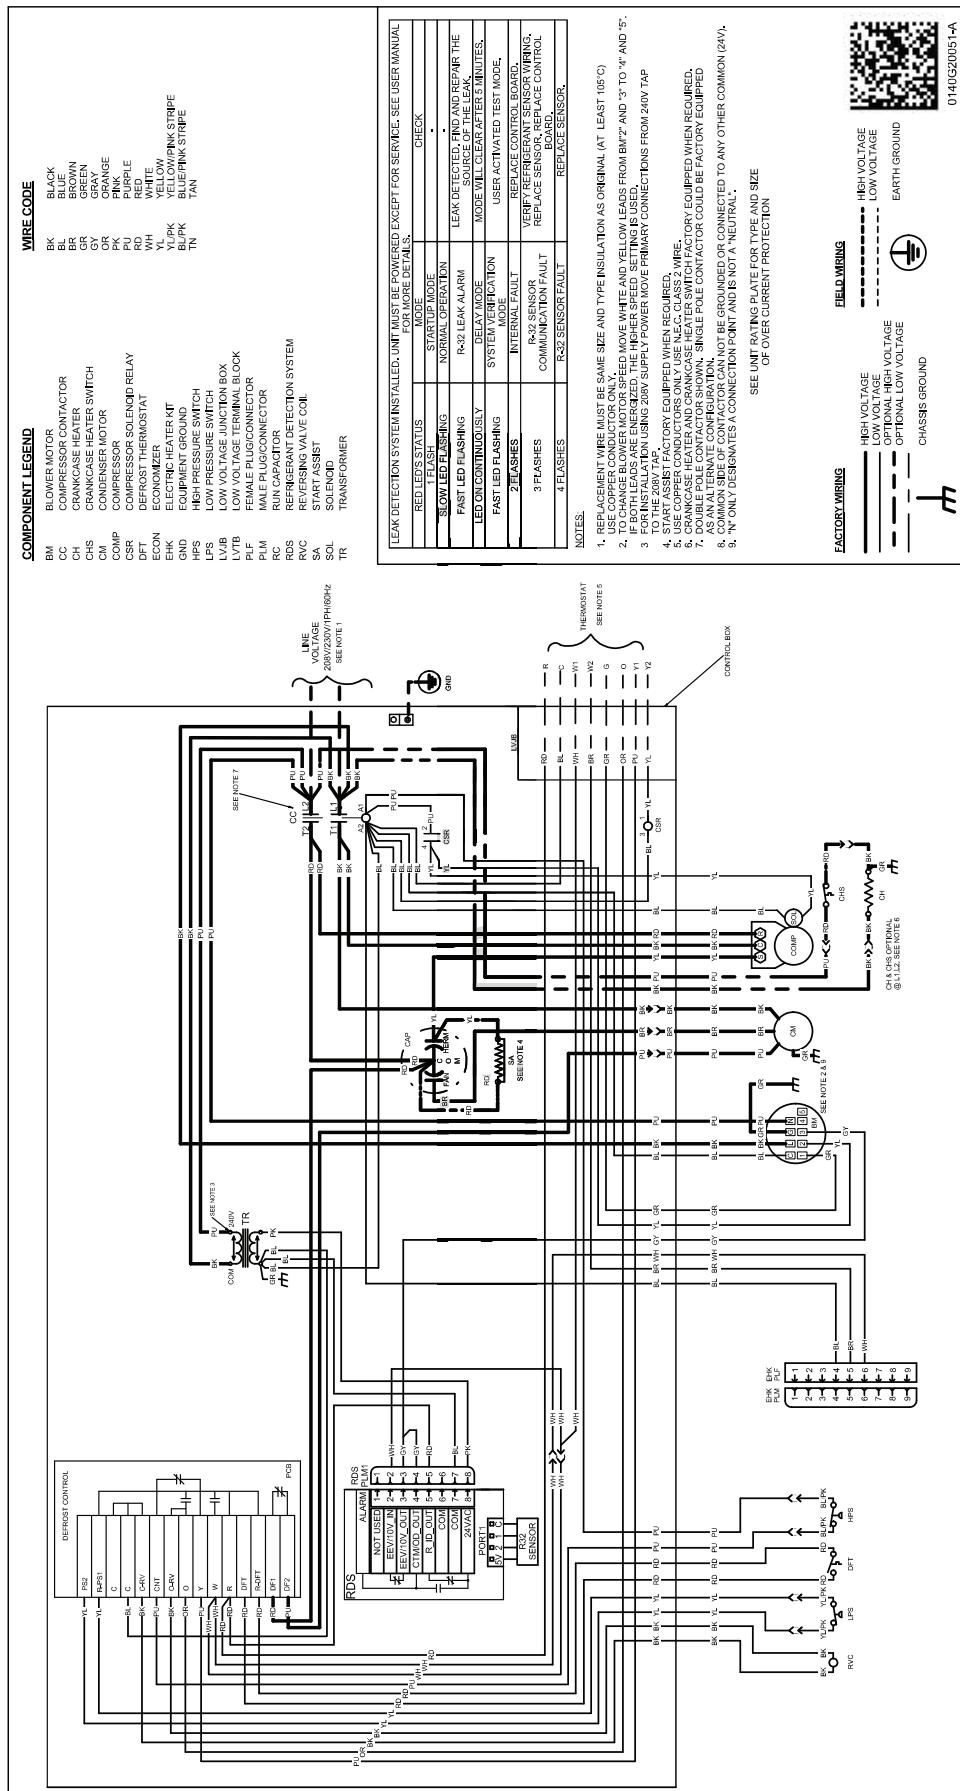

Wiring is subject to change. Always refer to the wiring diagram on the unit for the most up-to-date wiring.

## PACKAGE UNITS - HEAT PUMP AND AC UNITS

### HOMEOWNER'S ROUTINE MAINTENANCE RECOMMENDATIONS

We strongly recommend a bi-annual maintenance checkup be performed by a qualified service agency before the heating and cooling seasons begin.

#### REPLACE OR CLEAN FILTER



#### WARNING

##### HIGH VOLTAGE!

DISCONNECT ALL POWER BEFORE SERVICING OR INSTALLING THIS UNIT. MULTIPLE POWER SOURCES MAY BE PRESENT. FAILURE TO DO SO MAY CAUSE PROPERTY DAMAGE, PERSONAL INJURY OR DEATH.



**IMPORTANT NOTE: NEVER OPERATE UNIT WITHOUT A FILTER INSTALLED AS DUST AND LINT WILL BUILD UP ON INTERNAL PARTS RESULTING IN LOSS OF EFFICIENCY, EQUIPMENT DAMAGE AND POSSIBLE FIRE.**

A return air filter is not supplied with this unit; however, there must be a means of filtering the return air. An indoor air filter must be used with your comfort system. A properly maintained filter will keep the indoor coil of your comfort system clean. A dirty coil could cause poor operation and/or severe equipment damage.

The installer of your unit can tell you where your filter(s) are and how to clean or replace them.

Check your return filter(s) at least once every two months. When they are dirty, replace or clean as required.

Disposable type filters should be replaced. Reusable type filters may be cleaned.

**NOTE: REUSABLE TYPE FILTERS SHOULD BE WASHED WITH WARM WATER, DRIED COMPLETELY AND SPRAYED WITH AN ADHESIVE ACCORDING TO THE MANUFACTURERS RECOMMENDATIONS.**

You may want to ask your dealer about high efficiency filters. High efficiency filters are available in both electronic and non-electronic types. These filters can do a better job of catching small airborne particles.

Improper filter maintenance is the most common cause of inadequate heating or cooling performance. Filters should be cleaned (permanent) or replaced (disposable) every two months or as required. When replacing a filter, it must be replaced with a filter of the same type and size and always make certain the air flow arrows on the filter point in the proper direction.

#### CONDENSER AND EVAPORATOR MOTORS

The bearings on the air circulating blower motor and condenser motor are permanently lubricated and require no further lubrication.

#### COMPRESSOR

The compressor motor is hermetically sealed and does not require additional oiling.

#### ALUMINUM INDOOR COIL CLEANING

##### (QUALIFIED SERVICER ONLY)

This unit is equipped with an aluminum tube evaporator coil. The safest way to clean the evaporator coil is to simply flush the coil with water. This cleaning practice remains as the recommended cleaning method for both copper tube and aluminum tube residential cooling coils.

An alternate cleaning method is to use one of the products listed in the technical publication TP-109 (shipped in the literature bag with the unit) to clean the coils. The cleaners listed are the only agents deemed safe and approved for use to clean round tube aluminum coils. TP-109 is available on the web site in Partner Link > Service Toolkit.

**NOTE: ENSURE COILS ARE RINSED WELL AFTER USE OF ANY CHEMICAL CLEANERS.**

#### ANNUAL INSPECTION (QUALIFIED SERVICER ONLY)

Your package unit should be inspected by a qualified installer, or service agency at least twice every year. This check should be performed before the heating and cooling seasons begin. This will ensure that the system is performing properly and safely. Repair as necessary.

- Check physical support of the unit. Ensure it is sound without any sagging, cracks, or gaps, around the base.
- Check for obvious signs of deterioration of the unit.
- Check both condenser and evaporator coil to make sure each are clean.
- **Return Air Connection.** Check for physical soundness and ensure that the connection is firmly sealed to the package unit casing.
- **Wiring.** Check wires for damage. Check electrical connections for tightness and/or corrosion.
- **Filters.** Check that filters are clean and in the proper placement in the unit or duct system.
- **Louvers.** Inspect air inlet louvers inside the heat exchanger compartments. Ensure the area is clean and free of dirt and debris.

#### BEFORE CALLING YOUR SERVICER

- Check the thermostat to confirm that it is properly set.
- Check the disconnect switch near the unit to confirm that it is closed.
- Check the electrical panel for tripped circuit breakers or open fuses. Reset the circuit breakers or replace fuses as necessary.
- Check for blockage of the indoor air inlets and outlets. Confirm that they are open and have not been blocked by objects (rugs, curtains or furniture).
- Check for obstructions on the unit. Confirm that it has not been covered on the sides or the top. Remove any obstruction that can be safely removed. If the unit is covered with dirt or debris, call a qualified servicer to clean it.
- Check the filter. If it is dirty, clean or replace it.

# START-UP CHECKLIST

<b>Residential Package - (Indoor Section)</b>																																																																																																																																																											
<table border="0"> <tr> <td><b>Model Number</b></td> <td colspan="2"><hr/></td> </tr> <tr> <td><b>Serial Number</b></td> <td colspan="2"><hr/></td> </tr> <tr> <td colspan="3" style="text-align: center;"><b>ELECTRICAL</b></td> </tr> <tr> <td>Line Voltage (Measure L1 and L2 Voltage)</td> <td>L1 - L2</td> <td><hr/></td> </tr> <tr> <td>Secondary Voltage (Measure Transformer Output Voltage)</td> <td>R - C</td> <td><hr/></td> </tr> <tr> <td>Blower Amps</td> <td><hr/></td> <td><hr/></td> </tr> <tr> <td>Heat Strip 1 - Amps</td> <td><hr/></td> <td><hr/></td> </tr> <tr> <td>Heat Strip 2 - Amps</td> <td><hr/></td> <td><hr/></td> </tr> <tr> <td colspan="3" style="text-align: center;"><b>BLOWER EXTERNAL STATIC PRESSURE</b></td> </tr> <tr> <td>Return Air Static Pressure</td> <td><hr/></td> <td>IN. W.C.</td> </tr> <tr> <td>Supply Air Static Pressure</td> <td><hr/></td> <td>IN. W.C.</td> </tr> <tr> <td>Total External Static Pressure (Ignoring +/- from the reading above, add total here)</td> <td><hr/></td> <td>IN. W.C.</td> </tr> <tr> <td colspan="3" style="text-align: center;"><b>TEMPERATURES</b></td> </tr> <tr> <td>Return Air Temperature (Dry bulb / Wet bulb)</td> <td><hr/></td> <td>DB °F</td> <td><hr/>WB °F</td> </tr> <tr> <td>Cooling Supply Air Temperature (Dry bulb / Wet bulb)</td> <td><hr/></td> <td>DB °F</td> <td><hr/>WB °F</td> </tr> <tr> <td>Heating Supply Air Temperature</td> <td><hr/></td> <td>DB °F</td> <td><hr/></td> </tr> <tr> <td>Temperature Rise</td> <td><hr/></td> <td>DB °F</td> <td><hr/></td> </tr> <tr> <td>Delta T (Difference between Supply and Return Temperatures)</td> <td><hr/></td> <td>DB °F</td> <td><hr/></td> </tr> <tr> <td colspan="3" style="text-align: center;"><b>GAS PRESSURES</b></td> </tr> <tr> <td>Gas Inlet Pressure</td> <td><hr/></td> <td>IN. W.C.</td> <td><hr/></td> </tr> <tr> <td>Gas Manifold Pressure (Low Fire)</td> <td><hr/></td> <td>IN. W.C.</td> <td><hr/></td> </tr> <tr> <td>Gas Manifold Pressure (High Fire)</td> <td><hr/></td> <td>IN. W.C.</td> <td><hr/></td> </tr> <tr> <td>Gas Type (NG) = Natural Gas / (LP) = Liquid Propane</td> <td><hr/></td> <td colspan="2"><hr/></td> </tr> <tr> <td colspan="3"><b>Residential Package - (Outdoor Section)</b></td> </tr> <tr> <td colspan="3"> <table border="0"> <tr> <td colspan="3" style="text-align: center;"><b>ELECTRICAL</b></td> </tr> <tr> <td>Supply Voltage (Measure L1 and L2 Voltage)</td> <td>L1 - L2</td> <td><hr/></td> </tr> <tr> <td>Compressor Amps</td> <td><hr/></td> <td><hr/></td> </tr> <tr> <td>Condenser Fan Amps</td> <td><hr/></td> <td><hr/></td> </tr> <tr> <td colspan="3" style="text-align: center;"><b>PRESSURES / TEMPERATURES</b></td> </tr> <tr> <td>Suction Circuit (Pressure / Suction Line Temperature)</td> <td>PSIG</td> <td>TEMP</td> <td><hr/>°F</td> </tr> <tr> <td>Liquid Circuit (Pressure / Liquid Temperature)</td> <td>PSIG</td> <td>TEMP</td> <td><hr/>°F</td> </tr> <tr> <td>Outdoor Air Temperature (Dry bulb / Wet bulb)</td> <td><hr/></td> <td>DB °F</td> <td><hr/>WB °F</td> </tr> <tr> <td colspan="3" style="text-align: center;"><b>SUPERHEAT / SUBCOOLING</b></td> </tr> <tr> <td>SH</td> <td>SC</td> <td><hr/></td> <td><hr/></td> </tr> <tr> <td colspan="3"><b>Additional Checks</b></td> </tr> <tr> <td>Check wire routings for any rubbing</td> <td><hr/></td> <td><hr/></td> </tr> <tr> <td>Check product for proper draining</td> <td><hr/></td> <td><hr/></td> </tr> <tr> <td>Check for kinked pressure switch tubing.</td> <td><hr/></td> <td><hr/></td> </tr> <tr> <td>Check flue elbow for alignment and clamp tightness.</td> <td><hr/></td> <td><hr/></td> </tr> <tr> <td>Check screw tightness on blower wheel.</td> <td><hr/></td> <td><hr/></td> </tr> <tr> <td>Check factory wiring and wire connections.</td> <td><hr/></td> <td><hr/></td> </tr> <tr> <td>Check screw tightness on Outdoor Motor and Blade</td> <td><hr/></td> <td><hr/></td> </tr> <tr> <td>Check product for proper clearances as noted by installation instructions</td> <td><hr/></td> <td><hr/></td> </tr> </table> </td> </tr> <tr> <td colspan="4"> <math>^{\circ}\text{F to } ^{\circ}\text{C formula: } (^{\circ}\text{F} - 32) \text{ divided by } 1.8 = ^{\circ}\text{C}</math> </td> </tr> <tr> <td colspan="4"> <math>^{\circ}\text{C to } ^{\circ}\text{F formula: } (^{\circ}\text{C multiplied by } 1.8) + 32 = ^{\circ}\text{F}</math> </td> </tr> </table>			<b>Model Number</b>	<hr/>		<b>Serial Number</b>	<hr/>		<b>ELECTRICAL</b>			Line Voltage (Measure L1 and L2 Voltage)	L1 - L2	<hr/>	Secondary Voltage (Measure Transformer Output Voltage)	R - C	<hr/>	Blower Amps	<hr/>	<hr/>	Heat Strip 1 - Amps	<hr/>	<hr/>	Heat Strip 2 - Amps	<hr/>	<hr/>	<b>BLOWER EXTERNAL STATIC PRESSURE</b>			Return Air Static Pressure	<hr/>	IN. W.C.	Supply Air Static Pressure	<hr/>	IN. W.C.	Total External Static Pressure (Ignoring +/- from the reading above, add total here)	<hr/>	IN. W.C.	<b>TEMPERATURES</b>			Return Air Temperature (Dry bulb / Wet bulb)	<hr/>	DB °F	<hr/> WB °F	Cooling Supply Air Temperature (Dry bulb / Wet bulb)	<hr/>	DB °F	<hr/> WB °F	Heating Supply Air Temperature	<hr/>	DB °F	<hr/>	Temperature Rise	<hr/>	DB °F	<hr/>	Delta T (Difference between Supply and Return Temperatures)	<hr/>	DB °F	<hr/>	<b>GAS PRESSURES</b>			Gas Inlet Pressure	<hr/>	IN. W.C.	<hr/>	Gas Manifold Pressure (Low Fire)	<hr/>	IN. W.C.	<hr/>	Gas Manifold Pressure (High Fire)	<hr/>	IN. W.C.	<hr/>	Gas Type (NG) = Natural Gas / (LP) = Liquid Propane	<hr/>	<hr/>		<b>Residential Package - (Outdoor Section)</b>			<table border="0"> <tr> <td colspan="3" style="text-align: center;"><b>ELECTRICAL</b></td> </tr> <tr> <td>Supply Voltage (Measure L1 and L2 Voltage)</td> <td>L1 - L2</td> <td><hr/></td> </tr> <tr> <td>Compressor Amps</td> <td><hr/></td> <td><hr/></td> </tr> <tr> <td>Condenser Fan Amps</td> <td><hr/></td> <td><hr/></td> </tr> <tr> <td colspan="3" style="text-align: center;"><b>PRESSURES / TEMPERATURES</b></td> </tr> <tr> <td>Suction Circuit (Pressure / Suction Line Temperature)</td> <td>PSIG</td> <td>TEMP</td> <td><hr/>°F</td> </tr> <tr> <td>Liquid Circuit (Pressure / Liquid Temperature)</td> <td>PSIG</td> <td>TEMP</td> <td><hr/>°F</td> </tr> <tr> <td>Outdoor Air Temperature (Dry bulb / Wet bulb)</td> <td><hr/></td> <td>DB °F</td> <td><hr/>WB °F</td> </tr> <tr> <td colspan="3" style="text-align: center;"><b>SUPERHEAT / SUBCOOLING</b></td> </tr> <tr> <td>SH</td> <td>SC</td> <td><hr/></td> <td><hr/></td> </tr> <tr> <td colspan="3"><b>Additional Checks</b></td> </tr> <tr> <td>Check wire routings for any rubbing</td> <td><hr/></td> <td><hr/></td> </tr> <tr> <td>Check product for proper draining</td> <td><hr/></td> <td><hr/></td> </tr> <tr> <td>Check for kinked pressure switch tubing.</td> <td><hr/></td> <td><hr/></td> </tr> <tr> <td>Check flue elbow for alignment and clamp tightness.</td> <td><hr/></td> <td><hr/></td> </tr> <tr> <td>Check screw tightness on blower wheel.</td> <td><hr/></td> <td><hr/></td> </tr> <tr> <td>Check factory wiring and wire connections.</td> <td><hr/></td> <td><hr/></td> </tr> <tr> <td>Check screw tightness on Outdoor Motor and Blade</td> <td><hr/></td> <td><hr/></td> </tr> <tr> <td>Check product for proper clearances as noted by installation instructions</td> <td><hr/></td> <td><hr/></td> </tr> </table>			<b>ELECTRICAL</b>			Supply Voltage (Measure L1 and L2 Voltage)	L1 - L2	<hr/>	Compressor Amps	<hr/>	<hr/>	Condenser Fan Amps	<hr/>	<hr/>	<b>PRESSURES / TEMPERATURES</b>			Suction Circuit (Pressure / Suction Line Temperature)	PSIG	TEMP	<hr/> °F	Liquid Circuit (Pressure / Liquid Temperature)	PSIG	TEMP	<hr/> °F	Outdoor Air Temperature (Dry bulb / Wet bulb)	<hr/>	DB °F	<hr/> WB °F	<b>SUPERHEAT / SUBCOOLING</b>			SH	SC	<hr/>	<hr/>	<b>Additional Checks</b>			Check wire routings for any rubbing	<hr/>	<hr/>	Check product for proper draining	<hr/>	<hr/>	Check for kinked pressure switch tubing.	<hr/>	<hr/>	Check flue elbow for alignment and clamp tightness.	<hr/>	<hr/>	Check screw tightness on blower wheel.	<hr/>	<hr/>	Check factory wiring and wire connections.	<hr/>	<hr/>	Check screw tightness on Outdoor Motor and Blade	<hr/>	<hr/>	Check product for proper clearances as noted by installation instructions	<hr/>	<hr/>	$^{\circ}\text{F to } ^{\circ}\text{C formula: } (^{\circ}\text{F} - 32) \text{ divided by } 1.8 = ^{\circ}\text{C}$				$^{\circ}\text{C to } ^{\circ}\text{F formula: } (^{\circ}\text{C multiplied by } 1.8) + 32 = ^{\circ}\text{F}$			
<b>Model Number</b>	<hr/>																																																																																																																																																										
<b>Serial Number</b>	<hr/>																																																																																																																																																										
<b>ELECTRICAL</b>																																																																																																																																																											
Line Voltage (Measure L1 and L2 Voltage)	L1 - L2	<hr/>																																																																																																																																																									
Secondary Voltage (Measure Transformer Output Voltage)	R - C	<hr/>																																																																																																																																																									
Blower Amps	<hr/>	<hr/>																																																																																																																																																									
Heat Strip 1 - Amps	<hr/>	<hr/>																																																																																																																																																									
Heat Strip 2 - Amps	<hr/>	<hr/>																																																																																																																																																									
<b>BLOWER EXTERNAL STATIC PRESSURE</b>																																																																																																																																																											
Return Air Static Pressure	<hr/>	IN. W.C.																																																																																																																																																									
Supply Air Static Pressure	<hr/>	IN. W.C.																																																																																																																																																									
Total External Static Pressure (Ignoring +/- from the reading above, add total here)	<hr/>	IN. W.C.																																																																																																																																																									
<b>TEMPERATURES</b>																																																																																																																																																											
Return Air Temperature (Dry bulb / Wet bulb)	<hr/>	DB °F	<hr/> WB °F																																																																																																																																																								
Cooling Supply Air Temperature (Dry bulb / Wet bulb)	<hr/>	DB °F	<hr/> WB °F																																																																																																																																																								
Heating Supply Air Temperature	<hr/>	DB °F	<hr/>																																																																																																																																																								
Temperature Rise	<hr/>	DB °F	<hr/>																																																																																																																																																								
Delta T (Difference between Supply and Return Temperatures)	<hr/>	DB °F	<hr/>																																																																																																																																																								
<b>GAS PRESSURES</b>																																																																																																																																																											
Gas Inlet Pressure	<hr/>	IN. W.C.	<hr/>																																																																																																																																																								
Gas Manifold Pressure (Low Fire)	<hr/>	IN. W.C.	<hr/>																																																																																																																																																								
Gas Manifold Pressure (High Fire)	<hr/>	IN. W.C.	<hr/>																																																																																																																																																								
Gas Type (NG) = Natural Gas / (LP) = Liquid Propane	<hr/>	<hr/>																																																																																																																																																									
<b>Residential Package - (Outdoor Section)</b>																																																																																																																																																											
<table border="0"> <tr> <td colspan="3" style="text-align: center;"><b>ELECTRICAL</b></td> </tr> <tr> <td>Supply Voltage (Measure L1 and L2 Voltage)</td> <td>L1 - L2</td> <td><hr/></td> </tr> <tr> <td>Compressor Amps</td> <td><hr/></td> <td><hr/></td> </tr> <tr> <td>Condenser Fan Amps</td> <td><hr/></td> <td><hr/></td> </tr> <tr> <td colspan="3" style="text-align: center;"><b>PRESSURES / TEMPERATURES</b></td> </tr> <tr> <td>Suction Circuit (Pressure / Suction Line Temperature)</td> <td>PSIG</td> <td>TEMP</td> <td><hr/>°F</td> </tr> <tr> <td>Liquid Circuit (Pressure / Liquid Temperature)</td> <td>PSIG</td> <td>TEMP</td> <td><hr/>°F</td> </tr> <tr> <td>Outdoor Air Temperature (Dry bulb / Wet bulb)</td> <td><hr/></td> <td>DB °F</td> <td><hr/>WB °F</td> </tr> <tr> <td colspan="3" style="text-align: center;"><b>SUPERHEAT / SUBCOOLING</b></td> </tr> <tr> <td>SH</td> <td>SC</td> <td><hr/></td> <td><hr/></td> </tr> <tr> <td colspan="3"><b>Additional Checks</b></td> </tr> <tr> <td>Check wire routings for any rubbing</td> <td><hr/></td> <td><hr/></td> </tr> <tr> <td>Check product for proper draining</td> <td><hr/></td> <td><hr/></td> </tr> <tr> <td>Check for kinked pressure switch tubing.</td> <td><hr/></td> <td><hr/></td> </tr> <tr> <td>Check flue elbow for alignment and clamp tightness.</td> <td><hr/></td> <td><hr/></td> </tr> <tr> <td>Check screw tightness on blower wheel.</td> <td><hr/></td> <td><hr/></td> </tr> <tr> <td>Check factory wiring and wire connections.</td> <td><hr/></td> <td><hr/></td> </tr> <tr> <td>Check screw tightness on Outdoor Motor and Blade</td> <td><hr/></td> <td><hr/></td> </tr> <tr> <td>Check product for proper clearances as noted by installation instructions</td> <td><hr/></td> <td><hr/></td> </tr> </table>			<b>ELECTRICAL</b>			Supply Voltage (Measure L1 and L2 Voltage)	L1 - L2	<hr/>	Compressor Amps	<hr/>	<hr/>	Condenser Fan Amps	<hr/>	<hr/>	<b>PRESSURES / TEMPERATURES</b>			Suction Circuit (Pressure / Suction Line Temperature)	PSIG	TEMP	<hr/> °F	Liquid Circuit (Pressure / Liquid Temperature)	PSIG	TEMP	<hr/> °F	Outdoor Air Temperature (Dry bulb / Wet bulb)	<hr/>	DB °F	<hr/> WB °F	<b>SUPERHEAT / SUBCOOLING</b>			SH	SC	<hr/>	<hr/>	<b>Additional Checks</b>			Check wire routings for any rubbing	<hr/>	<hr/>	Check product for proper draining	<hr/>	<hr/>	Check for kinked pressure switch tubing.	<hr/>	<hr/>	Check flue elbow for alignment and clamp tightness.	<hr/>	<hr/>	Check screw tightness on blower wheel.	<hr/>	<hr/>	Check factory wiring and wire connections.	<hr/>	<hr/>	Check screw tightness on Outdoor Motor and Blade	<hr/>	<hr/>	Check product for proper clearances as noted by installation instructions	<hr/>	<hr/>																																																																																												
<b>ELECTRICAL</b>																																																																																																																																																											
Supply Voltage (Measure L1 and L2 Voltage)	L1 - L2	<hr/>																																																																																																																																																									
Compressor Amps	<hr/>	<hr/>																																																																																																																																																									
Condenser Fan Amps	<hr/>	<hr/>																																																																																																																																																									
<b>PRESSURES / TEMPERATURES</b>																																																																																																																																																											
Suction Circuit (Pressure / Suction Line Temperature)	PSIG	TEMP	<hr/> °F																																																																																																																																																								
Liquid Circuit (Pressure / Liquid Temperature)	PSIG	TEMP	<hr/> °F																																																																																																																																																								
Outdoor Air Temperature (Dry bulb / Wet bulb)	<hr/>	DB °F	<hr/> WB °F																																																																																																																																																								
<b>SUPERHEAT / SUBCOOLING</b>																																																																																																																																																											
SH	SC	<hr/>	<hr/>																																																																																																																																																								
<b>Additional Checks</b>																																																																																																																																																											
Check wire routings for any rubbing	<hr/>	<hr/>																																																																																																																																																									
Check product for proper draining	<hr/>	<hr/>																																																																																																																																																									
Check for kinked pressure switch tubing.	<hr/>	<hr/>																																																																																																																																																									
Check flue elbow for alignment and clamp tightness.	<hr/>	<hr/>																																																																																																																																																									
Check screw tightness on blower wheel.	<hr/>	<hr/>																																																																																																																																																									
Check factory wiring and wire connections.	<hr/>	<hr/>																																																																																																																																																									
Check screw tightness on Outdoor Motor and Blade	<hr/>	<hr/>																																																																																																																																																									
Check product for proper clearances as noted by installation instructions	<hr/>	<hr/>																																																																																																																																																									
$^{\circ}\text{F to } ^{\circ}\text{C formula: } (^{\circ}\text{F} - 32) \text{ divided by } 1.8 = ^{\circ}\text{C}$																																																																																																																																																											
$^{\circ}\text{C to } ^{\circ}\text{F formula: } (^{\circ}\text{C multiplied by } 1.8) + 32 = ^{\circ}\text{F}$																																																																																																																																																											

## CUSTOMER FEEDBACK

We are very interested in all product comments.

Please fill out the feedback form on one of the following links:

Goodman® Brand Products: (<http://www.goodmanmfg.com/about/contact-us>).

Amana® Brand Products: (<http://www.amana-hac.com/about-us/contact-us>).

You can also scan the QR code on the right for the product brand you purchased to be directed to the feedback page.



GOODMAN® BRAND



AMANA® BRAND

Our continuing commitment to quality products may mean a change in specifications without notice.

19001 Kermier Rd. Waller, TX 77484

[www.goodmanmfg.com](http://www.goodmanmfg.com) • [www.amana-hac.com](http://www.amana-hac.com)

© 2025 Daikin Comfort Technologies Manufacturing, Inc.

**Amana** is a registered trademark of Maytag Corporation or its related companies and is used under license.  
All rights reserved.