


HAIL GUARDS 7.5 - 12.5 TON INSTALLATION INSTRUCTIONS

© 2018 **DAIKIN COMPANY, L.P.**
5151 San Felipe, Suite 500, Houston, TX 77056
www.daikincomfort.com
P/N: IOD-7086 Date: October 2018


Hail Guards are to be installed on the outside of the condenser coil. Below is the installation drawings on how they are to be installed onto the unit. When installing Hail Guards, use screws supplied with kit. Print for screw is below.

7.5-10 Ton Hail Guards

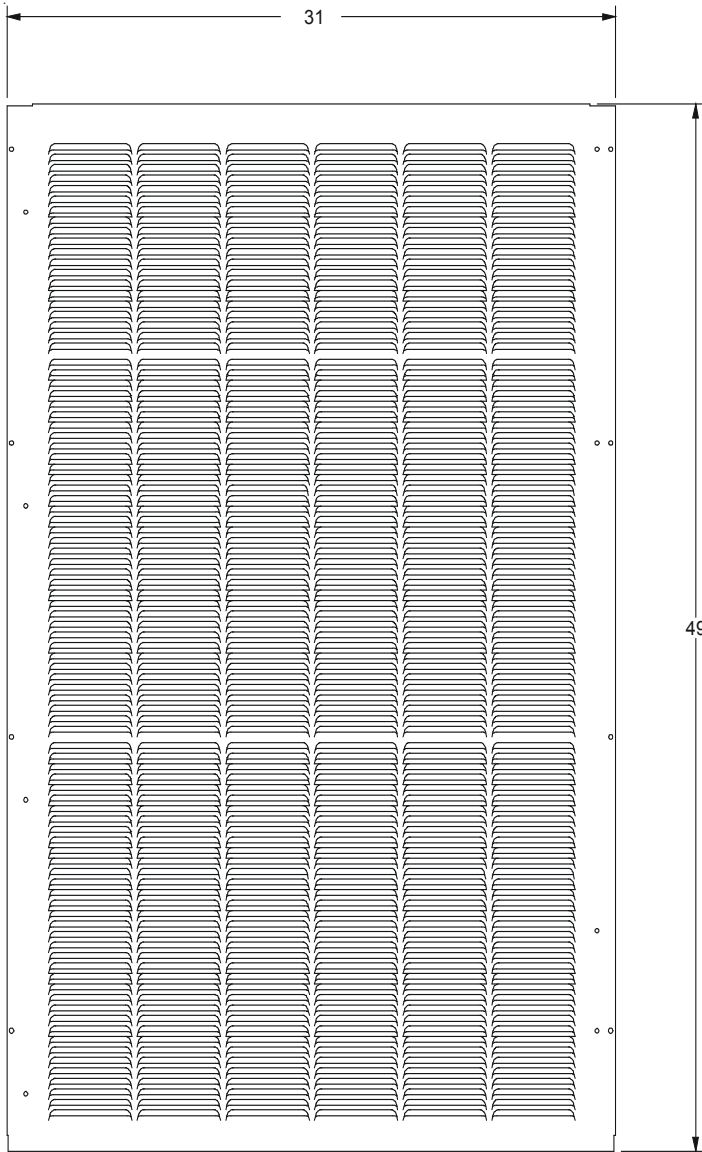

FRONT VIEW


**Hail Guards 7.5-10 Ton
Figure 1**

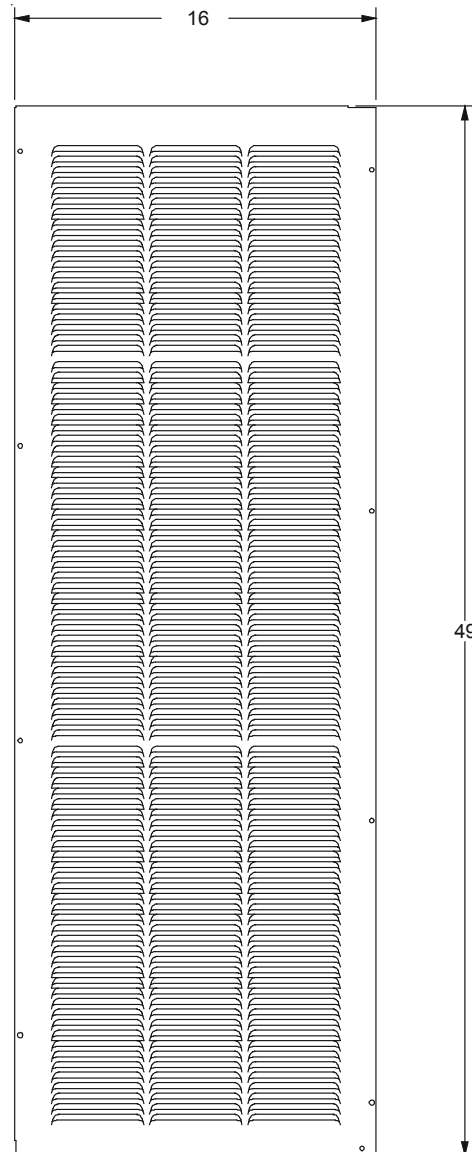

FRONT VIEW


**Hail Guards 7.5-10 Ton
Figure 2**



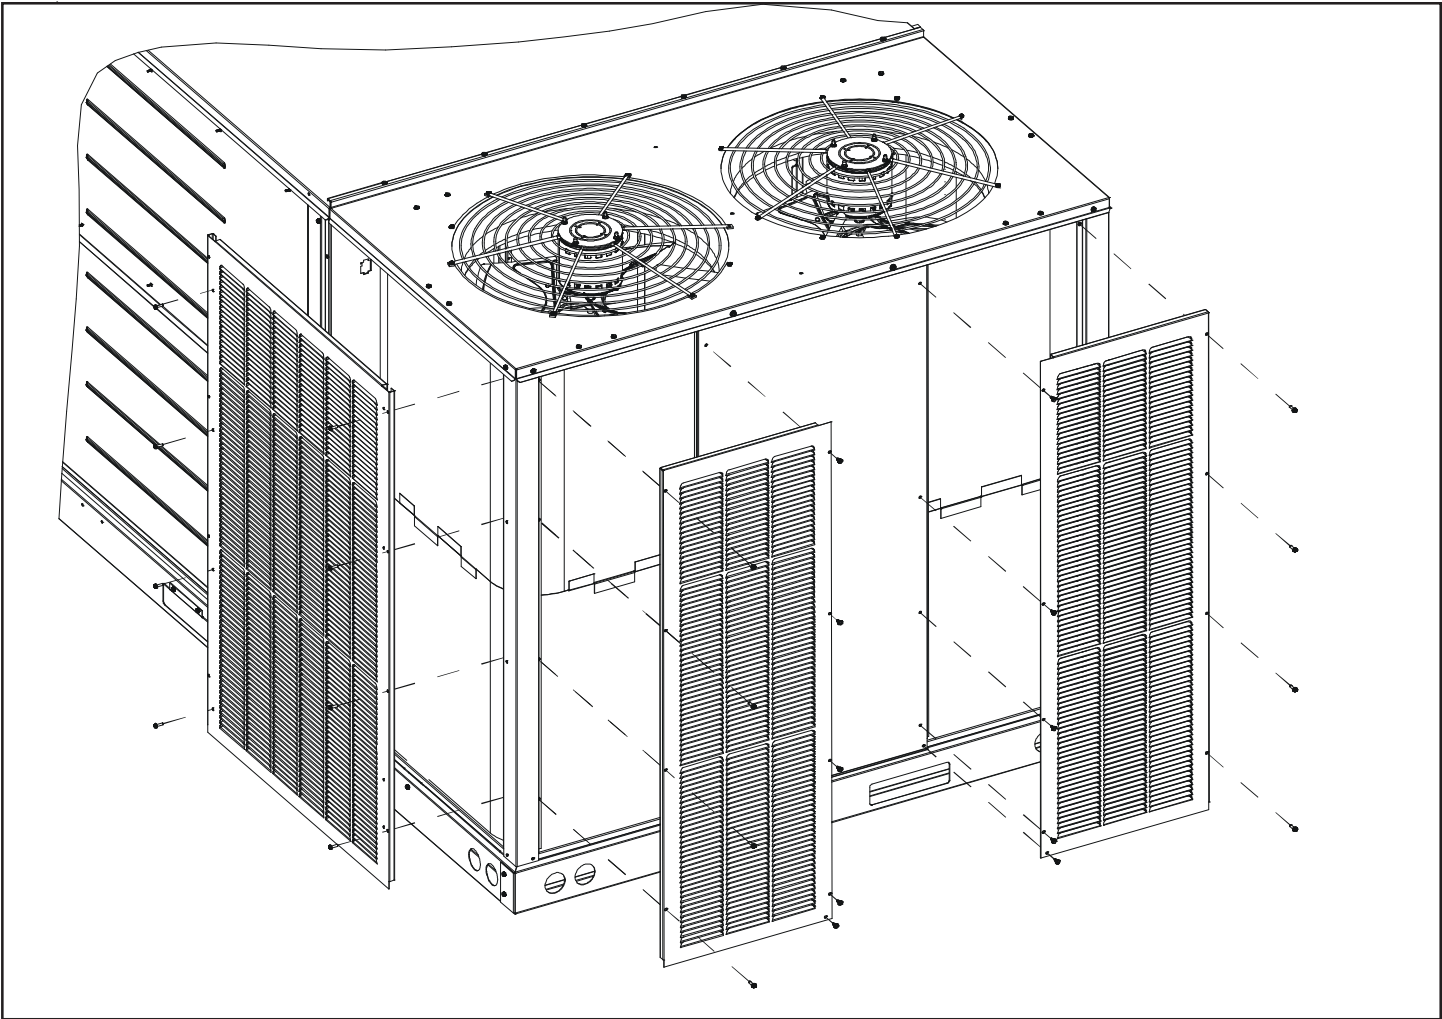


**Hail Guard Installation
(7.5-10 Ton Models)
Figure 3**

12.5 Ton Hail Guards

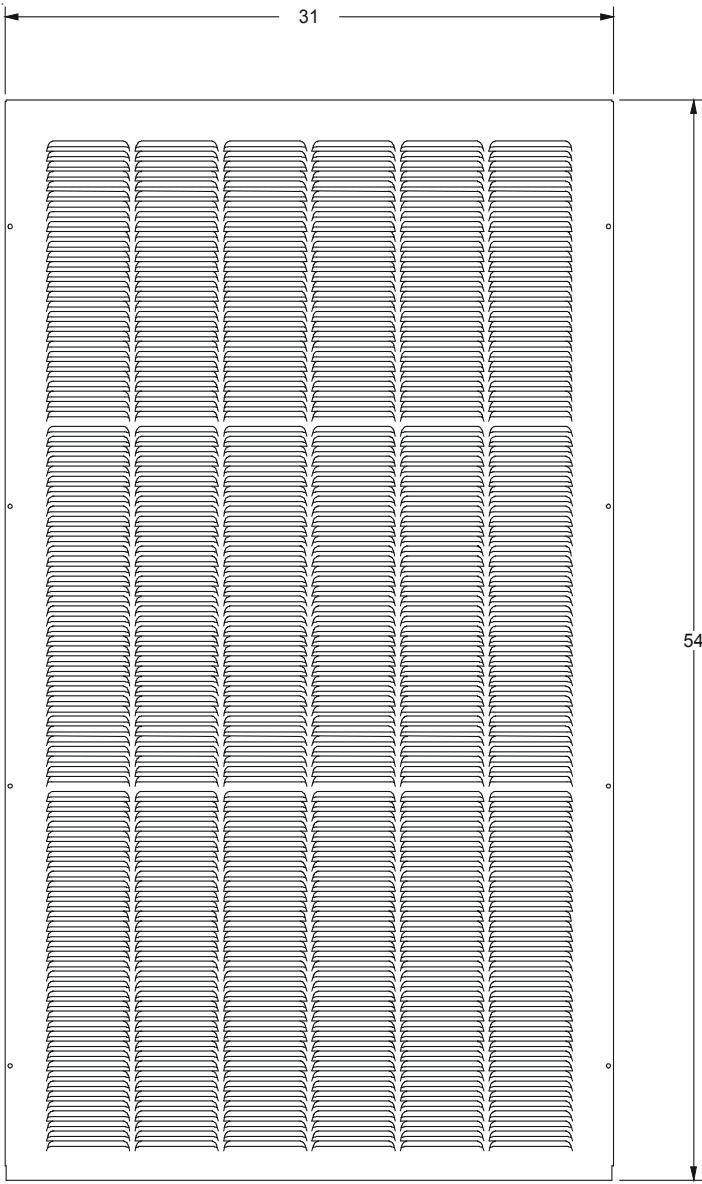


FRONT VIEW

**Hail Guards 12.5 Ton
Figure 4**

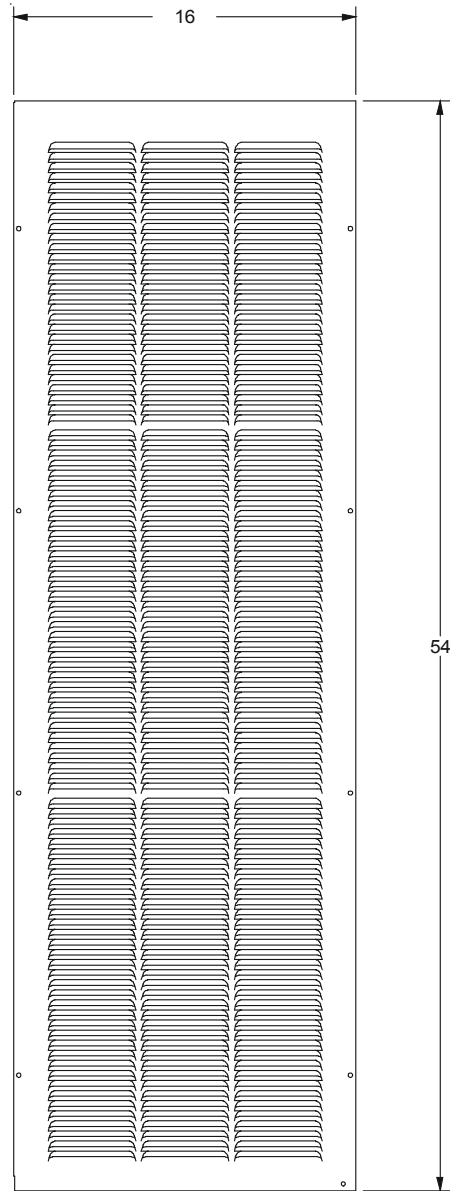


FRONT VIEW

**Hail Guards 12.5 Ton
Figure 5**

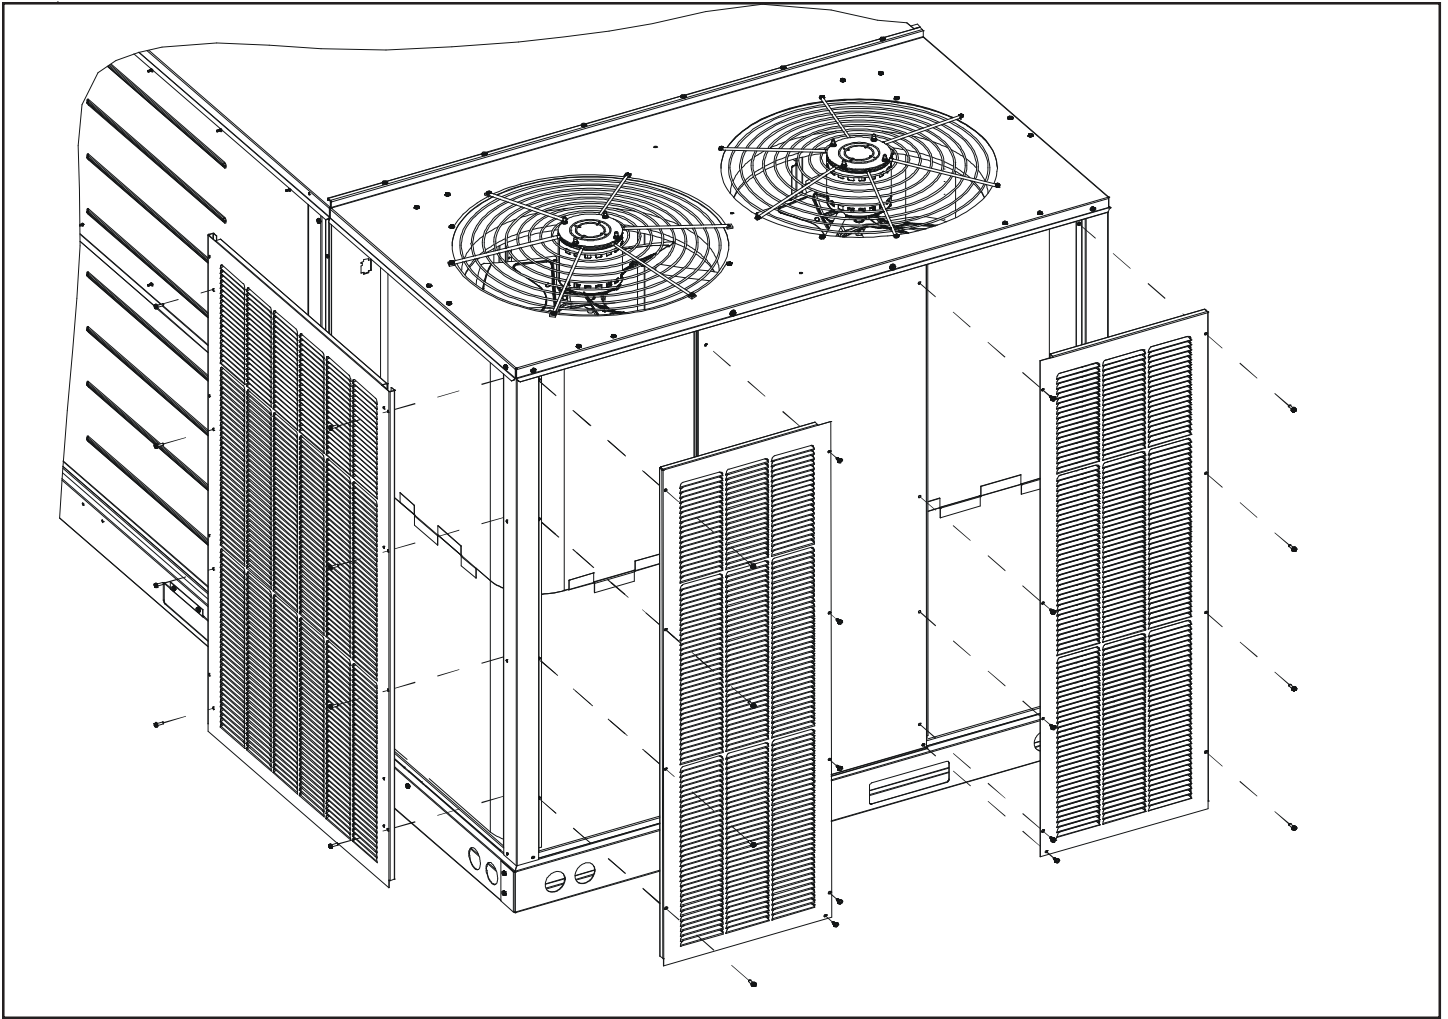

**Hail Guard Installation
(12.5 Ton Models)
Figure 6**

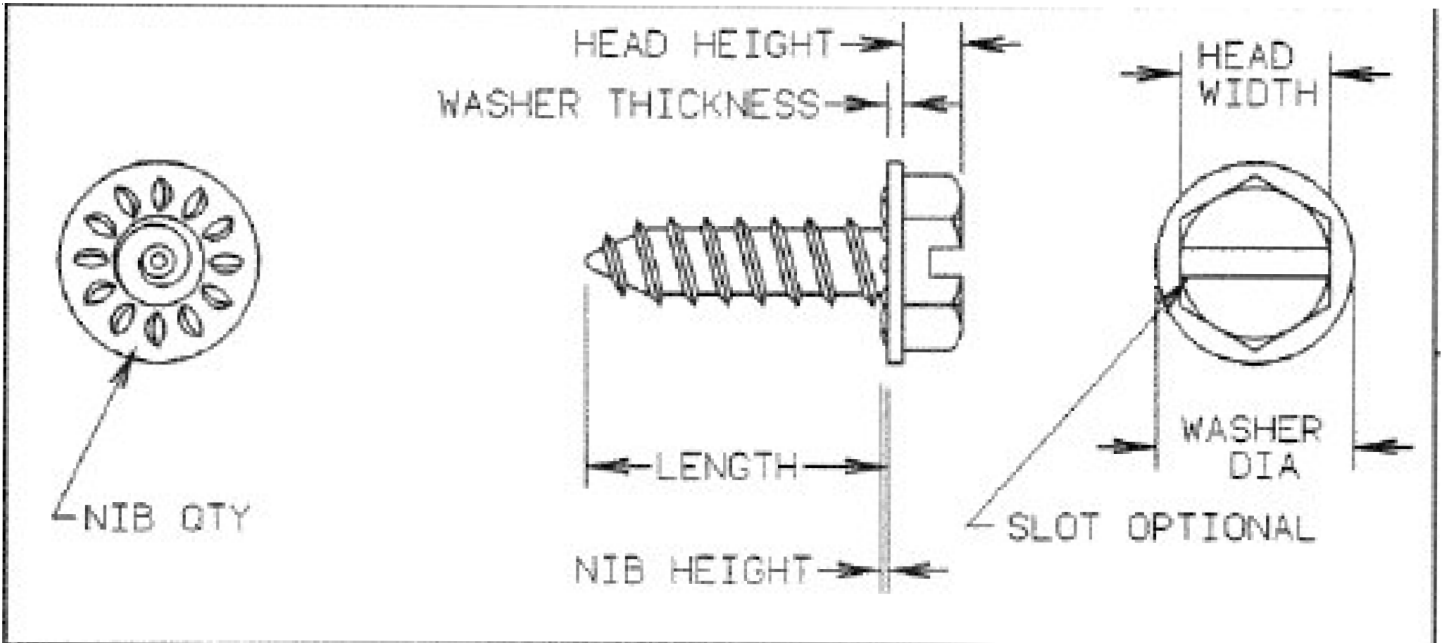

SUPPLIED SCREW

NOTE: ONLY USE THE .5" LONG SCREW SUPPLIED IN KIT. DO NOT USE LONGER SCREWS. LONGER SCREWS CAN DAMAGE THE COIL.

THIS PAGE IS INTENTIONALLY LEFT BLANK

THIS PAGE IS INTENTIONALLY LEFT BLANK

NOTE: SPECIFICATIONS AND PERFORMANCE DATA LISTED HEREIN ARE SUBJECT TO CHANGE WITHOUT NOTICE

© 2018 **DAIKIN COMPANY, L.P.**

www.daikincomfort.com