



**NOTES:**

1. SET HEAT ANTICIPATOR ON ROOM THERMOSTAT AT 0.7 AMPS.
2. MANUFACTURER'S SPECIFIED REPLACEMENT PARTS MUST BE USED WHEN SERVICING.
3. IF ANY OF THE ORIGINAL WIRE AS SUPPLIED WITH THE FURNACE MUST BE REPLACED, IT MUST BE REPLACED WITH WIRING MATERIAL HAVING A TEMPERATURE RATING OF AT LEAST 105°C. USE COPPER CONDUCTORS ONLY.
4. UNIT MUST BE PERMANENTLY GROUNDED AND CONFORM TO N.E.C. AND LOCAL CODES.



0140F02497-A

**COLOR CODES:**  
 PK PINK  
 BR BROWN  
 WH WHITE  
 BL BLUE  
 GY GRAY  
 RD RED  
 YL YELLOW  
 OR ORANGE  
 PU PURPLE  
 GN GREEN  
 BK BLACK

LOW VOLTAGE (24V) ———  
 LOW VOLTAGE FIELD ———  
 HI VOLTAGE (115V) ———  
 HI VOLTAGE FIELD ———  
 JUNCTION ———  
 TERMINAL ———  
 INTERNAL TO INTEGRATED CONTROL ———  
 PLUG CONNECTION ———

EQUIPMENT GND ———  
 FIELD GND ———  
 FIELD SPLICE ———  
 SWITCH (TEMP.) ———  
 IGNITER ———  
 SWITCH (PRESS.) ———  
 OVERCURRENT PROT. DEVICE ———