

Commercial 5 Ton Package Gas Unit

DSG0600903B1DDAA
DSG0600903BBXXAA
DSG0600903BFXXAA
DSG0600903BHMCAA
DSG0600903BHXAAA
DSG0600903BJXDAA
DSG0600903BVDDAA
DSG0600903BVMMAA
DSG0600903BVXDAA
DSG0600903BWSXAA
DSG0600903BWXBAA
DSG0600904BHSNAA
DSG0600904BVDBAA
DSG0600904BVMMAA
DSG0600904BWXCAA
DSG0600904BXSBA
DSG0600904BXXBAA
DSG0601153BFXXAA
DSG0601153BWDAAA
DSG0601153BWSNAA
DSG0601153BXXDAA
DSG0601154BRDOAA
DSG0601154BRXDAA
DSG0601403BFXXAA
DSG0601403BJBNA
DSG0601403BWXOAA
DSG0601403BXSDA
DSG0601403BXSXA
DSG0601404BFXXAA
DSG0601404BWLAAA



This manual is to be used by qualified technicians only.

This manual replaces RP-D1190.

Important Information

Index

Functional Parts List	3
Illustration and Parts	4 - 19

Views shown are for parts illustrations only, not servicing procedures.

Text Codes:

AR - As Required

NA - Not Available

NS - Not Shown

00000000 - See Note

QTY - Quantity Example (QTY 3) (If Quantity not shown, Quantity = 1)

M - Model Example (M1) (If M Code not shown, then part is used on all Models)

Expanded Model Nomenclature:

Example
M1 - Model#1
M2 - Model#2
M3 - Model#3

Daikin Company, L.P. is not responsible for personal injury or property damage resulting from improper service. Review all service information before beginning repairs.

Warranty service must be performed by an authorized technician, using authorized factory parts. If service is required after the warranty expires, Daikin Company, L.P. also recommends contacting an authorized technician and using authorized factory parts.

Daikin Company, L.P. reserves the right to discontinue, or change at any time, specifications or designs without notice or without incurring obligations.

For assistance within the U.S.A. contact:

Equipment Support
Daikin North America, LLC
19001 Kermier Road
Waller, Texas 77484
855-770-5678-Telephone
713-863-2382-Facsimile

For assistance outside the U.S.A. contact:

International Division
Daikin North America, LLC
19001 Kermier Road
Waller, Texas 77484
713-861-2500-Telephone
713-863-2382-Facsimile

Functional Parts

Part

No: Description:

Part No:	Description:	Part No:	Description:
10735102	BECKETT BURNER (QTY 4)	0130M00274	TERMINAL BOARD (M1, M2, M18, M22, M23, M24, M29)
B1368056	BELT DRIVE BLOWER WHEEL	0130M00275	TERMINAL BOARD (M1, M2, M18, M22, M23, M24, M29)
CAP100000440LA	CAP 10 MFD/440V/OVAL (M3, M4, M5, M6, M7, M8, M9, M10, M11, M19, M20, M21, M25, M26, M27, M28)	0130M00138	TRANSFORMER 208/230, 24V (M1, M2, M3, M4, M5, M6, M7, M8, M9, M10, M11, M18, M19, M20, M21, M24, M25, M26, M27, M28)
CAP100000370LA	CAPACITOR 10/370V (M1, M2, M18, M24)	0130M00146	TRANSFORMER 480V TO 230V, 150VA (M12, M13, M14, M15, M16, M17, M22, M23, M29, M30)
CAP050000440LA	CAPACITOR 5/440V (M12, M13, M14, M15, M16, M17, M22, M23, M29, M30)	0130M00145	TRANSFORMER 480V TO 24V, 75VA (M12, M13, M14, M15, M16, M17, M22, M23, M29, M30)
ZP51K5ETF5130	COMPRESSOR 51000, 208/230/60/3 (M1, M2, M3, M4, M5, M6, M7, M8, M9, M10, M11, M18, M19, M20, M21, M24, M25, M26, M27, M28)		
ZP51K5ETFD130	COMPRESSOR 51000, 460/60/3 (M12, M13, M14, M15, M16, M17, M22, M23, M29, M30)		
CONT3P025024V	CONTACTOR 25 AMP, 3P, 24V (M12, M13, M14, M15, M16, M17, M22, M23, M29, M30)		
CONT3P030024V	CONTACTOR 30 AMP, 3P, 24V (M1, M2, M3, M4, M5, M6, M7, M8, M9, M10, M11, M18, M19, M20, M21, M24, M25, M26, M27, M28)		
0259L00368	CURRENT SWITCH WITH TERMS (M1, M2, M18, M22, M23, M24, M29)		
0130M00074	CUT-OUT SWITCH, HIGH PRESSURE		
0130M00087	CUT-OUT SWITCH, LOW PRESSURE		
PCBCG100	DDC Controller (M1, M2, M18, M22, M23, M24, M29)		
0130L00112	Duct Temp Sensor (M1, M2, M18, M22, M23, M24, M29)		
0164L00010	FAN BELT, NOTCHED		
0150G00004	FAN BLADE		
0130F00010	FLAME SENSOR		
0151F00000P	GAS VALVE		
20261709	IGNITOR		
10123532	MANUAL RESET LIMIT 350°F		
0131L00067	MOTOR, 1 HP BELT DRIVE		
0131L00061	MOTOR, 1/4 HP, 1SP, 6PL (M3, M7)		
0131M00838	MOTOR, 1/4 HP, OD (M12, M13, M16, M17, M22, M23, M29, M30)		
0131M00837	MOTOR, 1/4 HP, OD (M1, M2, M4, M5, M6, M8, M9, M10, M11, M18, M19, M20, M21, M24, M25, M26, M27, M28)		
0131L00062	Motor, Cond, 1/4 HP, 460V (M14, M15)		
0130L00108	OD Air Temp Sensor (M1, M2, M18, M22, M23, M24, M29)		
PCBAG123	PCB, IGNITION, DSI		
0130L00105	PHASE MONITOR (M25)		
11112501	PRESSURE SWITCH		
0130M00063	PRIMARY LIMIT - GOLD 140° (M1, M2, M3, M4, M5, M6, M7, M8, M9, M10, M11, M12, M13, M14, M15, M16, M17)		
0130F00037	PRIMARY LIMIT - GRAY 150° (M18, M19, M20, M21, M22, M23)		
0130F00035	PRIMARY LIMIT - PURPLE 220° (M24, M25, M26, M27, M28, M29, M30)		
20162904	PRIMARY LIMIT-TEMPERATURE CONTROL (M18, M19, M20, M21, M22, M23)		
20162905	PRIMARY LIMIT-YELLOW (M1, M2, M3, M4, M5, M6, M7, M8, M9, M10, M11, M12, M13, M14, M15, M16, M17, M24, M25, M26, M27, M28, M29, M30)		
0130M00025	RELAY, SPDT		
0130M00038	TERMINAL BOARD (M3, M4, M5, M6, M7, M8, M9, M10, M11, M12, M13, M14, M15, M16, M17, M19, M20, M21, M25, M26, M27, M28, M30)		

Expanded Model Nomenclature

M1 - DSG0600903BBXXAA
M2 - DSG0600903BFXXAA
M3 - DSG0600903BHMCAA
M4 - DSG0600903BHXAAX
M5 - DSG0600903BJXDAA
M6 - DSG0600903BVDDAA
M7 - DSG0600903BVMMAA
M8 - DSG0600903BVXDAA
M9 - DSG0600903BWSXAA
M10 - DSG0600903BWXBAA
M11 - DSG0600903B1DDAA
M12 - DSG0600904BHSNAA
M13 - DSG0600904BVDBAA
M14 - DSG0600904BVMMAA
M15 - DSG0600904BWXCAA
M16 - DSG0600904BXSBAAX
M17 - DSG0600904BXXBAA
M18 - DSG0601153BFXXAA
M19 - DSG0601153BWDAAA
M20 - DSG0601153BWSNAA
M21 - DSG0601153BXXDAA
M22 - DSG0601154BRDOAA
M23 - DSG0601154BRXDAA
M24 - DSG0601403BFXXAA
M25 - DSG0601403BJBNAAX
M26 - DSG0601403BWXOAA
M27 - DSG0601403BXSDAA
M28 - DSG0601403BXSXAA
M29 - DSG0601404BFXXAA
M30 - DSG0601404BWLAAA

Top Panel and Tubing Assembly

IMAGE 1


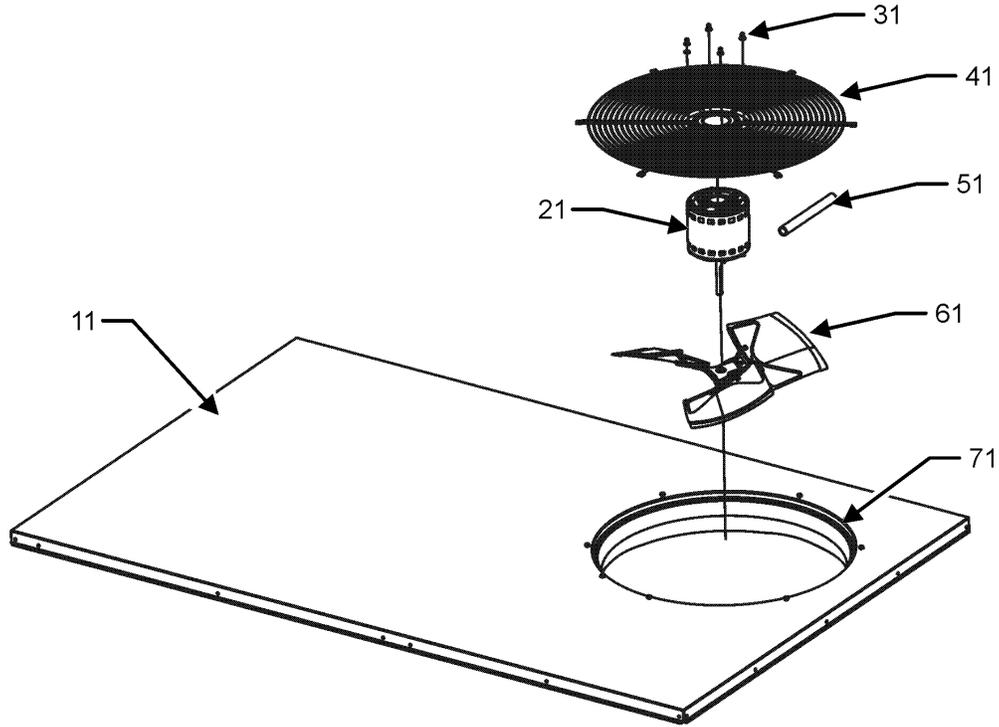


IMAGE 2

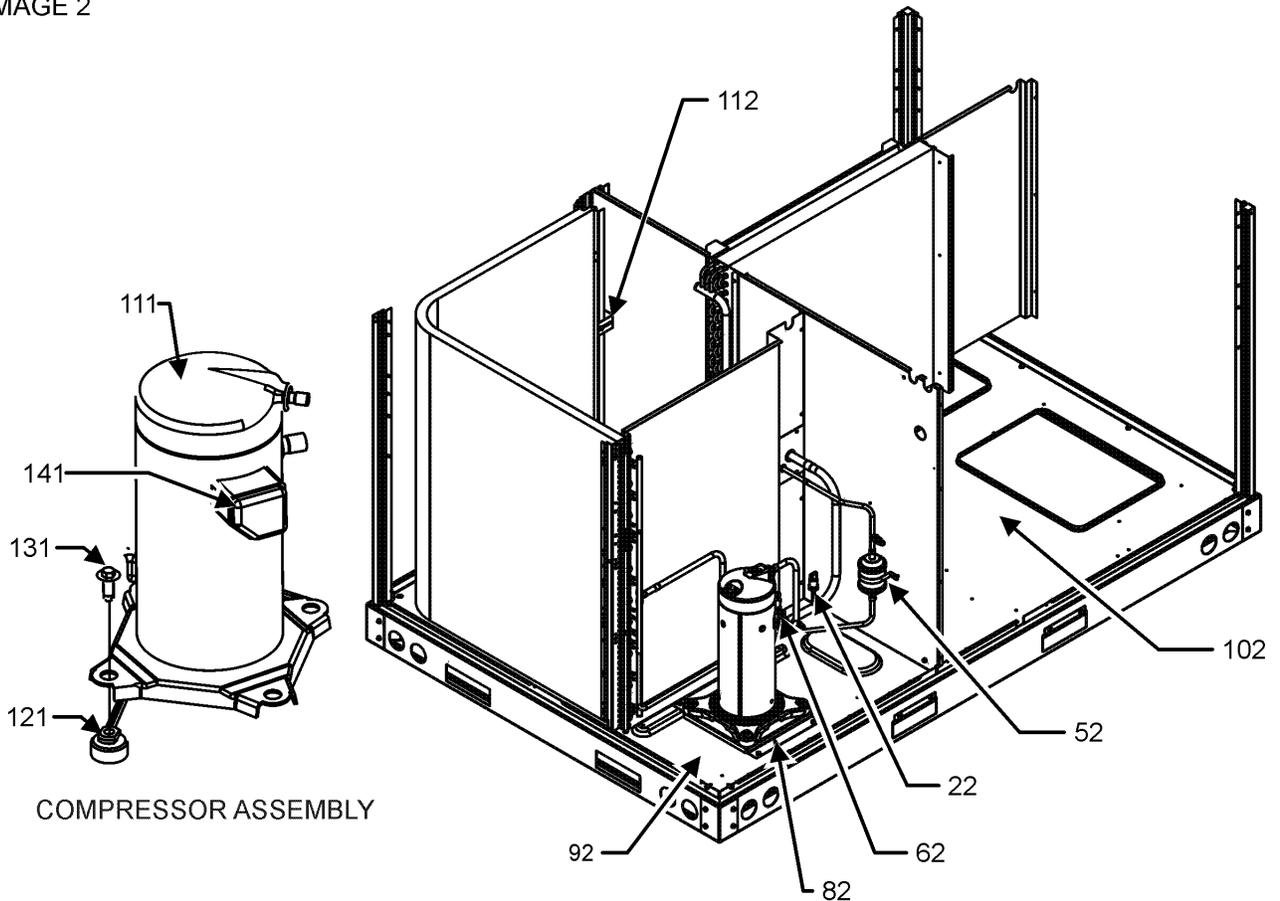

COMPRESSOR ASSEMBLY

Top Panel and Tubing Assembly

Ref. Part

No: No: Description:

Image 1:

11	0121L00235NG	TOP PANEL
21	0131L00061	MOTOR, 1/4 HP, 1SP, 6PL (M3, M7)
21	0131M00837	MOTOR, 1/4 HP, OD (M1, M2, M4, M5, M6, M8, M9, M10, M11, M18, M19, M20, M21, M24, M25, M26, M27, M28)
21	0131M00838	MOTOR, 1/4 HP, OD (M12, M13, M16, M17, M22, M23, M29, M30)
21	0131L00062	Motor, Cond, 1/4 HP, 460V (M14, M15)
31	0163M00006P	ACORN NUT 5/16 HEX BLACK (QTY 4)
41	0152G00000	FAN GRILLE, RAISED
51	17788000083F	PVC CONDUIT 8.25"
61	0150G00004	FAN BLADE
71	0161L00000	VENTURI RING 22"
NS	0163M00004	SCREW #10X3/4", BLACK (QTY 3)
NS	0163M00005P	WASHER, BLACK (.50 OD .218ID) (QTY 4)

Image 2:

12	ZP51K5ETF5130	COMPRESSOR 51000, 208/230/60/3 (M1, M2, M3, M4, M5, M6, M7, M8, M9, M10, M11, M18, M19, M20, M21, M24, M25, M26, M27, M28)
12	ZP51K5ETFD130	COMPRESSOR 51000, 460/60/3 (M12, M13, M14, M15, M16, M17, M22, M23, M29, M30)
22	0130M00087	CUT-OUT SWITCH, LOW PRESSURE
32	B1339533	COMPRESSOR GROMMET (QTY 4)
42	M0221641	TF SHOULDER SCREW (QTY 4)
52	0162R00009	DRIER-FILTER
62	0130M00074	CUT-OUT SWITCH, HIGH PRESSURE
72	0159L00065	COMPRESSOR SCROLL HARNESS
82	0121L00310	COMPRESSOR MOUNTING PLATE
92	0121L01990	BASE PAN, OUTDOOR
102	0121L02619	BASE PAN, INDOOR
112	0121L00936	BRACKET-HAIRPIN END
NS	B1373315	ACCESS FITTING (QTY 2)
NS	0141L00003X	FORK BOARD (QTY 2)
NS	0121L00055	FORK BOARD BRACKET (QTY 4)

Ref. Part

No: No: Description:

Expanded Model Nomenclature

M1 - DSG0600903BBXXAA
M2 - DSG0600903BFXXAA
M3 - DSG0600903BHMCAA
M4 - DSG0600903BHAXAA
M5 - DSG0600903BJXDAA
M6 - DSG0600903BVDDAA
M7 - DSG0600903BVMMAA
M8 - DSG0600903BVXDAA
M9 - DSG0600903BWSXAA
M10 - DSG0600903BWXBAA
M11 - DSG0600903B1DDAA
M12 - DSG0600904BHSNAA
M13 - DSG0600904BVDBAA
M14 - DSG0600904BVMMAA
M15 - DSG0600904BWXCAA
M16 - DSG0600904BXSBA
M17 - DSG0600904BXXBAA
M18 - DSG0601153BFXXAA
M19 - DSG0601153BWDAAA
M20 - DSG0601153BWSNAA
M21 - DSG0601153BXXDAA
M22 - DSG0601154BRDOAA
M23 - DSG0601154BRXDAA
M24 - DSG0601403BFXXAA
M25 - DSG0601403BJBNAA
M26 - DSG0601403BWXOAA
M27 - DSG0601403BXSDAA
M28 - DSG0601403BXSXAA
M29 - DSG0601404BFXXAA
M30 - DSG0601404BWLAAA

Cabinet Assembly

IMAGE 1


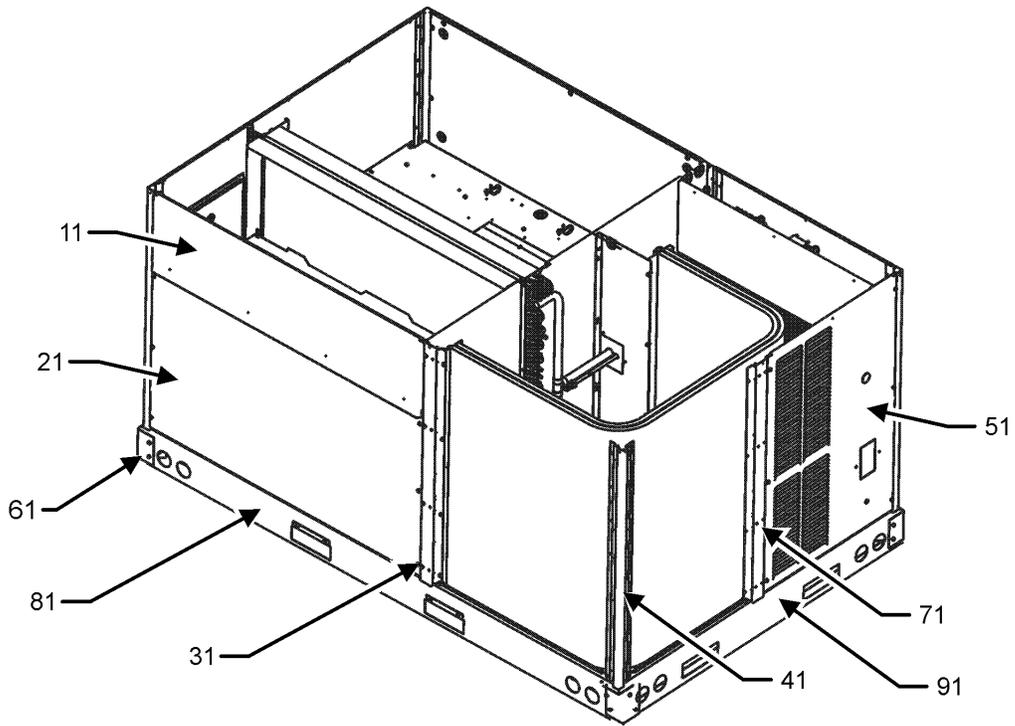


IMAGE 2

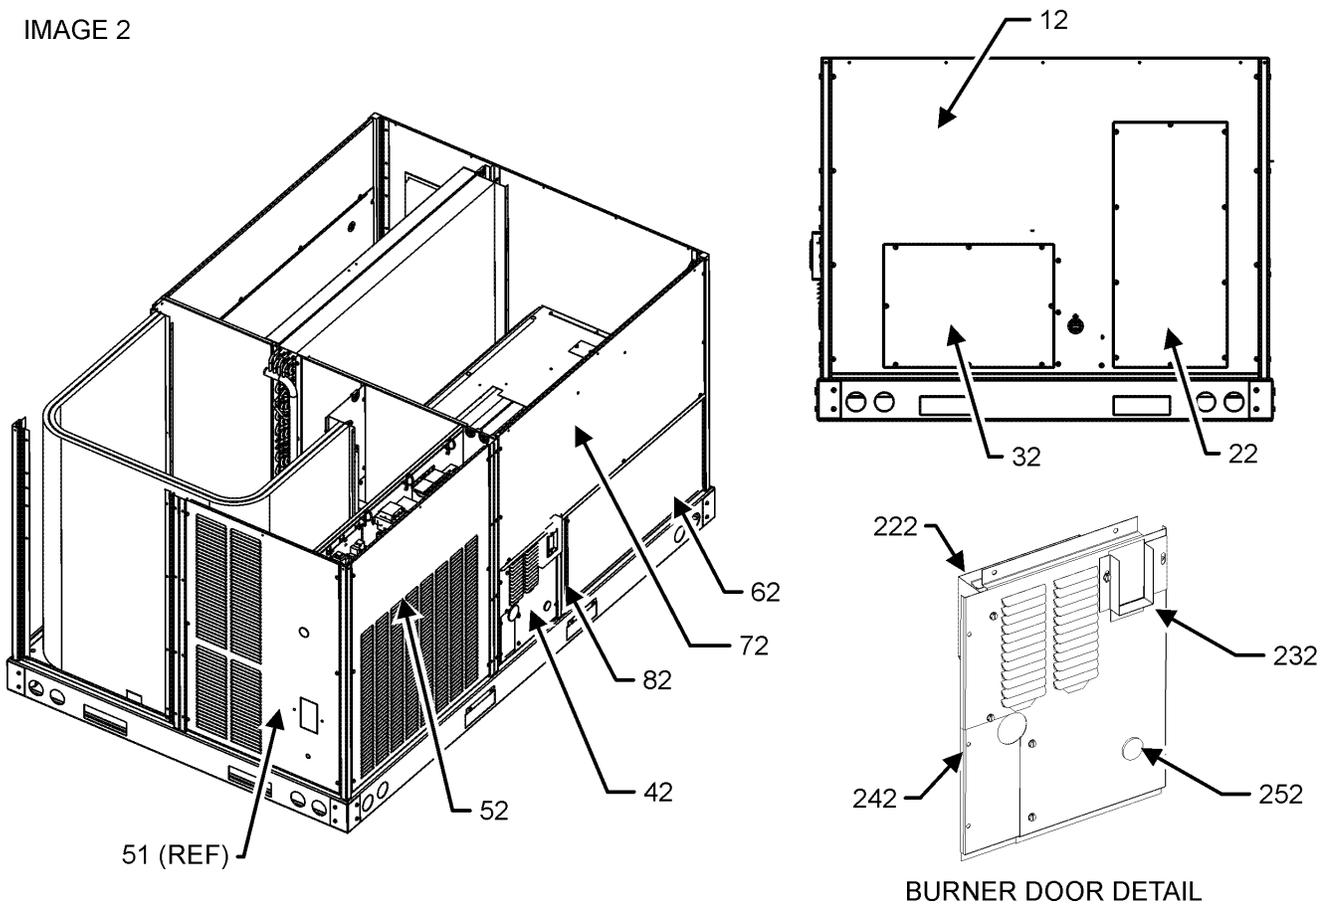

Cabinet Assembly

Ref. Part

No: No: Description:

Image 1:

11	0270L00362NG	FILTER DOOR
21	0121L00976NG	ECONOMIZER DOOR (M1, M3, M4, M6, M7, M8, M9, M10, M11, M12, M13, M14, M15, M16, M17, M19, M20, M21, M26, M27, M28, M30)
31	0121L00233RFNG	POST-SIDE SUPPORT (QTY 2)
41	0121L00237RFNG	CORNER POST (QTY 4)
41	0121L02553RFNG	ROLL FORMED, CORNER POST (M3, M6, M7, M11, M13, M14, M19, M22, M30)
51	0121L00263NG	LOUVERED COMPRESSOR PANEL
51	0121L00836NG	LOUVERED COMPRESSOR PANEL (M3, M4, M5, M9, M10, M11, M12, M15, M19, M20, M22, M23, M25, M26, M30)
61	0121G00301	RAIL CORNER BRACKET (QTY 4)
71	0121L01374RFNG	PNT, RL FMD SIDE POST SUPPORT (M3, M6, M7, M11, M13, M14, M19, M22, M30)
71	0121L01159RFNG	POST-SIDE SUPPORT (M1, M2, M4, M5, M8, M9, M10, M12, M15, M16, M17, M18, M20, M21, M23, M24, M25, M26, M27, M28, M29)
81	0121L00244RF	SIDE RAIL (QTY 2)
91	0121L00245	END RAIL
NS	0121L01309	ECONOMIZER COVER (M2, M5, M18, M22, M23, M24, M25, M29)
NS	0164L00009	GASKET-RUBBER, CPOST (QTY 3)
NS	0164L00011	GASKET-RUBBER, SIDE POST (QTY 3)

Image 2:

12	0121L00236NG	DUCT PANEL
22	0121L00023NG	RETURN DUCT COVER
32	0121L00024NG	SUPPLY DUCT COVER
42	0121L01438NG	BURNER DOOR
52	0121L01121NG	CONTROL PANEL W/LOUVERS (M1, M2, M4, M5, M8, M9, M10, M12, M15, M16, M17, M18, M20, M21, M23, M24, M25, M26, M27, M28, M29)
52	0121L02551NG	PNT, CONTROL DOOR (M3, M6, M7, M11, M13, M14, M19, M22, M30)
62	0121L01108NG	HEAT EXCHANGER DOOR
72	0121L01157NG	BLOWER DOOR
82	0121L01110RFNG	POST-BURNER
222	0121L01439	RAIN SHIELD DOOR
232	0121L01440NG	FLUE COLLAR
242	0121L01441NG	BURNER DOOR PANEL
252	B1392139	VIEW PORT BUSHING, CLEAR 1.00 (M25)
NS	B1910010	GAS LINE GROMMET

Ref. Part

No: No: Description:

Expanded Model Nomenclature


M1 - DSG0600903BBXXAA
M2 - DSG0600903BFXXAA
M3 - DSG0600903BHMCAA
M4 - DSG0600903BHXXAA
M5 - DSG0600903BJXDAA
M6 - DSG0600903BVDDAA
M7 - DSG0600903BVMMAA
M8 - DSG0600903BVXDAA
M9 - DSG0600903BWSXAA
M10 - DSG0600903BWXBAA
M11 - DSG0600903B1DDAA
M12 - DSG0600904BHSNAA
M13 - DSG0600904BVDBAA
M14 - DSG0600904BVMMAA
M15 - DSG0600904BWXCAA
M16 - DSG0600904BXSBA A
M17 - DSG0600904BXXBAA
M18 - DSG0601153BFXXAA
M19 - DSG0601153BWDAAA
M20 - DSG0601153BWSNAA
M21 - DSG0601153BXXDAA
M22 - DSG0601154BRDOAA
M23 - DSG0601154BRXDAA
M24 - DSG0601403BFXXAA
M25 - DSG0601403BJBNAA
M26 - DSG0601403BWXOAA
M27 - DSG0601403BXSDAA
M28 - DSG0601403BXSXAA
M29 - DSG0601404BFXXAA
M30 - DSG0601404BWLAAA

Partition Assembly


Ref. Part No:	No:	Description:	Ref. Part No:	No:	Description:
Image 1:			Expanded Model Nomenclature		
11	0201L00141	TUBING ASSY, COND COIL	M1	-	DSG0600903BBXXAA
21	0202L00020	TUBING ASSY, EVAP COIL	M2	-	DSG0600903BFXXAA
31	0121L00252	BLOCKOFF-EVAPORATOR (M1, M2, M3, M4, M7, M9, M10, M13, M14, M15, M16, M17, M18, M19, M24, M28, M29, M30)	M3	-	DSG0600903BHMCAA
31	0121L00335	BLOCKOFF-EVAPORATOR (M27)	M4	-	DSG0600903BHXAAA
31	0121L00337	BLOCKOFF-EVAPORATOR (M5, M6, M8, M11, M12, M20, M21, M22, M23, M25, M26)	M5	-	DSG0600903BJXDAA
41	0121L00303	FILTER ANGLE-VERTICAL (HAIRPIN SIDE)	M6	-	DSG0600903BVDDAA
51	0121L00287	FILTER ANGLE-VERTICAL (RETURN SIDE)	M7	-	DSG0600903BVMMAA
61	0121L00932	FILTER ANGLE-HORIZONTAL (QTY 2)	M8	-	DSG0600903BVXDAA
71	0121L01255	ANGLE-FILTER CENTER	M9	-	DSG0600903BWSXAA
211	0121L00882	BLOCKOFF-CONDENSER	M10	-	DSG0600903BWXBAA
221	0121L00939	CONDENSER BLOCKOFF PLATE	M11	-	DSG0600903B1DDAA
231	0121L00238	DRAIN PAN SUPPORT	M12	-	DSG0600904BHSNAA
241	0161L00005	DRAIN PAN	M13	-	DSG0600904BVDBAA
251	0121L02123	DECK SIDE CHANNEL	M14	-	DSG0600904BVMMAA
271	0121L00254	COND MOUNTING ANGLE	M15	-	DSG0600904BWXCAA
301	0121L00300	POST-DECK SUPPORT	M16	-	DSG0600904BXSBA A
321	0163L00071	DRAIN PLUG	M17	-	DSG0600904BXXBAA
331	0154L00009	DRAIN PAN GASKET	M18	-	DSG0601153BFXXAA
461	0121L00293	ANGLE-HEAT EXCHANGER BACK (QTY 2)	M19	-	DSG0601153BWDAAA
471	0121L00266	HEAT PANEL CHANNEL (QTY 2)	M20	-	DSG0601153BWSNAA
481	0121L01575	BLOWER DECK	M21	-	DSG0601153BXXDAA
491	0130M00063	PRIMARY LIMIT - GOLD 140° (M1, M2, M3, M4, M5, M6, M7, M8, M9, M10, M11, M12, M13, M14, M15, M16, M17)	M22	-	DSG0601154BRDOAA
491	0130F00035	PRIMARY LIMIT - PURPLE 220° (M24, M25, M26, M27, M28, M29, M30)	M23	-	DSG0601154BRXDAA
501	20162904	PRIMARY LIMIT-TEMPERATURE CONTROL (M18, M19, M20, M21, M22, M23)	M24	-	DSG0601403BFXXAA
521	0121L00937	BRACKET-COND TIE DOWN	M25	-	DSG0601403BJBNA A
NS	0160L00173	AIR FILTER - 14 X 20 X 2 (QTY 4)	M26	-	DSG0601403BWXOAA
NS	0121L01377	BLOWER DECK SUPPORT (M3, M6, M7, M11, M13, M14, M19, M22, M30)	M27	-	DSG0601403BXSDAA
NS	A4568804	GROMMET-D (QTY 4)	M28	-	DSG0601403BXSXAA
NS	0121L00321	SMOKE DETECTOR COVER	M29	-	DSG0601404BFXXAA
			M30	-	DSG0601404BWLAAA

Blower Assembly

BLOWER HOUSING AND MOTOR ASSEMBLY

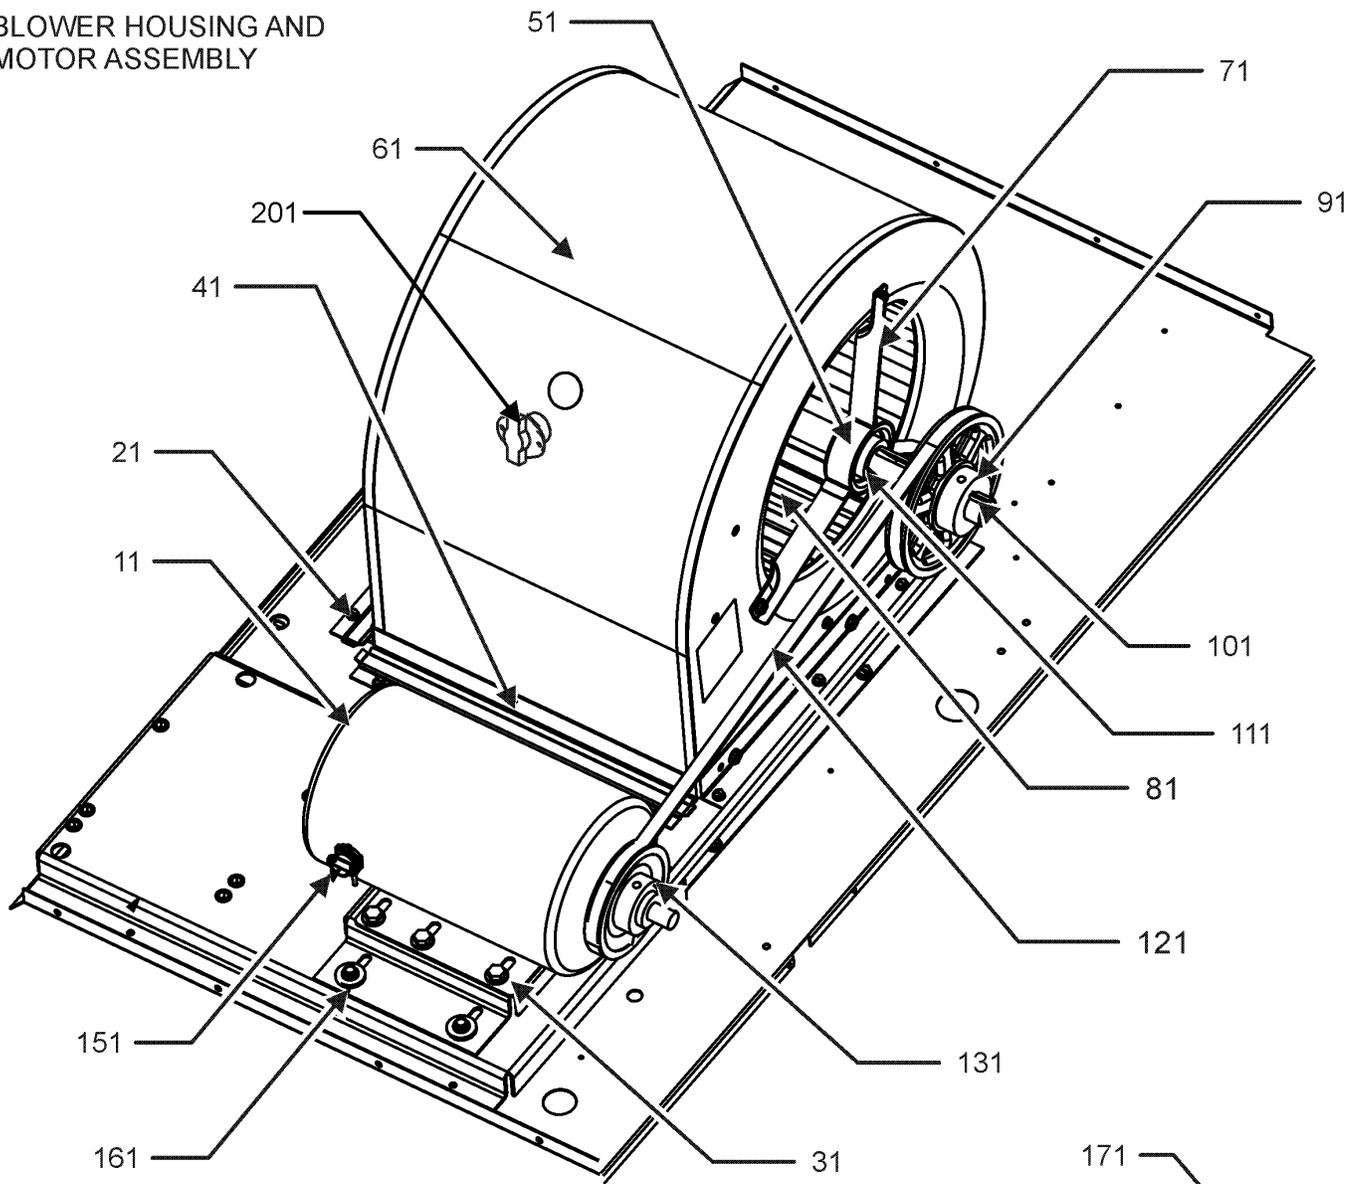

MOUNTING PLATE ASSEMBLY

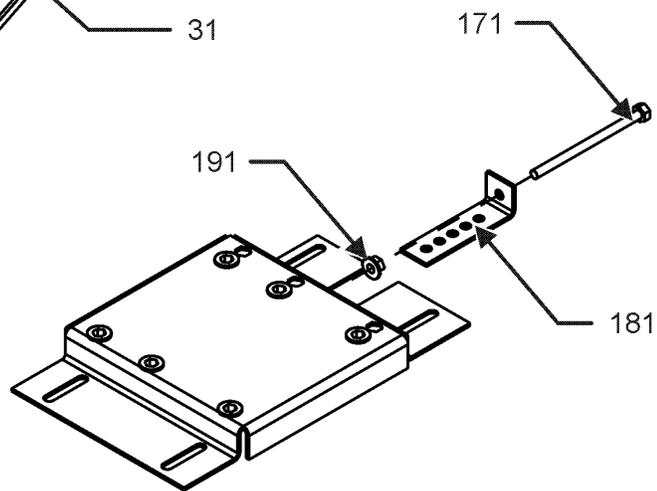

Blower Assembly

Ref. Part

No: No:

Description:

Ref. Part

No: No:

Description:


Image 1:

11	0131L00067	MOTOR, 1 HP BELT DRIVE
21	0121L00297	BLOWER SIDE ANGLE (QTY 3)
31	0121L01619	MOTOR BASE
41	0121L00281	BLOWER MOUNTING ANGLE
51	0163L00005	BELT DRIVE BLOWER SHAFT
61	2539302F	BLOWER HOUSING 11 X 10
71	B3201300	MOUNTING BRACKET BEARING (QTY 2)
81	B1368056	BELT DRIVE BLOWER WHEEL
91	0163L00138	SHEAVE, FIXED AK61H
101	0163M00407	MACHINE KEY, SPECIAL
111	B1399500	BALL BEARING 1.00" (QTY 2)
121	0164L00010	FAN BELT, NOTCHED
131	0163L00012	VARIABLE PITCH SHEAVE VL40
151	B1393726	ELECT. CONNECTING BUSHING
161	B1393738	BOLT 1/4-20 X 3/4" (QTY 4)
171	0163M00045	BOLT 1/4-20 X 4"
181	3225000F	BELT TIGHTENER ANGLE
191	B1393023	NUT / LOCK .25-20
201	0130F00037	PRIMARY LIMIT - GRAY 150° (M18, M19, M20, M21, M22, M23)
201	20162905	PRIMARY LIMIT-YELLOW (M1, M2, M3, M4, M5, M6, M7, M8, M9, M10, M11, M12, M13, M14, M15, M16, M17, M24, M25, M26, M27, M28, M29, M30)
NS	1864703	BLOWER CUT-OFF ASM,5TON,MORRIS
NS	B1398603	STEEL KEY (000158812) 4.5"


Expanded Model Nomenclature

M1 - DSG0600903BBXXAA
M2 - DSG0600903BFXXAA
M3 - DSG0600903BHMCAA
M4 - DSG0600903BHAXAA
M5 - DSG0600903BJXDAA
M6 - DSG0600903BVDDAA
M7 - DSG0600903BVMMAA
M8 - DSG0600903BVXDAA
M9 - DSG0600903BWSXAA
M10 - DSG0600903BWXBAA
M11 - DSG0600903B1DDAA
M12 - DSG0600904BHSNAA
M13 - DSG0600904BVDBAA
M14 - DSG0600904BVMMAA
M15 - DSG0600904BWXCAA
M16 - DSG0600904BXSBA A
M17 - DSG0600904BXXBAA
M18 - DSG0601153BFXXAA
M19 - DSG0601153BWDAA A
M20 - DSG0601153BWSNAA
M21 - DSG0601153BXXDAA
M22 - DSG0601154BRDOAA
M23 - DSG0601154BRXDAA
M24 - DSG0601403BFXXAA
M25 - DSG0601403BJBNA A
M26 - DSG0601403BWXOAA
M27 - DSG0601403BXSDAA
M28 - DSG0601403BXSXAA
M29 - DSG0601404BFXXAA
M30 - DSG0601404BWLAAA

Control Box Assembly

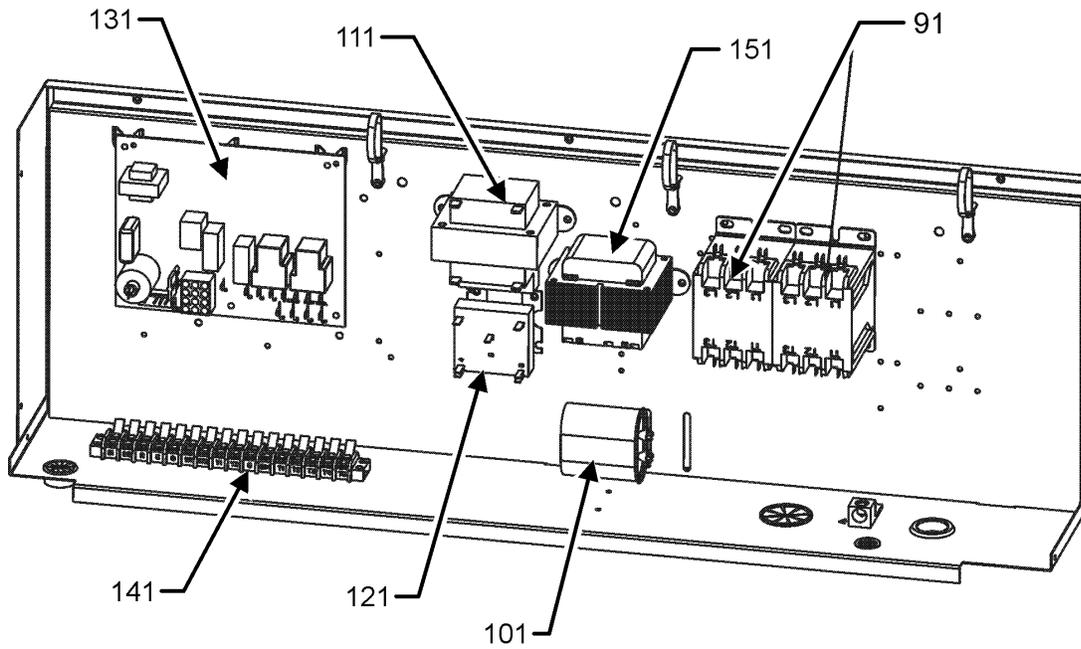


CONTROL BOX FOR MODELS WITH DDC CONTROL/PHASE MONITOR

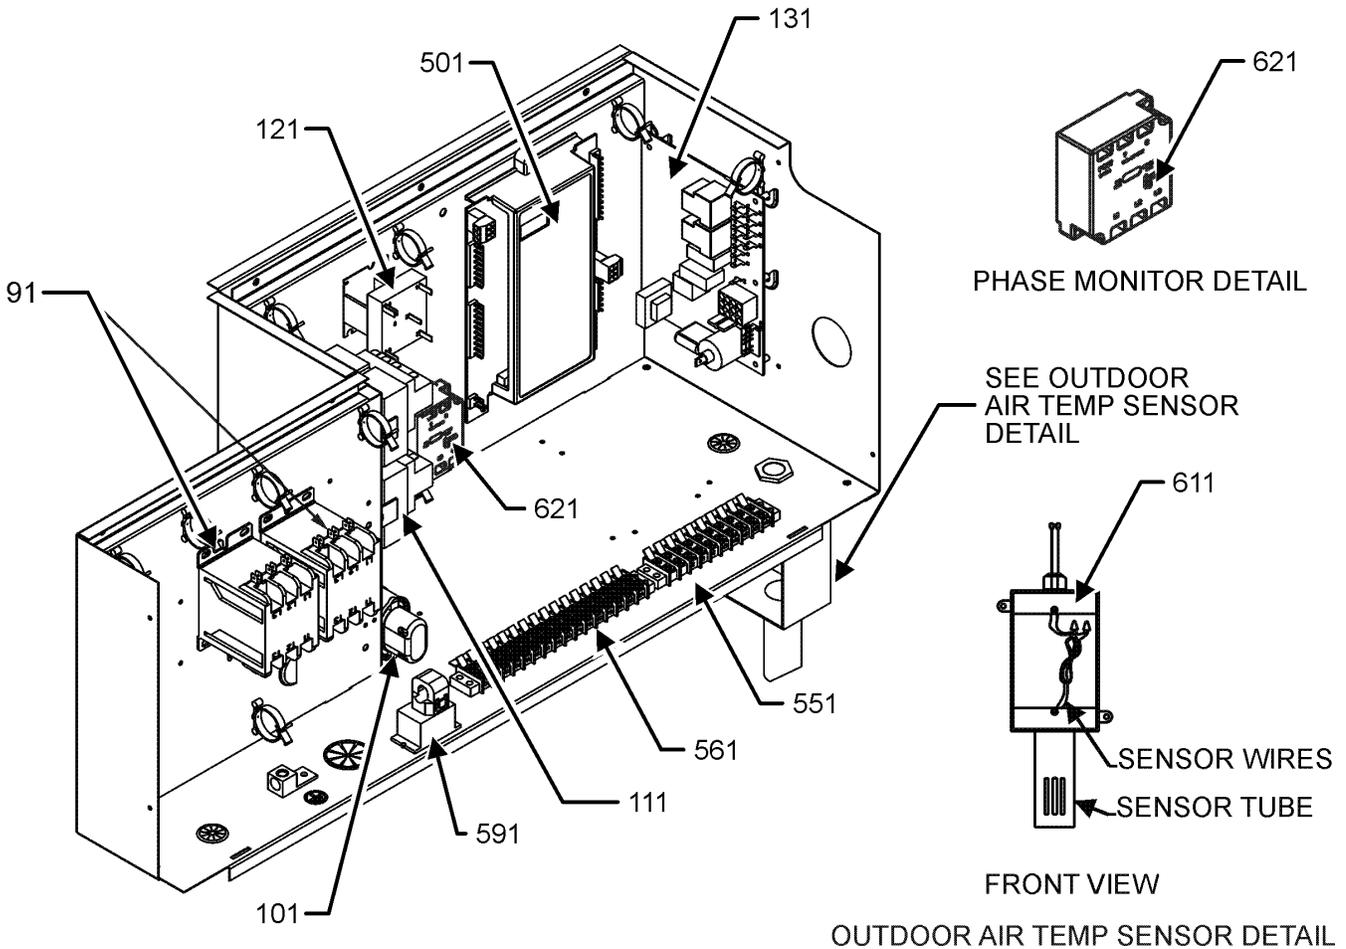

Control Box Assembly

Ref. Part No:	No:	Description:	Ref. Part No:	No:	Description:
Image 1:			Image 1:		
91	CONT3P025024V	CONTACTOR 25 AMP, 3P, 24V (M12, M13, M14, M15, M16, M17, M22, M23, M29, M30)	NS	0259L00558	WIRING HARNESS (M11)
91	CONT3P030024V	CONTACTOR 30 AMP, 3P, 24V (M1, M2, M3, M4, M5, M6, M7, M8, M9, M10, M11, M18, M19, M20, M21, M24, M25, M26, M27, M28)	Expanded Model Nomenclature		
101	CAP100000440LA	CAP 10 MFD/440V/OVAL (M3, M4, M5, M6, M7, M8, M9, M10, M11, M19, M20, M21, M25, M26, M27, M28)	M1	-	DSG0600903BBXXAA
101	CAP100000370LA	CAPACITOR 10/370V (M1, M2, M18, M24)	M2	-	DSG0600903BFXXAA
101	CAP050000440LA	CAPACITOR 5/440V (M12, M13, M14, M15, M16, M17, M22, M23, M29, M30)	M3	-	DSG0600903BHMCAA
111	0130M00138	TRANSFORMER 208/230, 24V (M1, M2, M3, M4, M5, M6, M7, M8, M9, M10, M11, M18, M19, M20, M21, M24, M25, M26, M27, M28)	M4	-	DSG0600903BHXAAA
111	0130M00146	TRANSFORMER 480V TO 230V, 150VA (M12, M13, M14, M15, M16, M17, M22, M23, M29, M30)	M5	-	DSG0600903BJXDAA
121	0130M00025	RELAY, SPDT	M6	-	DSG0600903BVDDAA
131	PCBAG123	PCB, IGNITION, DSI	M7	-	DSG0600903BVMMAA
141	0130M00038	TERMINAL BOARD (M3, M4, M5, M6, M7, M8, M9, M10, M11, M12, M13, M14, M15, M16, M17, M19, M20, M21, M25, M26, M27, M28, M30)	M8	-	DSG0600903BVXDAA
151	0130M00145	TRANSFORMER 480V to 24V, 75VA (M12, M13, M14, M15, M16, M17, M22, M23, M29, M30)	M9	-	DSG0600903BWSXAA
501	PCBCG100	DDC Controller (M1, M2, M18, M22, M23, M24, M29)	M10	-	DSG0600903BWXBAA
551	0130M00274	TERMINAL BOARD (M1, M2, M18, M22, M23, M24, M29)	M11	-	DSG0600903B1DDAA
561	0130M00275	TERMINAL BOARD (M1, M2, M18, M22, M23, M24, M29)	M12	-	DSG0600904BHSNAA
591	0259L00368	CURRENT SWITCH WITH TERMS (M1, M2, M18, M22, M23, M24, M29)	M13	-	DSG0600904BVDBAA
611	0130L00108	OD Air Temp Sensor (M1, M2, M18, M22, M23, M24, M29)	M14	-	DSG0600904BVMMAA
621	0130L00105	PHASE MONITOR (M25)	M15	-	DSG0600904BWXCAA
NS	B821700	CAPACITOR BOOT (M1, M2, M18, M22, M23, M24, M29)	M16	-	DSG0600904BXSBA A
NS	20520901	CAPACITOR STRAP	M17	-	DSG0600904BXXBAA
NS	0259L00074	CONTROL HARNESS (M1, M2, M3, M4, M5, M6, M7, M8, M9, M10, M11, M18, M19, M20, M21, M24, M25, M26, M27, M28)	M18	-	DSG0601153BFXXAA
NS	0259L00075	CONTROL HARNESS (M12, M13, M14, M15, M16, M17, M22, M23, M29, M30)	M19	-	DSG0601153BWDAAA
NS	0121L01468	CONTROL, PH MON BOX (M25)	M20	-	DSG0601153BWSNAA
NS	0121L01467	CONTROL, PH MON LID (M25)	M21	-	DSG0601153BXXDAA
NS	0130L00112	Duct Temp Sensor (M1, M2, M18, M22, M23, M24, M29)	M22	-	DSG0601154BRDOAA
NS	0259L00179	HARNESS, ECONOMIZER	M23	-	DSG0601154BRXDAA
NS	0259L00125	HARNESS, WIRING	M24	-	DSG0601403BFXXAA
NS	0259L00092	HARNESS-SMOKE DETECTOR SENSOR (M22, M26)	M25	-	DSG0601403BJBNA A
NS	0130L00107	ROOM SENSOR (M1, M2, M18, M22, M23, M24, M29)	M26	-	DSG0601403BWXOAA
NS	0259L00427	WIRE ASSY (M3, M7, M14, M30)	M27	-	DSG0601403BXSDAA
NS	0259L00428	WIRE ASSY (M3, M7, M14, M25, M30)	M28	-	DSG0601403BXSXAA
NS	0259L00447	WIRE ASSY (M25)	M29	-	DSG0601404BFXXAA
NS	0259L00500	WIRE HARNESS (M22, M23)	M30	-	DSG0601404BWLAAA
NS	0259L00090	WIRE HARNESS-SMOKE DETECTOR (M5, M6, M8, M11, M12, M20, M21, M25, M26, M27)			
NS	0259L00054	WIRING HARNESS			
NS	0259L00065	WIRING HARNESS			
NS	0259L00069	WIRING HARNESS			
NS	0259L00070	WIRING HARNESS (M3, M7)			

Heat Exchange Assembly

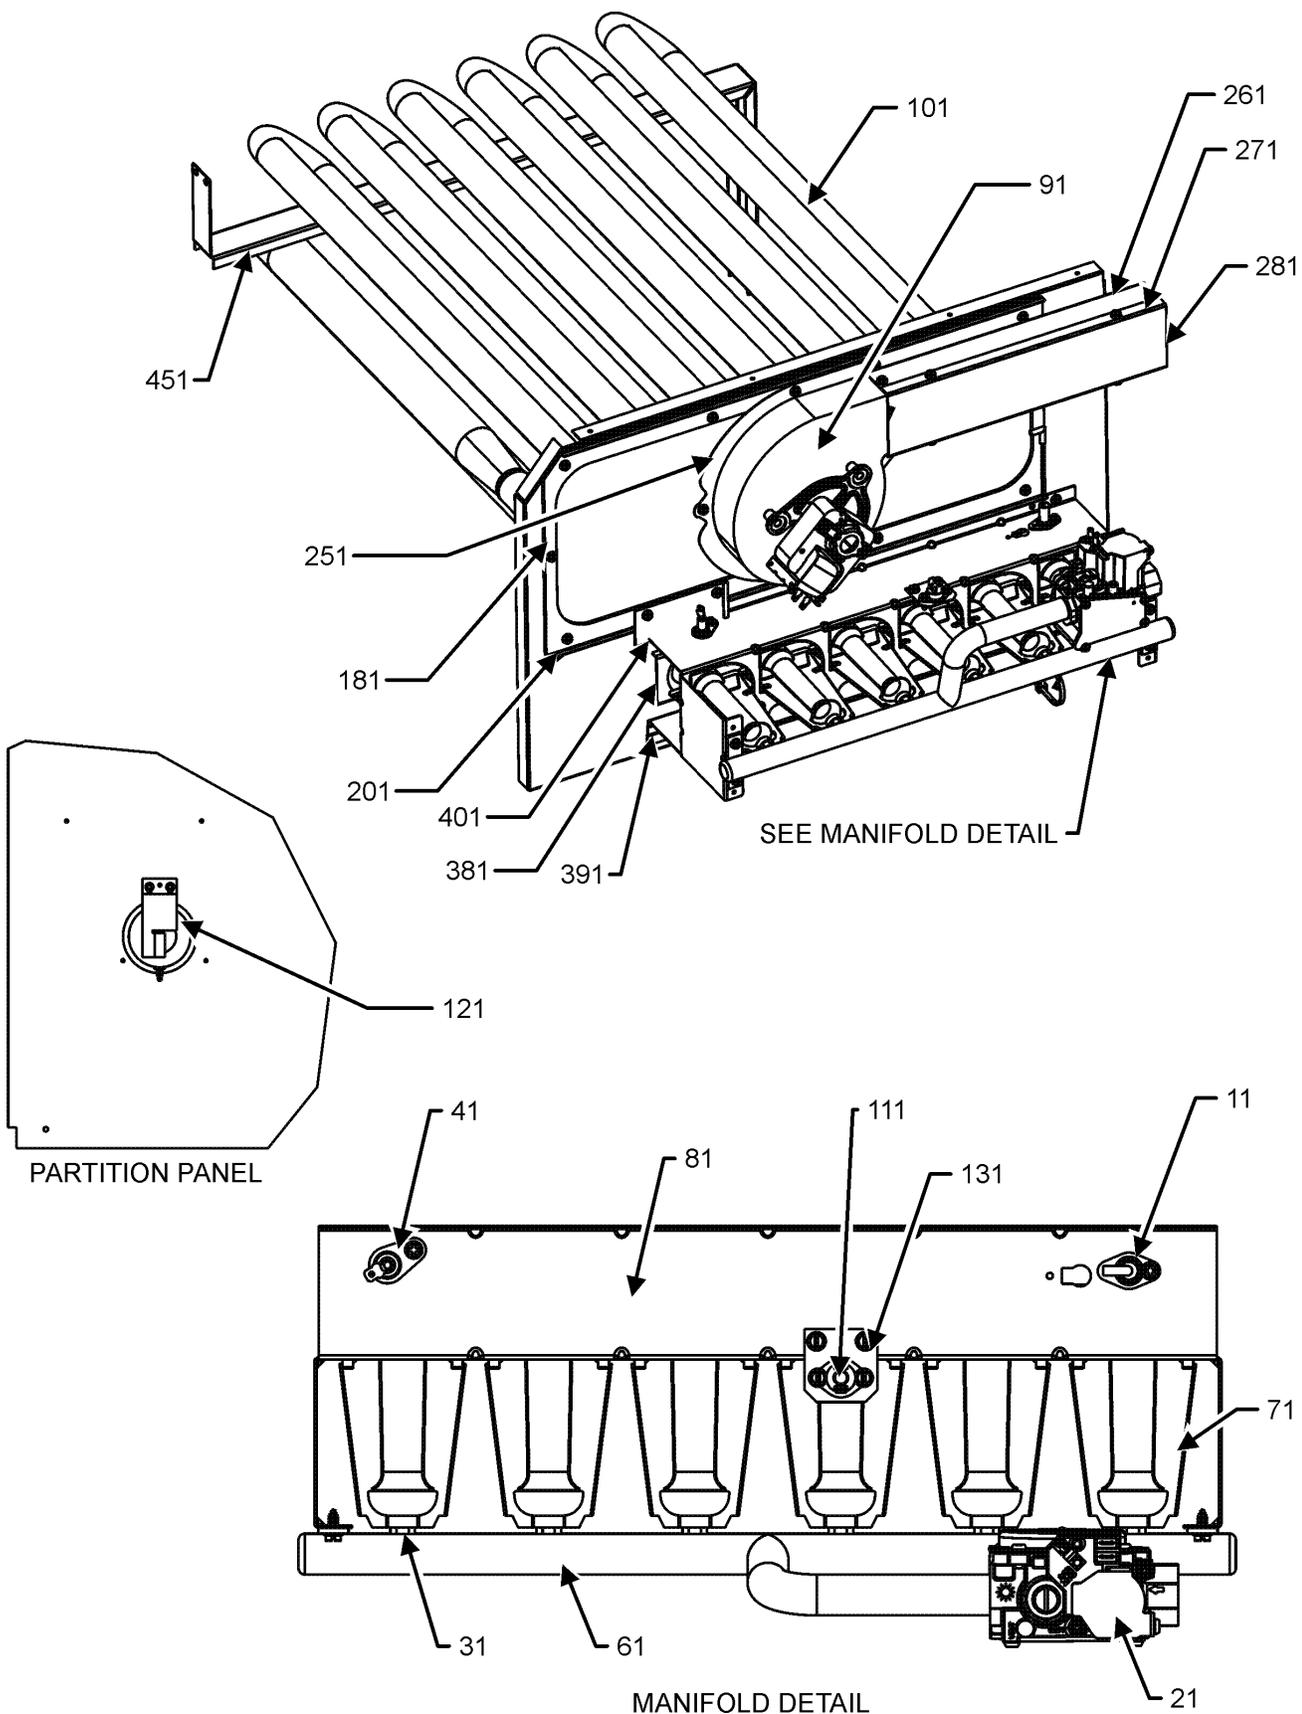


Heat Exchange Assembly

Ref. Part No:	No:	Description:	Ref. Part No:	No:	Description:
Image 1:			Expanded Model Nomenclature		
11	20261709	IGNITOR	M1	-	DSG0600903BBXXAA
21	0151F00000P	GAS VALVE	M2	-	DSG0600903BFXXAA
31	0163F00018	ORIFICE (QTY 4)	M3	-	DSG0600903BHMCAA
41	0130F00010	FLAME SENSOR	M4	-	DSG0600903BHAXAA
61	0163L00026	MANIFOLD-GAS 4 BURNER (M1, M2, M3, M4, M5, M6, M7, M8, M9, M10, M11, M12, M13, M14, M15, M16, M17)	M5	-	DSG0600903BJXDAA
61	0163L00029	MANIFOLD-GAS, 5 BURNER (M18, M19, M20, M21, M22, M23)	M6	-	DSG0600903BVDDAA
61	0163L00025	MANIFOLD-GAS, 6 BURNER (M24, M25, M26, M27, M28, M29, M30)	M7	-	DSG0600903BVMMAA
71	10735102	BECKETT BURNER (QTY 4)	M8	-	DSG0600903BVXDAA
81	20190412	BURNER BRACKET 4B (M1, M2, M3, M4, M5, M6, M7, M8, M9, M10, M11, M12, M13, M14, M15, M16, M17)	M9	-	DSG0600903BWSXAA
81	20190413	BURNER BRACKET 5B (M18, M19, M20, M21, M22, M23)	M10	-	DSG0600903BWXBAA
81	0121F00145	BURNER BRACKET 6B (M24, M25, M26, M27, M28, M29, M30)	M11	-	DSG0600903B1DDAA
91	0131M00121	BLOWER-ID COMBUSTION	M12	-	DSG0600904BHSNAA
101	0270L00110	PART/TUBE ASSY 5B (M18, M19, M21, M22, M23)	M13	-	DSG0600904BVDBAA
101	0270L00111	PART/TUBE ASSY 5B (M20)	M14	-	DSG0600904BVMMAA
101	0270L00072	PART/TUBE ASSY 6B (M24, M25, M26, M29)	M15	-	DSG0600904BWXCAA
101	0270L00104	PART/TUBE ASSY 6B (M27, M28, M30)	M16	-	DSG0600904BXSBAA
101	0270L00092	PART/TUBE ASSY, 4B (M1, M2, M3, M4, M5, M6, M7, M8, M10, M11, M13, M14, M15, M17)	M17	-	DSG0600904BXXBAA
101	0270L00105	PART/TUBE ASSY, 4B (M9, M12, M16)	M18	-	DSG0601153BFXXAA
111	10123532	MANUAL RESET LIMIT 350°F	M19	-	DSG0601153BWDAAA
121	11112501	PRESSURE SWITCH	M20	-	DSG0601153BWSNAA
131	0121L00053	BRACKET-FLAME ROLLOUT	M21	-	DSG0601153BXXDAA
181	0154L00018	ID BLOWER PLATE GASKET 4 BRNR (M1, M2, M3, M4, M5, M6, M7, M8, M9, M10, M11, M12, M13, M14, M15, M16, M17)	M22	-	DSG0601154BRDOAA
181	0154L00017	ID BLOWER PLATE GASKET 6 BRNR (M18, M19, M20, M21, M22, M23, M24, M25, M26, M27, M28, M29, M30)	M23	-	DSG0601154BRXDAA
201	0121L00241	ID BLOWER PLATE (M24, M25, M26, M27, M28, M29, M30)	M24	-	DSG0601403BFXXAA
201	0121L00284	ID BLOWER PLATE 4 BRNR (M1, M2, M3, M4, M5, M6, M7, M8, M9, M10, M11, M12, M13, M14, M15, M16, M17)	M25	-	DSG0601403BJBNAA
201	0121L00318	ID BLOWER PLATE 6 BRNR (M18, M19, M20, M21, M22, M23)	M26	-	DSG0601403BWXOAA
251	0154L00020	GASKET-ID BLOWER	M27	-	DSG0601403BXSDAA
261	0121L00277	FLUE-CHANNEL	M28	-	DSG0601403BXSXAA
271	0121L00278	FLUE-SIDE COVER	M29	-	DSG0601404BFXXAA
281	0163L00072	SCREEEN-FLUE	M30	-	DSG0601404BWLAAA
381	11072203	ORIFICE SHIELD (M1, M2, M3, M4, M5, M6, M7, M8, M9, M10, M11, M12, M13, M14, M15, M16, M17)			
381	11072204	ORIFICE SHIELD (M18, M19, M20, M21, M22, M23)			
381	11072205	ORIFICE SHIELD (M24, M25, M26, M27, M28, M29, M30)			
391	0121L00267	BRACKET-BURNER SLIDE			
401	0121L00268	RETAINER-BURNER ASSY (M27, M28, M30)			
451	0121L02617	SUPPORT, BRACKET			
NS	0121L01576	SUPPORT BRACKET			


ACCESSORY PARTS LIST

NOTE: NOT ALL OPTIONS AVAILABLE FOR ALL PRODUCTS


1 LOW AMBIENT KITS

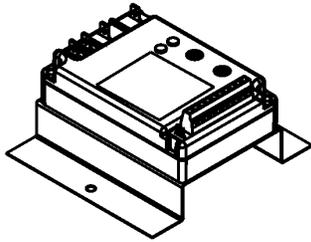


2 GFCI CONVENIENCE OUTLET

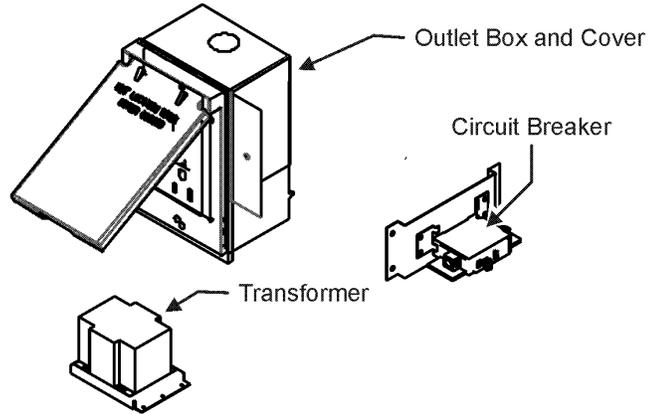


3 DISCONNECT MODULE (NON-FUSED)

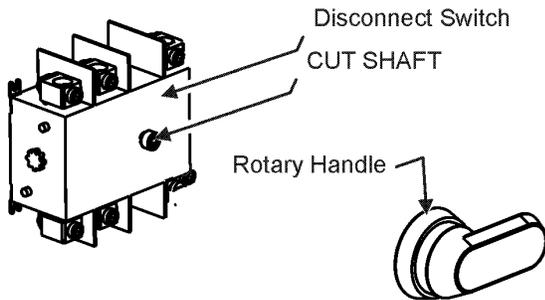


4 SMOKE DETECTORS

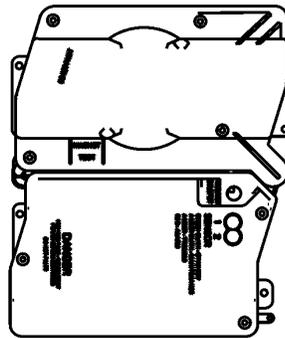


5 DDC CONTROL

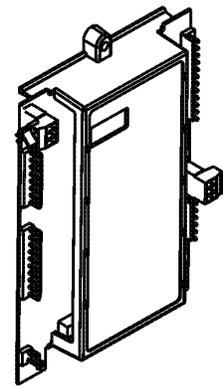

6 HINGED DOOR ASSEMBLIES

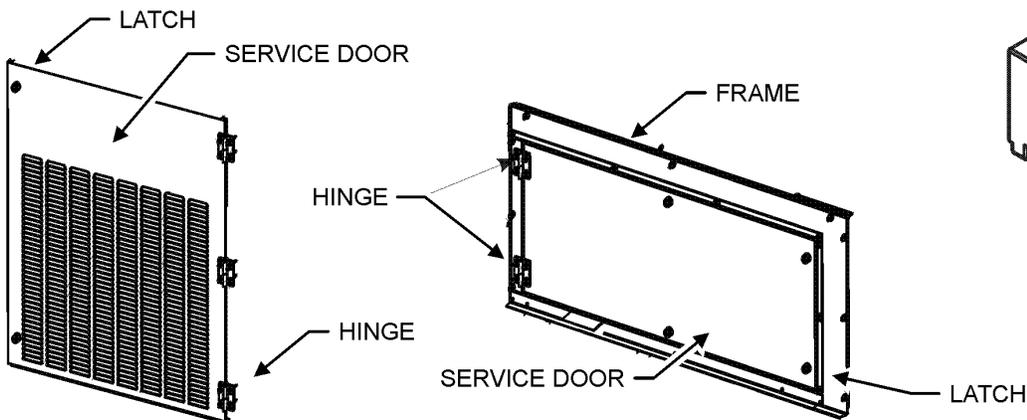

7 PHASE MONITOR

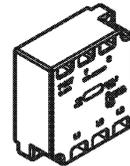

Accessory List

Ref. Part No:	Description:	Ref. Part No:	Description:
Image 1:		Expanded Model Nomenclature	
NS 1036609C	3-6 TON DFLOW ECONOMIZER (M5, M25)	M1 - DSG0600903BBXXAA	
NS DDNECNJ3672C	3-6 TON DFLOW ECONOMIZER (M6, M7, M8, M9, M10, M13, M14, M15, M19, M20, M26, M30)	M2 - DSG0600903BFXXAA	
NS 10366D09C	3-6 TON DFLOW ECONOMIZER, DDC (M2, M18, M22, M23, M24, M29)	M3 - DSG0600903BHMCAA	
NS 0121L01934	BRACKET SMOKE DETECTOR (M5, M6, M8, M11, M12, M20, M21, M22, M23, M25, M26, M27)	M4 - DSG0600903BHXAAA	
NS 0121L00316	BRACKET-CONV OUTLET MOUNT (M4, M7, M10, M12, M13, M14, M16, M17, M19, M20, M22, M25, M26, M30)	M5 - DSG0600903BJXDAA	
NS 0121L00835	BRACKET-DISCONNECT SWITCH (M3, M4, M5, M9, M10, M11, M12, M15, M19, M20, M22, M23, M25, M26, M30)	M6 - DSG0600903BVDDAA	
NS 0130M00065	CIRCUIT BREAKER, CONVENIENCE OUTLET (M7, M10, M12, M13, M14, M16, M17, M20, M22, M25, M26)	M7 - DSG0600903BVMMAA	
NS 0121L00837NG	DISCONNECT COVER (M3, M4, M5, M9, M10, M11, M12, M15, M19, M20, M22, M23, M25, M26, M30)	M8 - DSG0600903BVXDAA	
NS 0130L00012	GANG BOX-GFCI OUTLET (M4, M7, M10, M12, M13, M14, M16, M17, M19, M20, M22, M25, M26, M30)	M9 - DSG0600903BWSXAA	
NS 0130L00039	HANDLE, ROTARY (M3, M4, M5, M9, M10, M11, M12, M15, M19, M20, M22, M23, M25, M26, M30)	M10 - DSG0600903BWXBAA	
NS 0163M00307	HINGE, LEFT HAND (M3, M6, M7, M11, M13, M14, M19, M22, M30)	M11 - DSG0600903B1DDAA	
NS 0163M00308	HINGE, RIGHT HAND (M3, M6, M7, M11, M13, M14, M19, M22, M30)	M12 - DSG0600904BHSNAA	
NS 0163M00360	LATCH (M3, M6, M7, M11, M13, M14, M19, M22, M30)	M13 - DSG0600904BVDBAA	
NS 0130M00058	LOW AMBIENT KIT (M14, M15)	M14 - DSG0600904BVMMAA	
NS 0121L02527NG	PNT, BLOWER DOOR BACK (M3, M6, M7, M11, M13, M14, M19, M22, M30)	M15 - DSG0600904BWXCAA	
NS 0121L02509NG	PNT, BLOWER DOOR FRAME (M3, M6, M7, M11, M13, M14, M19, M22, M30)	M16 - DSG0600904BXSBA	
NS 0121L02526NG	PNT, BLOWER DOOR FRONT (M3, M6, M7, M11, M13, M14, M19, M22, M30)	M17 - DSG0600904BXXBAA	
NS 0121L02551NG	PNT, CONTROL DOOR (M3, M6, M7, M11, M13, M14, M19, M22, M30)	M18 - DSG0601153BFXXAA	
NS 0161G00012	POWER OUTLET BOX (M4, M7, M10, M12, M13, M14, M16, M17, M19, M20, M22, M25, M26, M30)	M19 - DSG0601153BWDAAA	
NS 0130L00103	RECEPTACLE-GFCI OUTLET (M4, M7, M10, M12, M13, M14, M16, M17, M19, M20, M22, M25, M26, M30)	M20 - DSG0601153BWSNAA	
NS RS400	REMOTE SENSOR (M11)	M21 - DSG0601153BXXDAA	
NS SP400	SENSOR PACK (M11)	M22 - DSG0601154BRDOAA	
NS 0130L00042	SHAFT, CUT (M3, M4, M5, M9, M10, M11, M12, M15, M19, M20, M22, M23, M25, M26, M30)	M23 - DSG0601154BRXDAA	
NS 0130L00049	SHAFT, DISCONNECT (M3, M4, M5, M9, M10, M11, M12, M15, M19, M20, M22, M23, M25, M26, M30)	M24 - DSG0601403BFXXAA	
NS D4120	SMOKE DETECTOR, PHOTO 4WIRE (M5, M6, M8, M11, M12, M20, M21, M22, M23, M25, M26, M27)	M25 - DSG0601403BJBNAA	
NS D4S	SMOKE DETECTOR, SENSOR ONLY (M22, M26)	M26 - DSG0601403BWXOAA	
NS ECP400-5	SURVEYOR ECP (M11)	M27 - DSG0601403BXSDAA	
NS 0130L00046	SWITCH-DISCONNECT 60A (M3, M4, M5, M9, M10, M11, M12, M15, M19, M20, M22, M23, M25, M26, M30)	M28 - DSG0601403BXSXAA	
NS 0130M00061	TRANSFORMER, CONVENIENCE OUTLET (M7, M10, M12, M13, M14, M16, M17, M20, M22, M25, M26)	M29 - DSG0601404BFXXAA	
NS 0259L00558	WIRE HARNESS (M11)	M30 - DSG0601404BWLAAA	