



*R-32 MULTI-POSITION, VARIABLE-SPEED,  
ECM-BASED AIR HANDLER  
WITH INTERNAL TXV  
COMFORTBRIDGE™ COMPATIBLE  
1½ TO 5 TONS*


**Contents**

Air Handler Nomenclature..... 2  
 Heater Kit Nomenclature..... 2  
 Product Specifications..... 3  
 Dimensions..... 4  
 Airflow Data..... 5  
 Heat Kit Data..... 6  
 Wiring Diagram..... 8  
 Accessories..... 9





**Product Features**

- Internal factory-installed thermal expansion valves for cooling and heat pump applications
- Variable-speed ECM blower motor
- Compatible with Goodman smart thermostat and other Goodman communicating equipment
- Auto configuration of the airflow and tonnage in communicating mode
- All-aluminum evaporator coil
- Provides constant CFM over a wide range of static pressure conditions independent of duct system
- CFM indicator
- Fault recall of six most recent faults
- Provides adjustable low CFM for efficient fan-only operation
- Improved humidity and comfort control
- Built-in compatibility with multi-stage heat pump and cooling applications
- Factory installed R-32 sensor designed for the lifespan of the coil
- Optimized for the use with R-32 refrigerant
- UL 60335 2-40 Compliant
- AHRI certified; ETL listed
- Cabinet air leakage less than 2.0% at 1.0 inch H<sub>2</sub>O when tested in accordance with ASHRAE standard 193
- Cabinet air leakage less than 1.4% at 0.5 inch H<sub>2</sub>O when tested in accordance with ASHRAE standard 193
- 3 kW – 25 kW electric heater kits
- Horizontal or vertical configuration capabilities
- 21" depth for easier attic access
- DecaBDE-free thermoplastic drain pan with secondary drain connections
- Screw-less sides and back helps to reduce condensation when installed in humid locations
- Foil-faced insulation covers the internal casing to reduce cabinet condensation
- Galvanized, leather grain-embossed finish
- Glue-less cabinet insulation retention
- Tool-less filter access




\* Complete warranty details available from your local dealer or at [www.franklinhvacsystems.com](http://www.franklinhvacsystems.com). To receive the 10-Year Parts Limited Warranty, online registration must be completed within 60 days of installation. Online registration and some of the additional requirements are not required in Florida, California, or Québec. The duration of warranty coverage in Texas and Florida differs in some cases. Other limitations and exclusions apply; refer to complete warranty details for a full list of limitations and exclusions.

NOMENCLATURE

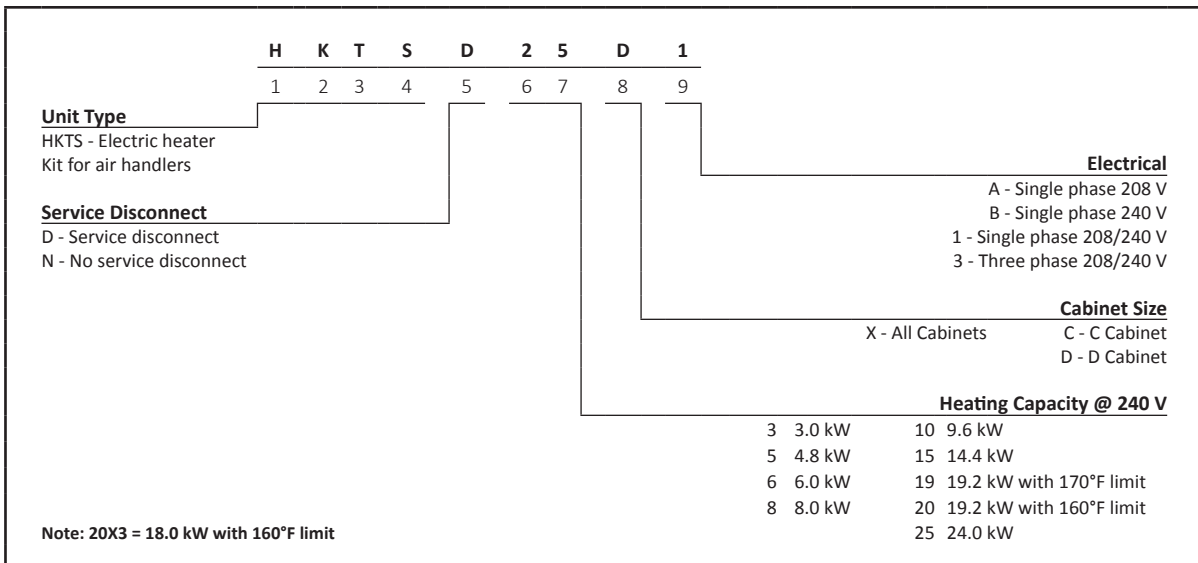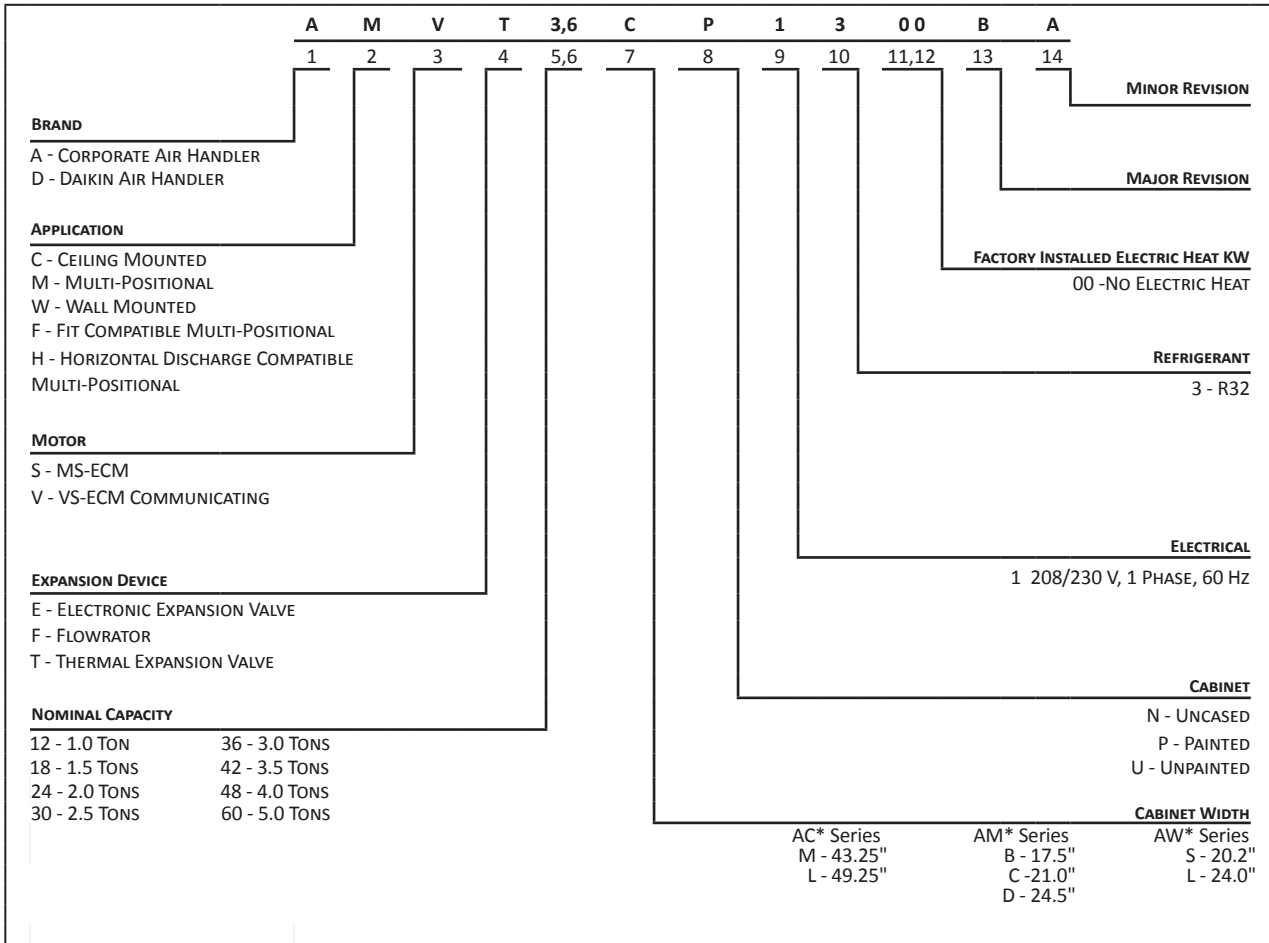

	AMVT 24BP1300	AMVT 30BP1300	AMVT 36BP1300	AMVT 36CP1300	AMVT 42CP1300	AMVT 48CP1300	AMVT 60DP1300
<b>NOMINAL RATINGS</b>							
Cooling (Btu/h)	24,000	30,000	36,000	36,000	42,000	48,000	60,000
<b>BLOWER</b>							
Diameter	10"	10"	10"	10"	10"	10"	11"
Width	6"	6"	6"	8"	8"	10"	10"
<b>REFRIGERANT LINE CONNECTION SIZE</b>							
Liquid	3/8"	3/8"	3/8"	3/8"	3/8"	3/8"	3/8"
Suction	3/4"	3/4"	3/4"	3/4"	3/4"	7/8"	7/8"
Coil Drain Connect FPT	3/4"	3/4"	3/4"	3/4"	3/4"	3/4"	3/4"
<b>ELECTRICAL DATA</b>							
Voltage	208/240	208/240	208/240	208/240	208/240	208/240	208/240
Min Circuit Ampacity	4.9/4.9	4.9/4.9	6.5/6.5	6.5/6.5	6.5/6.5	6.5/6.5	8.6/8.6
Max. Overcurrent Device (amps)	15/15	15/15	15/15	15/15	15/15	15/15	15/15
Min. / Max VAC	197 / 253	197 / 253	197 / 253	197 / 253	197 / 253	197 / 253	197 / 253
<b>Blower Motor</b>							
Blower Motor (FLA)	3.9	3.9	5.2	5.2	5.2	5.2	6.9
Blower Motor (HP)	1/2	1/2	3/4	3/4	3/4	3/4	1
<b>SHIP WEIGHT (LBS)</b>	117	134	134	158	158	158	172

**DIMENSIONS**

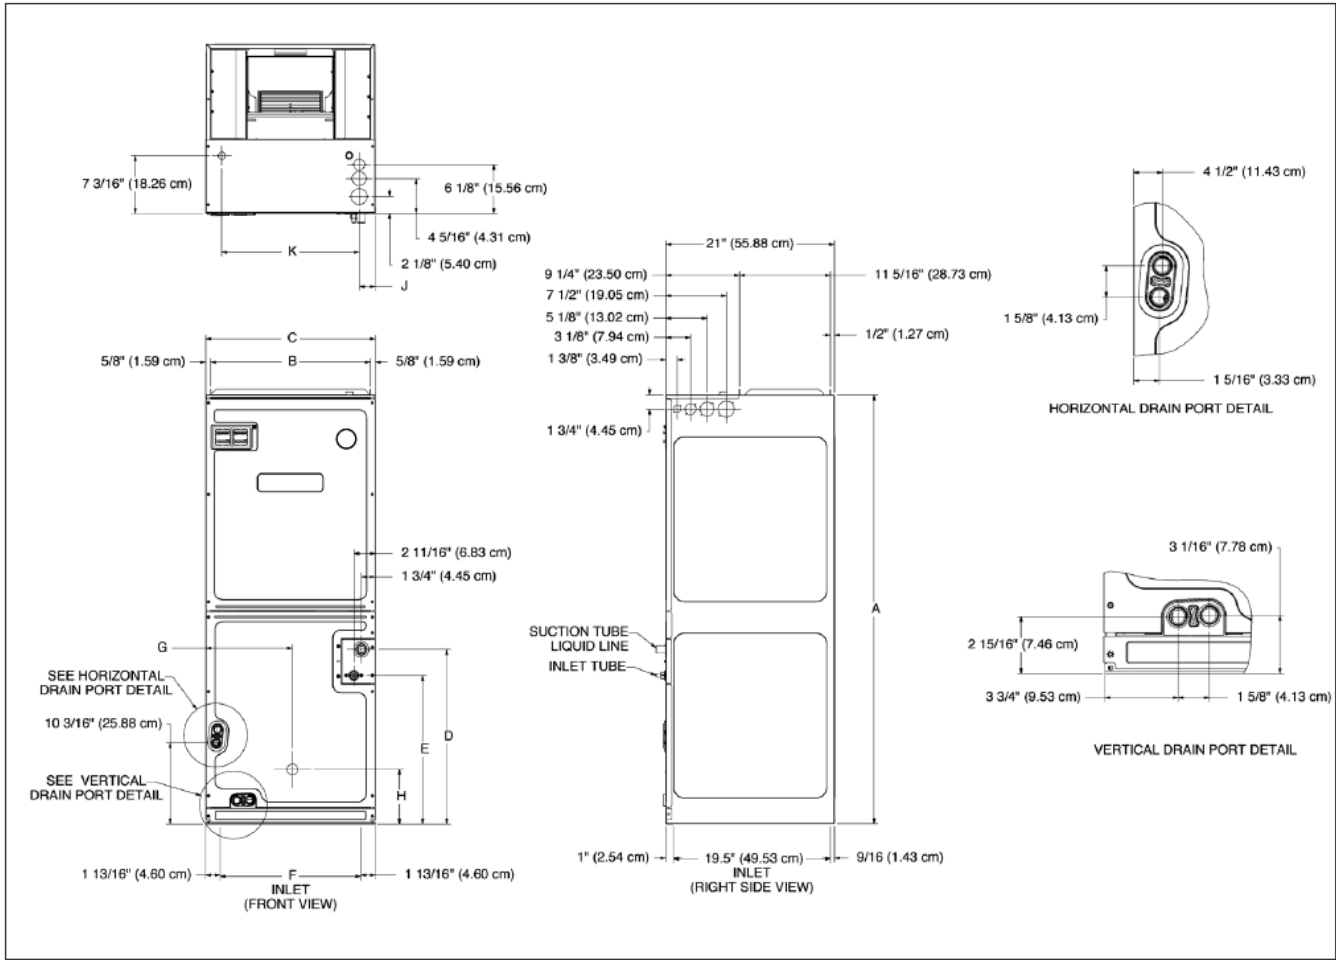

MODEL	A"	B"	C"	D"	E"	F"	G"	H"	J"	K"
AMVT24BP1300	45	16 <sup>5</sup> / <sub>16</sub>	17 <sup>9</sup> / <sub>16</sub>	15 <sup>1</sup> / <sub>4</sub>	12	12 <sup>1</sup> / <sub>2</sub>	9	12 <sup>9</sup> / <sub>16</sub>	2	13 <sup>5</sup> / <sub>8</sub>
AMVT30BP1300	53 <sup>7</sup> / <sub>16</sub>	16 <sup>5</sup> / <sub>16</sub>	17 <sup>9</sup> / <sub>16</sub>	23 <sup>11</sup> / <sub>16</sub>	20 <sup>1</sup> / <sub>16</sub>	12 <sup>1</sup> / <sub>2</sub>	9	12 <sup>3</sup> / <sub>4</sub>	2	13 <sup>5</sup> / <sub>8</sub>
AMVT36BP1300	53 <sup>7</sup> / <sub>16</sub>	16 <sup>5</sup> / <sub>16</sub>	17 <sup>9</sup> / <sub>16</sub>	23 <sup>11</sup> / <sub>16</sub>	20 <sup>1</sup> / <sub>16</sub>	12 <sup>1</sup> / <sub>2</sub>	9	12 <sup>3</sup> / <sub>4</sub>	2	13 <sup>5</sup> / <sub>8</sub>
AMVT36CP1300	49	19 <sup>13</sup> / <sub>16</sub>	21 <sup>1</sup> / <sub>8</sub>	21 <sup>12</sup> / <sub>16</sub>	17 <sup>3</sup> / <sub>4</sub>	16 <sup>1</sup> / <sub>16</sub>	9	12 <sup>3</sup> / <sub>4</sub>	2	17 <sup>7</sup> / <sub>8</sub>
AMVT42CP1300	53 <sup>7</sup> / <sub>16</sub>	19 <sup>13</sup> / <sub>16</sub>	21 <sup>1</sup> / <sub>8</sub>	21 <sup>12</sup> / <sub>16</sub>	18 <sup>1</sup> / <sub>2</sub>	16 <sup>1</sup> / <sub>16</sub>	9	12 <sup>3</sup> / <sub>4</sub>	2	17 <sup>7</sup> / <sub>8</sub>
AMVT48CP1300	58	19 <sup>13</sup> / <sub>16</sub>	21 <sup>1</sup> / <sub>8</sub>	26 <sup>3</sup> / <sub>16</sub>	22 <sup>15</sup> / <sub>16</sub>	14 <sup>10</sup> / <sub>16</sub>	10 <sup>13</sup> / <sub>16</sub>	6 <sup>13</sup> / <sub>16</sub>	2	17 <sup>7</sup> / <sub>8</sub>
AMVT60DP1300	58	23 <sup>3</sup> / <sub>14</sub>	24 <sup>5</sup> / <sub>8</sub>	26	22 <sup>3</sup> / <sub>4</sub>	17 <sup>11</sup> / <sub>16</sub>	12 <sup>9</sup> / <sub>16</sub>	13 <sup>13</sup> / <sub>16</sub>	2	20 <sup>5</sup> / <sub>8</sub>

MODEL NUMBER	Low/ High	OUTDOOR TONNAGE						
		1.5	2	2.5	3	3.5	4	5
AMVT24BP1300	Low	402	536	-	-	-	-	-
	High	600	800	-	-	-	-	-
AMVT30BP1300	Low	402	536	670	-	-	-	-
	High	600	800	1,000	-	-	-	-
AMVT36BP1300	Low	-	-	670	804	-	-	-
	High	-	-	1,000	1,200	-	-	-
AMVT36CP1300	Low	-	536	670	804	-	-	-
	High	-	800	1,000	1,200	-	-	-
AMVT42CP1300	Low	-	-	-	804	938	-	-
	High	-	-	-	1,200	1,400	-	-
AMVT48CP1300	Low	-	-	-	-	938	1,072	-
	High	-	-	-	-	1,400	1,600	-
AMVT60DP1300	Low	-	-	-	-	-	1,072	1,340
	High	-	-	-	-	-	1,600	2,000

**NOTES**

1. Airflow data indicated is at 230V without air filter in place.
2. The chart is for information only. For satisfactory operation, external static pressure must not exceed value shown on rating plate.
3. Use the CFM adjustment factors of 0.98 for horizontal left and 0.96 for horizontal right & downflow orientations
4. When applying a humidistat (normally closed), refer to the installation and operating instructions. The humidistat can adjust the cooling airflow to 85%.

See notes on page 7.

HEAT KIT DATA

HEATER KIT MODEL	CIRCUIT 1 (208V/240V)			CIRCUIT 2 (208V/240V)			SINGLE-POINT KIT (208V/240V)	
	HEATER AMPS	MCA <sup>1</sup>	MOP <sup>2</sup>	HEATER AMPS	MCA <sup>1</sup>	MOP <sup>2</sup>	MCA <sup>1</sup>	MOP <sup>2</sup>
<b>AMVT24BP1300AA</b>	0/0	4.9/4.9	15/15	---	---	---	---	---
HKTSN03X1	10.8/12.5	18.4/20.5	20/25	---	---	---	---	---
HKTS*05X1	17.3/20.0	26.5/29.9	30/30	---	---	---	---	---
HKTSN06X1	21.7/25.0	32.0/36.1	35/40	---	---	---	---	---
HKTS*08X1	28.9/33.3	41.0/46.5	45/50	---	---	---	---	---
HKTS*10X1	34.7/40.0	48.2/54.9	50/60	---	---	---	---	---
HKTSN15XA/B	34.7/40.0	48.2/54.9	50/60	17.3/20.0	21.7/25.0	25/25	69.9/79.9	70/80
<b>AMVT30BP1300AA</b>	0/0	4.9/4.9	15/15	---	---	---	---	---
HKTSN03X1	10.8/12.5	18.4/20.5	20/25	---	---	---	---	---
HKTS*05X1	17.3/20.0	26.5/29.9	30/30	---	---	---	---	---
HKTSN06X1	21.7/25.0	32.0/36.1	35/40	---	---	---	---	---
HKTS*08X1	28.9/33.3	41.0/46.5	45/50	---	---	---	---	---
HKTS*10X1	34.7/40.0	48.2/54.9	50/60	---	---	---	---	---
HKTSN15XA/B	34.7/40.0	48.2/54.9	50/60	17.3/20.0	21.7/25.0	25/25	69.9/79.9	70/80
<b>AMVT36BP1300AA</b>	0/0	6.5/6.5	15/15	---	---	---	---	---
HKTSN03X1	10.8/12.5	20.0/22.1	25/25	---	---	---	---	---
HKTS*05X1	17.3/20.0	28.2/31.5	30/35	---	---	---	---	---
HKTSN06X1	21.7/25.0	33.6/37.8	35/40	---	---	---	---	---
HKTS*08X1	28.9/33.3	42.6/48.2	45/50	---	---	---	---	---
HKTS*10X1	34.7/40.0	49.8/56.5	50/60	---	---	---	---	---
HKTSN15XA/B	34.7/40.0	49.9/56.5	50/60	17.3/20.0	21.7/25.0	25/25	71.5/81.5	80/90
<b>AMVT36CP1300AA</b>	0/0	6.5/6.5	15/15	---	---	---	---	---
HKTSN03X1	10.8/12.5	20.0/22.1	20/25	---	---	---	---	---
HKTS*05X1	17.3/20.0	28.2/31.5	30/35	---	---	---	---	---
HKTSN06X1	21.7/25.0	33.6/37.8	35/40	---	---	---	---	---
HKTS*08X1	28.9/33.3	42.6/48.2	45/50	---	---	---	---	---
HKTS*10X1	34.7/40.0	49.8/56.5	50/60	---	---	---	---	---
HKTS*15X3 ^	0/0	6.5/6.5	15/15	30.0/34.6	37.5/43.3	40/45	---	---
HKTSN15XA/B	34.7/40.0	49.8/56.5	50/60	17.3/20.0	21.7/25.0	25/25	71.5/81.5	80/90
HKTSN19CA/B	34.7/40.0	49.8/56.5	50/60	34.7/40.0	43.3/50.0	45/50	93.2/107	100/110
<b>AMVT42CP1300AA</b>	0/0	6.5/6.5	15/15	---	---	---	---	---
HKTS*05X1	17.3/20.0	28.2/31.5	30/35	---	---	---	---	---
HKTSN06X1	21.7/25.0	33.6/37.8	35/40	---	---	---	---	---
HKTS*08X1	28.9/33.3	42.6/48.2	45/50	---	---	---	---	---
HKTS*10X1	34.7/40.0	49.8/56.5	50/60	---	---	---	---	---
HKTS*15X3 ^	0/0	6.5/6.5	15/15	30.0/34.6	37.5/43.3	40/45	---	---
HKTSN15XA/B	34.7/40.0	49.9/56.5	50/60	17.3/20.0	21.7/25.0	25/25	71.5/81.5	80/90
HKTSN19CA/B	34.7/40.0	49.9/56.5	50/60	34.7/40.0	43.3/50.0	45/50	93.2/107	100/110

See Notes on Page 7.

HEATER KIT MODEL	CIRCUIT 1 (208V/240V)			CIRCUIT 2 (208V/240V)			SINGLE-POINT KIT (208V/240V)	
	HEATER AMPS	MCA <sup>1</sup>	MOP <sup>2</sup>	HEATER AMPS	MCA <sup>1</sup>	MOP <sup>2</sup>	MCA <sup>1</sup>	MOP <sup>2</sup>
<b>AMVT48CP1300AA</b>	0/0	6.5/6.5	15/15	---	---	---	---	---
HKTS*05X1	17.3/20.0	28.2/31.5	30/35	---	---	---	---	---
HKTSN06X1	21.7/25.0	33.6/37.8	35/40	---	---	---	---	---
HKTS*08X1	28.9/33.3	42.6/48.2	45/50	---	---	---	---	---
HKTS*10X1	34.7/40.0	49.8/56.5	50/60	---	---	---	---	---
HKTS*15X3 ^	0/0	6.5/6.5	15/15	30.0/34.6	37.5/43.3	40/45	---	---
HKTSD15XA/B	34.7/40.0	49.8/56.5	50/60	17.3/20.0	21.7/25.0	25/25	71.5/81.5	80/90
HKTSD19CA/B	34.7/40.0	49.8/56.5	50/60	34.7/40.0	43.3/50.0	45/50	93.2/107	100/110
<b>AMVT60DP1300AA</b>	0/0	8.6/8.6	15/15	---	---	---	---	---
HKTS*05X1	17.3/20.0	30.3/33.6	35/35	---	---	---	---	---
HKTSN06X1	21.7/25.0	35.7/39.9	40/40	---	---	---	---	---
HKTS*08X1	28.9/33.3	44.7/50.3	45/60	---	---	---	---	---
HKTS*10X1	34.7/40.0	52.0/58.6	60/60	---	---	---	---	---
HKTS*15X3 ^	0/0	8.6/8.6	15/15	30.0/34.6	37.5/43.3	40/45	---	---
HKTSD15XA/B	34.7/40.0	52.0/58.6	60/60	17.3/20.0	21.6/25.0	25/25	73.6/83.6	80/90
HKTS*20X3 ^	0/0	8.6/8.6	15/15	37.5/43.3	46.9/54.1	50/60	---	---
HKTSD20DA/B	34.7/40.0	52.0/58.6	60/60	34.7/40.0	43.4/50.0	45/50	95.3/109	100/110
HKTSD25DA/B	34.7/40.0	52.0/58.6	80/90	34.7/40.0	43.4/50.0	45/50	117/134	125/150

<sup>1</sup> Minimum Circuit Ampacity (Heater Amps + Motor Amps) X 1.25

<sup>2</sup> Maximum Overcurrent Protection = 2.25 X Motor Amps + Heater Amps


^ Three-phase Heater Kits (Circuit 1: Single-phase for Air Handlers Circuit 2: Three-phase for Heater Kits)

\* D - Service disconnect, N - No service disconnect

--- indicates Not Required

Note: The 208 or 240 in the heat kit part number field is for clarification of the nominal voltage for this model.

# AIR HANDLER WIRING DIAGRAM AMVT\*\*P1400\*\* (1.5T-5T)

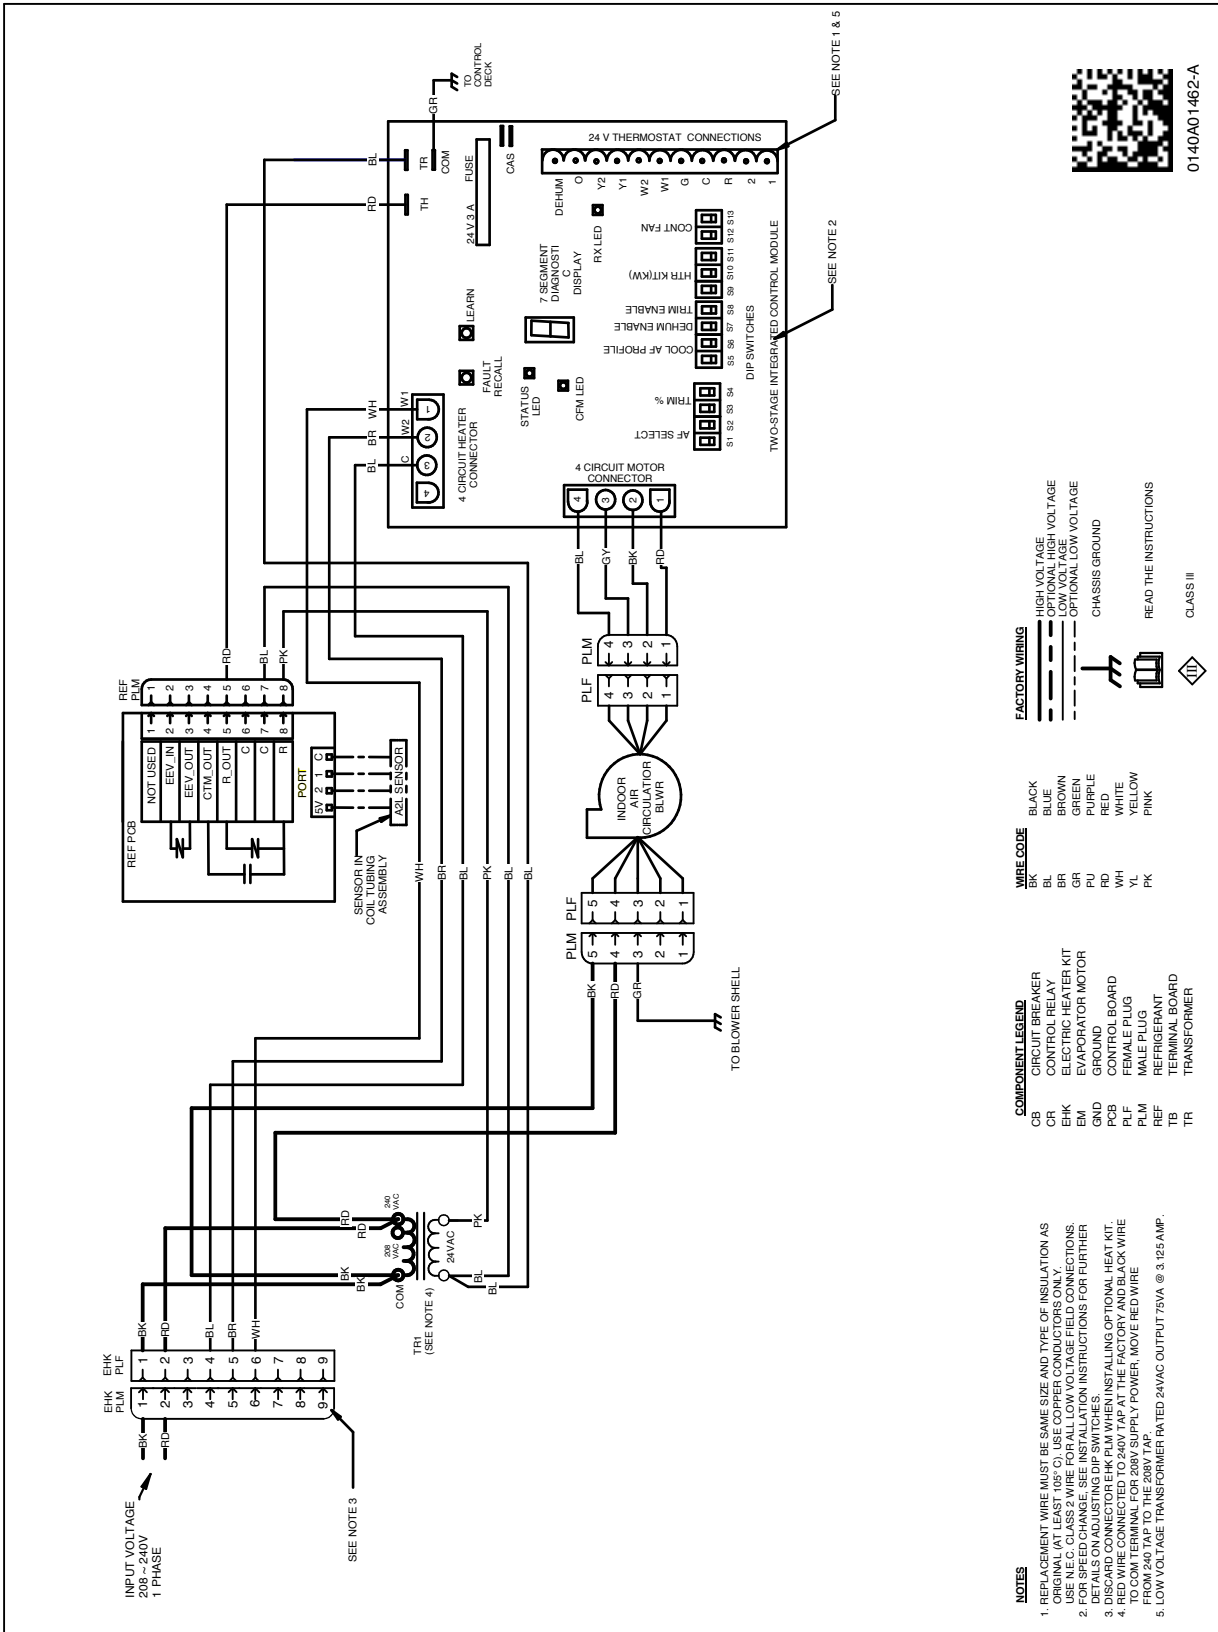


- NOTES**
1. REPLACEMENT WIRE MUST BE SAME SIZE AND TYPE OF INSULATION AS ORIGINAL (AT LEAST 105°C). USE COPPER CONDUCTORS ONLY.
  2. USE N.E.C. CLASS 2 WIRE FOR ALL LOW VOLTAGE FIELD CONNECTIONS. FOR SPEED CHANGE, SEE INSTALLATION INSTRUCTIONS FOR FURTHER DETAILS ON ADJUSTING DIP SWITCHES.
  3. FOR SPEED CHANGE, SEE INSTALLATION INSTRUCTIONS FOR FURTHER DETAILS ON ADJUSTING DIP SWITCHES.
  4. RED WIRE CONNECTED TO 240V TAP AT THE FACTORY AND BLACK WIRE TO COM TERMINAL FOR 208V SUPPLY POWER. MOVE RED WIRE FROM 240 TAP TO THE 208V TAP.
  5. LOW VOLTAGE TRANSFORMER RATED 24VAC OUTPUT 75VA @ 3.125 AMP.

**COMPONENT LEGEND**

CB	CIRCUIT BREAKER
CR	CONTROL RELAY
EHK	ELECTRIC HEATER KIT
EM	EVAPORATOR MOTOR
GND	GROUND
PCB	CONTROL BOARD
PLF	FEMALE PLUG
PLM	MALE PLUG
REF	REFRIGERANT
TB	TERMINAL BOARD
TR	TRANSFORMER

**WIRE CODE**

BK	BLACK
BL	BLUE
BR	BROWN
BU	BROWN
PI	PURPLE
RD	RED
WH	WHITE
YL	YELLOW
PK	PINK

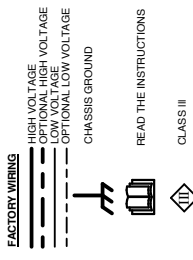

**WARNING**

**High Voltage:** Disconnect all power before servicing or installing this unit. Multiple power sources may be present. Failure to do so may cause property damage, personal injury, or death.

Wiring is subject to change. Always refer to the wiring diagram on the unit for the most up-to-date wiring.



**DOWNFLOW KITS**

DFKE-02	DFKE-03
DMVT24BP1300**	DMVT48CP1300**
DMVT30BP1300**	DMVT60DP1300**
DMVT36BP1300**	
DMVT36CP1300**	
DMVT42CP1300**	

**HIGH HUMIDITY KIT**

HHK0004	HHK0005	HHK0007
DMVT24BP1300**	DMVT36CP1300**	DMVT60DP1300**
DMVT30BP1300**	DMVT42CP1300**	
DMVT36BP1300**	DMVT48CP1300**	

**CONDENSATE MANAGEMENT KIT**

CMK0018	CMK0019	CMK0020
DMVT24BP1300**	DMVT30BP1300**	DMVT48CP1300**
DMVT36CP1300**	DMVT36BP1300**	DMVT60DP1300**
	DMVT42CP1300**	

**FILTERS**

CHASSIS	PART #	SIZE
B	ALFH16201E	16.0" x 20.0"
C	ALFH1912201E	19.5" x 20.0"
D	ALFH20231E	23.0" x 20.0"

**SINGLE POINT WIRING KIT (SPW-01)**

HEATER KIT MODEL	SPWK-B	SPWK-C	SPWK-D
HKTSD15XA	DMVT24BP1300** DMVT30BP1300** DMVT36BU1300**	DMVT36CU1300** DMVT42CU1300** DMVT48CU1300**	DMVT60DU1300**
HKTSD15XB			
HKTSD19CA			
HKTSD19CB			
HKTSD20DA			DMVT60DU1300**
HKTSD20DB			
HKTSD25DA			DMVT60DU1300**
HKTSD25DB			

**ULTRAVIOLET DRAIN PAN KIT**

MODEL SIZE	KIT #	PARTS				
DMVT24B	UVPK01	DRAIN PAN MAIN	DRAIN PAN SIDE	NA	CONDENSATE COLLECTOR, BACK	CONDENSATE COLLECTOR, BACK
DMVT30B	UVPK02			CONDENSATE COLLECTOR, BACK		
DMVT36B						
DMVT36C	UVPK03					
DMVT42C	UVPK04					
DMVT48C	UVPK05					
DMVT60D	UVPK07					

**R32 ZONING ACCESSORY KIT**

KIT NUMBER	MODELS
0230K00007	All AMVT Models





