

HA036300 CONVERSION KIT HIGH ALTITUDE NAT. & L.P. GASES INSTALLATION INSTRUCTIONS

© 2016 **DAIKIN MANUFACTURING COMPANY, L.P.**
5151 San Felipe, Suite 500, Houston, TX 77056
www.daikincomfort.com
P/N: IOD-7062 Date: November 2016

ATTENTION INSTALLING PERSONNEL

As a professional installer you have an obligation to know the product better than the customer. This includes all safety precautions and related items.

Prior to actual installation, thoroughly familiarize yourself with this Instruction Manual. Pay special attention to all safety warnings. Often during installation or repair it is possible to place yourself in a position which is more hazardous than when the unit is in operation.

Remember, it is **your** responsibility to install the product safely and to know it well enough to be able to instruct a customer in its safe use.

Safety is a matter of common sense...a matter of thinking before acting. Most dealers have a list of specific good safety practices...follow them.

The precautions listed in this Installation Manual are intended as supplemental to existing practices. However, if there is a direct conflict between existing practices and the content of this manual, the precautions listed here take precedence.

RECOGNIZE THIS SYMBOL AS A SAFETY PRECAUTION

Description

This high altitude conversion kit is intended to convert 3 to 25 ton light commercial gas package units for high altitude installation.

IMPORTANT NOTICE:

WARNING

PERSONAL INJURY OR DEATH MAY RESULT FROM IMPROPER INSTALLATION OR MAINTENANCE PERFORMED BY UNTRAINED PERSONNEL. CALL YOUR INSTALLING DEALER OR OTHER QUALIFIED SERVICE COMPANIES TO PERFORM THE INSTALLATION OR MAINTENANCE INSPECTION.

These instructions are intended for the use of qualified individuals who are trained and experienced in the installation and conversion of this type of equipment. Personnel performing this task are required in some states to be licensed. Under no circumstances should this conversion, or equipment installation be performed by personnel who are not qualified. Failure to observe this warning may result in equipment damage, fire, or life threatening danger. Refer to the equipment installation manual, the National Fuel Gas Code (ANSI Z223.1), or in Canada (CAN/CSA-B149.2, latest edition), and local codes.

Kit Contents

Using the following parts list, ensure that all parts included in this list are present and in an undamaged condition.

1	B14933-63	Conversion Label
1	IOD-7011A	Installation Instructions
1 pack (6 per pack)	0163L00019	Burner Orifice - #35
	0163L00020	Burner Orifice - #36
	0163L00021	Burner Orifice - #37
	0163L00022	Burner Orifice - #38
	0163L00023	Burner Orifice - #39
	B2589902	Burner Orifice - #44
	10716005	Burner Orifice - #45
	B2589904	Burner Orifice - #46
	B2589905	Burner Orifice - #47
	0163L00018	Burner Orifice - #53
	10716002	Burner Orifice - #54
	B4089955	Burner Orifice - #55
	B2589908	Burner Orifice - #56
	B2589909	Burner Orifice - #57
B2589910	Burner Orifice - #58	
1 pack (8 per pack)	0163L00013	Burner Orifice - #29
	0163L00014	Burner Orifice - #30
	0163L00015	Burner Orifice - #31
	0163L00017	Burner Orifice - #49
	B3239750	Burner Orifice - #50

WARNING


IF ANY DOUBT EXISTS ABOUT THE CONDITION OF ANY COMPONENT WITHIN THIS KIT, DO NOT USE THIS KIT AND CONTACT YOUR SUPPLIER FOR A NEW KIT.



TOOLS REQUIRED FOR INSTALLATION

- Two (2) Pipe Wrenches. These wrenches shall be suitably sized to handle the supply piping and its ground joint union.
- One (1) 7/16" or 9/16" open or closed wrench. Do not use an adjustable wrench when removing or installing burner orifices.
- One (1) 5/16 nut driver.
- One (1) Flat blade screw driver.
- One (1) 3/16 Allen wrench. The Allen wrench is required to remove gas valve inlet and outlet plugs.
- Two (2) Water Column manometers. Manometers are to be capable of reading a range between 0 and 20 inches with 1" increments. Pipe thread compound. Pipe thread compound used must be listed as appropriate material for L.P. gas. Soap solution and application brush.

Installation

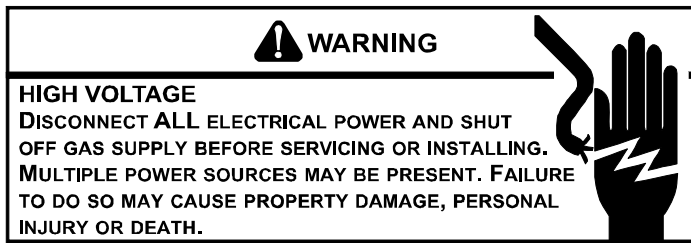

1. Prior to performing this conversion, refer to the Installation & Operation Manual supplied with the unit, the National Fuel Gas Code (ANSI Z223.1) or in Canada (CAN/CSA-B149.2, latest edition), and local codes to ensure that this appliance is installed correctly and in compliance with these codes/manuals.
2. Disconnect power and gas supply.
3. Set the room thermostat to its lowest possible setting.
4. Remove the burner access panel. See figure 1 for the location of these components.
5. Loosen the gas supply ground union, and remove the gas valve supply line. Use one pipe wrench as a back-up to prevent damage/rotation of any controls.
6. Remove the (4) sheet metal screws which fasten the gas manifold to the burner box. See figure 2 for component location.
7. Using the 7/16" or 9/16" wrench, remove the existing natural gas orifices from the burner manifold. Save the natural gas orifices for future use if the unit is converted back to natural gas.
8. Install the orifices supplied with this kit into the gas manifold. Look at sizes stamped on orifice face to insure that all

the same are installed. Tighten these orifices adequately to prevent gas leakage. Refer to table 1,2 and 3 for the correct burner orifices.

9. **For 36G22 valve:** Using a 3/32" Allen wrench, loosen the inlet and outlet pressure tap screw one (1) turn only (DO NOT REMOVE). Attach a length of 5/16" hose to each of the pressure tap bosses. Connect the 5/16" hose to two (2) separate water manometers or other adequate gauges having a scale range of at least 0" to 15" of water column.
For 36H54 valves: Remove both the inlet and outlet plugs on the gas valve, using the 3/16" allen wrench. Install the fittings, which accompany the manometers into the 1/8" taped holes of the gas valve. Connect the manometers to the barbed fittings.
10. Reinstall gas manifold assembly into package unit.
11. Connect both the inlet and outlet gas valve barb fittings (installed in step 9) to (2) separate manometers. See figure 3.
12. Install the gas supply piping and its ground union joint using a pipe wrench. Use a second pipe wrench as a back up.




13. Turn on the gas supply to the unit. Using a soap and water solution, check the gas supply line, gas valve inlet and outlet pressure areas. Repair any gas leaks detected.
14. Turn on the electric supply to the package unit.
15. Adjust the room thermostat to obtain continuous burner operation. On models with 2 stage heat, place jumper between W1 and W2.
16. After the burner is in operation for 15 minutes, check and adjust, if needed, the supply and manifold pressure. See figure 3.
17. **For 36H54 valves (2 stage heat):** Remove jumper wire between W1 and W2. Also remove the thermostat wire from W2 and repeat step 15 on low stage heat.
18. Turn off the gas and electrical supply to the unit.
19. Apply the conversion label adjacent to the rating plate.
20. **For 36G22 valve:** Turn off gas and electrical supply to the unit, remove the manometer hose from the pressure tap bosses, and tighten the inlet and outlet pressure tap screws using the 3/32" Allen wrench.
For 36H54 valves: Turn off the gas and electrical supply to the appliance, remove the pressure taps at the gas valve, reinstall the plugs using pipe joint compound or tape.
21. Turn on the gas supply and test for leaks using a soap and water solution. Repair any gas leaks. Turn on the electrical supply. Adjust the room thermostat to ensure continuous burner operation.


WARNING

TO AVOID THE POSSIBILITY OF EXPLOSION OR FIRE, NEVER USE A MATCH OR OPEN FLAME TO TEST THE GAS SUPPLY LINE, GAS VALVE INLET AND OUTLET PRESSURE AREAS OR THE THREADED PORTIONS OF THE BURNER ORIFICES FOR LEAKS.

22. Using a soap solution check the gas supply, gas valve inlet and outlet pressure areas, and threaded portions of the burner orifices for leaks. Repair any gas leaks detected.
23. Observe at least three ignition cycles to ensure smooth and quiet ignition.
24. Install the control access panel.

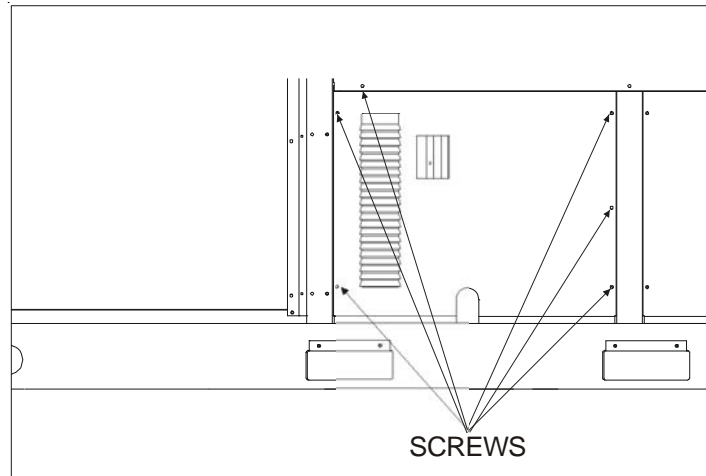


**FIGURE 1
BURNER ACCESS PANEL**

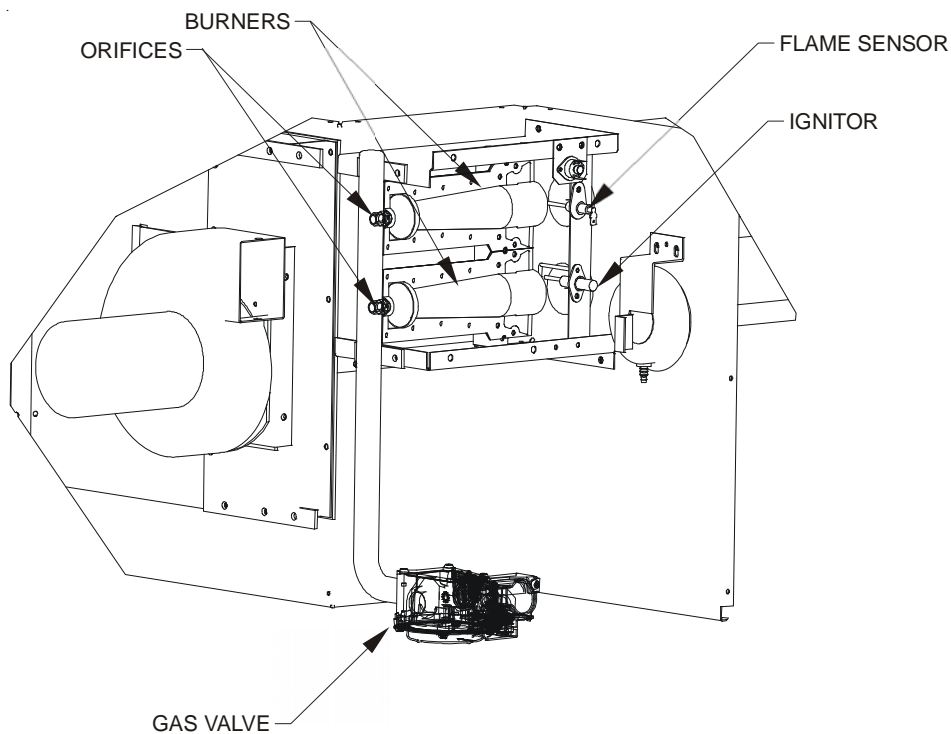

**FIGURE 2
GAS VALVE LOCATION**

Note: Typical Medium Chassis Shown. Other Chassis Sizes Will Differ.

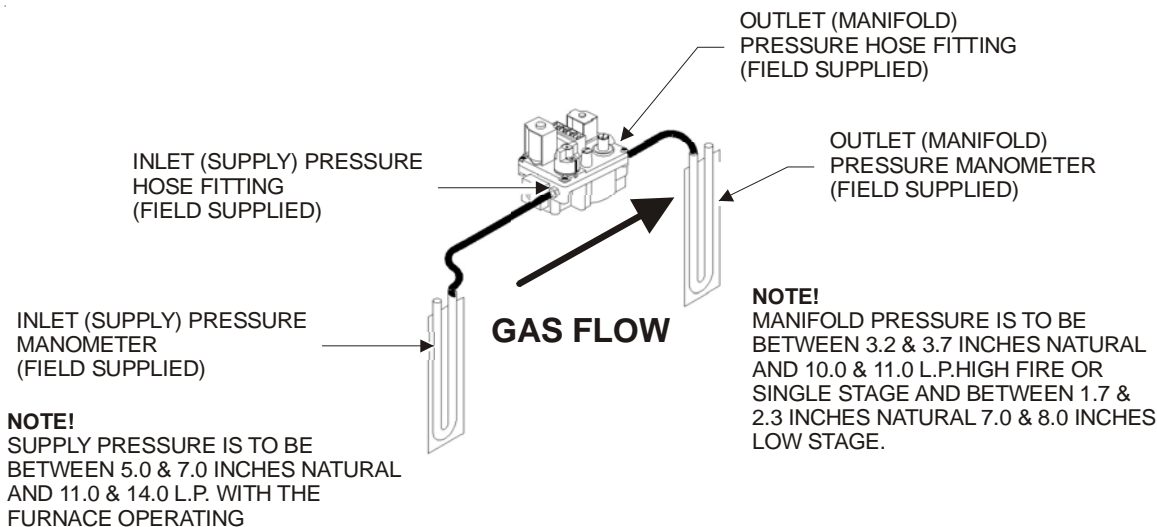

Tables 1, 2 and 3 are based upon the furnace input being reduced for altitudes above sea level. U.S. 4% per 1000 feet. Canada 10% derate for 2000-4500 feet. To determine input/burner, locate input rate on plate and divide by number of burners. If specific input/burner is not listed, use the values of the next lower table (i.e. If input/burner is 44,500, use the values in Table 2).

TABLE 1

INPUT/BURNER	22,500 BTUH NAT/20,000 BTUH/L.P.							
	ELEVATION ABOVE SEA-LEVEL (FEET)							
	2000	3000	4000	4500	5000	6000	7000	8000
U.S. BURNER ORIFICE	44/55	44/55	45/56	-	45/56	46/57	47/58	47/58
CANADA BURNER ORIFICE	44/55	-	-	47/57	-	-	-	-

TABLE 2

NATURAL GAS AND LP GAS INSTALLATIONS AT ALTITUDES > 2000 FT.

INPUT/BURNER	35,000 BTUH NAT/33,000 BTUH/L.P.							
	ELEVATION ABOVE SEA-LEVEL (FEET)							
	2000	3000	4000	4500	5000	6000	7000	8000
U.S. BURNER ORIFICE	35/53	36/53	36/53	-	37/53	37/53	38/53	39/54
CANADA BURNER ORIFICE	35/53	-	-	39/54	-	-	-	-

TABLE 3

INPUT/BURNER	50,000 BTUH NAT/45,000 BTUH/L.P.							
	ELEVATION ABOVE SEA-LEVEL (FEET)							
	2000	3000	4000	4500	5000	6000	7000	8000
U.S. BURNER ORIFICE	29/48	30/48	30/49	-	30/49	30/49	31/50	31/50
CANADA BURNER ORIFICE	29/48	-	-	31/50	-	-	-	-

NOTE: SPECIFICATIONS AND PERFORMANCE DATA LISTED HEREIN ARE SUBJECT TO CHANGE WITHOUT NOTICE

Quality Makes the Difference!

All of our systems are designed and manufactured with the same high quality standards regardless of size or efficiency. We have designed these units to significantly reduce the most frequent causes of product failure. They are simple to service and forgiving to operate. We use quality materials and components. Finally, every unit is run tested before it leaves the factory. That's why we know. . . **There's No Better Quality.**

Visit our website at www.daikincomfort.com for information on:

- Products
- Customer Services
- Contractor Program and Training
- Warranties
- Parts
- Financing Options