




# WIRED REMOTE CONTROLLER

## OPERATION MANUAL

English

Français

Español

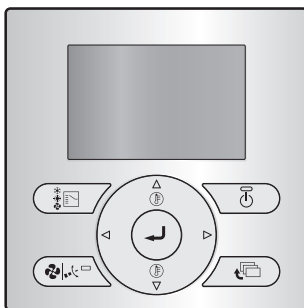

**BRC073A6**

- Thank you for purchasing the wired remote controller.
- This manual describes Safety Considerations required for the use of the product.

**Read this manual carefully and be sure you understand the information provided before attempting to use the product.**

Keep this manual where it is readily accessible after reading it through. If another user operates the product in the future, be sure to hand over this manual to the new user.

# Contents

---

<b>Notices</b>	Safety Considerations .....	2
	Items to be Strictly Observed .....	3
	Names and Functions.....	7
	Liquid Crystal Display .....	9

<b>Basic Operation Method</b>	Enable/disable the Menu/Enter and Cancel button.....	11
	Cool/Heat/Fan/Dry/Auto Operation.....	12
	Program Dry Operation .....	16
	Setback.....	17
	Key Lock.....	18

<b>Quick Reference of Main Menu Items</b>	Main Menu Items Overview .....	19
---	--------------------------------	----

<b>Menu Manipulation</b>	Main Menu.....	21
	Airflow Direction.....	22
	Energy Saving Options.....	23
	Schedule.....	28
	Maintenance Information.....	33
	Configuration .....	34
	Current Settings.....	37
	Clock & Calendar.....	38
	Language.....	40

<b>Maintenance</b>	Maintenance of Unit and the LCD display .....	41
--------------------	---	----

<b>Reference Information</b>	Error Code Display .....	42
	"Mode Conflict" message .....	43
	Combined use of the wired and wireless user interface.....	44
	FCC Notice .....	44



# Safety Considerations

The original instructions are written in English. All other languages are translations of the original instructions.






This appliance is not intended to be used by persons, including children, with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instructions on how to use the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

**Please read these Safety Considerations carefully before installing the remote controller.**






- This manual classifies the precautions into WARNING and CAUTION. They both contain important information regarding safety. Be sure to follow all the precautions below.

 <b>WARNING</b>	Failure to follow these instructions properly may result in personal injury or loss of life.
 <b>CAUTION</b>	Failure to observe these instructions properly may result in property damage or personal injury, which may be serious depending on the circumstances.







- The following pictograms are used in this manual.

	Never do.		Always follow the instructions given.
	Be sure to ground the unit.		Absolutely keep wet hands away.
	Absolutely keep water and moisture away.		







## ■ About Remote Controller

 <b>WARNING</b>	
	<ul style="list-style-type: none"> <li>• <b>Do not install the remote controller by yourself.</b> Improper installation may result in electric shocks or fire. Consult your Daikin dealer.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Do not modify or repair the remote controller.</b> This may result in electric shocks or fire. Consult your Daikin dealer.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Do not relocate or reinstall the remote controller by yourself.</b> Improper installation may result in electric shocks or fire. Consult your Daikin dealer.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Do not use flammable materials (e.g., hair spray or insecticide) near the product.</b> Do not clean the product with organic solvents such as paint thinner. The use of organic solvents may cause crack damage to the product, electric shocks or fire.</li> </ul>










# Items to be Strictly Observed















 <b>CAUTION</b>	
	<ul style="list-style-type: none"> <li>• <b>Do not play with the unit or its remote controller.</b> Accidental operation by a child may result in impairment of bodily functions and harm health.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Never disassemble the remote controller.</b> Touching the interior parts may result in electric shocks or fire. Consult your Daikin dealer or authorized contractor for internal inspections and adjustments.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>To avoid electric shocks, do not operate with wet hands.</b></li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Do not wash the remote controller.</b> Doing so may cause electric leakage and result in electric shocks or fire.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Do not leave the remote controller wherever there is a risk of wetting.</b> If water gets into the remote controller there is a risk of electrical leakage and damage to electronic components.</li> </ul>

## ■ Indoor Unit and Outdoor Unit










 <b>WARNING</b>	
	<ul style="list-style-type: none"> <li>• <b>Be aware that prolonged, direct exposure to cool or warm air from the air conditioner or to air that is too cold or too warm can be harmful to your physical condition and health.</b></li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Do not place objects, including rods, your fingers, etc. in the air inlet or outlet.</b> Injury may result due to contact with the air conditioner's high-speed fan blades.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Contact professional personnel about attachment of accessories and be sure to use only accessories specified by the manufacturer.</b> If a defect results from your own workmanship, it may result in water leaks, electric shock or fire.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Do not use the product in atmospheres contaminated with oil vapor, such as cooking oil or machine oil vapor.</b> Oil vapor may cause crack damage, electric shocks or fire.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Do not use the product in places with excessive oily smoke, such as cooking rooms or in places with flammable gas, corrosive gas or metal dust.</b> Using the product in such places may cause fire or product failures.</li> </ul>


**WARNING**


	<ul style="list-style-type: none"> <li>• <b>Beware of fire in case of refrigerant leakage.</b> If the air conditioner is not operating correctly, i.e. not generating cool or warm air, refrigerant leakage could be the cause. Consult your dealer for assistance. The refrigerant within the air conditioner is safe and normally does not leak. However, in the event of a leakage, contact with a naked burner, heater or cooker may result in generation of noxious gas. Do not longer use the air conditioner until a qualified service person confirms that the leakage has been repaired.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>In the case of using a load breaker provided with a fuse, make sure that the capacity of the fuse is correct.</b> Use of an ordinary conductive wire may cause malfunctions or fire.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Do not use the power supply breaker to start or stop the air conditioner.</b> Otherwise, fire or water leakage may result. Furthermore, the fan will rotate abruptly if power failure compensation is enabled, which may result in injury.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Be sure to ground the unit.</b> Do not ground the unit to a utility pipe, lightning conductor or telephone ground lead. Imperfect grounding may result in electric shocks or fire. A high surge current from lightning or other sources may cause damage to the air conditioner.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>When the air conditioner is malfunctioning (giving off a burning odor, etc), turn off the power and contact your local dealer.</b> Continued operation under such circumstances may result in a failure, electric shocks or fire hazards.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Consult your local dealer regarding what to do in case of refrigerant leakage.</b> When the air conditioner is to be installed in a small room, it is necessary to take proper measures so that the amount of any leaked refrigerant does not exceed the concentration limit in the event of a leakage. Otherwise, this may lead to an accident due to oxygen depletion.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Be sure to install a ground leakage breaker.</b> Failure to install a ground leakage breaker may result in electric shocks or fire.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Consult the dealer if the air conditioner submerges owing to a natural disaster such as a flood or typhoon.</b> Do not operate the air conditioner in that case or otherwise a malfunction, electric shock or fire may result.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Be sure to use a dedicated power supply for the air conditioner.</b> The use of any other power supply may cause heat generation, fire or product failures.</li> </ul>

 <b>CAUTION</b>	
	<ul style="list-style-type: none"> <li>• <b>After prolonged use, check the unit stand and its mounts for damage.</b> If left in a damaged condition, the unit may fall and cause injury.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Do not allow a child to mount on the outdoor unit or avoid placing any object on it.</b> Falling or tumbling may result in injury.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Do not block air inlets nor outlets.</b> Impaired airflow may result in insufficient performance or trouble.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>To avoid injury, do not touch the air inlet or aluminium fins of the unit.</b></li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Do not remove the outdoor unit's fan guard.</b> The guard protects against the unit's high speed fan, which may cause injury.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Do not place objects that are susceptible to moisture directly beneath the indoor or outdoor units.</b> Under certain conditions, condensation on the main unit or refrigerant pipes, air filter dirt or drain blockage may cause dripping, resulting in fouling or failure of the object concerned.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Do not place water containers (flower vases, etc). on the unit, as this may result in electric shocks or fire.</b></li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Do not use the air conditioner for purposes other than those for which it is intended.</b> Do not use the air conditioner for cooling precision instruments, food, plants, animals or works of art as this may adversely affect the performance, quality and/or longevity of the object concerned.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Do not place appliances that produce naked flames in places exposed to the airflow from the unit as this may impair combustion of the burner.</b></li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Do not place heaters directly below the unit as resulting heat can cause deformation.</b></li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Be sure that children, plants or animals are not exposed directly to airflow from the unit as adverse effects may ensue.</b></li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Do not put flammable containers, such as spray cans, within 1 m from the blow-off mouth.</b> The containers may explode because the warm air output of the indoor or outdoor unit will affect them.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Do not install the air conditioner at any place where there is a danger of flammable gas leakage.</b> In the event of a gas leakage, build-up of gas near the air conditioner may result in fire hazards.</li> </ul>


**CAUTION**

	<ul style="list-style-type: none"> <li>• <b>Do not sit or stand on any unstable base at the time of operating or maintaining the air conditioner.</b> The base may topple down and injury may occur.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Do not touch the motor when replacing the filter.</b> The motor can be very hot which may result in burns.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Do not wash the air conditioner with water as this may result in electric shocks or fire.</b></li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Perform ventilation from time to time.</b> Be careful when using the air conditioner with other heating equipment. Insufficient ventilation may result in oxygen deficiency.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Always stop the operation of the air conditioner and turn OFF the power supply breaker when cleaning.</b> Failure to do so may result in an electric shock or injury.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Do not wash the interior of the indoor and outdoor units by yourself. Always consult your Daikin dealer.</b> The use of an incorrect washing method or incorrect detergent may damage the resin parts of the indoor unit or cause water leakage. Moreover, malfunctions, smoke generation or ignition may result if the electric parts or the motor in the indoor unit come in contact with a detergent or water.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Do not place objects in direct proximity of the outdoor unit and do not let leaves and other debris accumulate around the unit.</b> Leaves are a hotbed for small animals which can enter the unit. Once in the unit, such animals can cause malfunctions, smoke or fire when making contact with electrical parts.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Fix the units securely.</b> If the units are not mounted securely, the units may fall or topple and result in personal injury.</li> </ul>
	<ul style="list-style-type: none"> <li>• <b>Arrange the drain to ensure complete drainage.</b> If proper drainage from the outdoor drain pipe does not occur during air conditioner operation, there could be a blockage due to dirt and debris build-up in the pipe. This may result in water leakage from the indoor unit. Under these circumstances, stop the air conditioner operation and consult your dealer for assistance.</li> </ul>

# Names and Functions

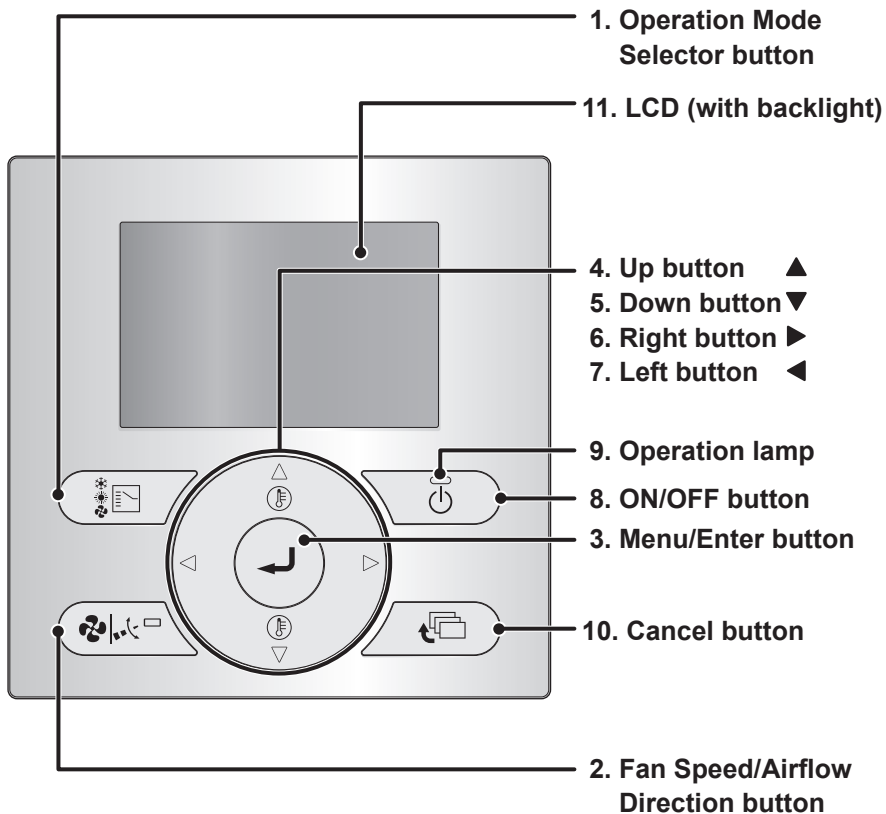

Functions other than the basic operation items (i.e., ON/OFF, operation mode selection, fan speed, up/down direction, and temperature setting) are set from the menu screen.

## **NOTE**

- Do not install the remote controller in places exposed to direct sunlight. Otherwise, the LCD may become discolored and nothing may be displayed.
- Do not pull or twist the remote controller cord. Otherwise, the remote controller may malfunction.
- Do not press the buttons on the remote controller with objects with sharp ends. Otherwise, the remote controller may be damaged or malfunction.

## 1. Operation Mode Selector button

---

- Press this button to select the operation mode of your preference. (See "[Cool/Heat/Fan/Dry/Auto Operation](#)" on page 12)
- Available modes may vary with the connected model.

## 2. Fan Speed/Airflow Direction button

---

- Used to change the fan speed and airflow direction. (See "[Cool/Heat/Fan/Dry/Auto Operation](#)" on page 12)
- Available fan speeds and airflow directions may vary with the connected model.

## 3. Menu/Enter button

---

- This button is enabled by default. To disable, refer to "[Enable/disable the Menu/Enter and Cancel button](#)" on page 11.
- Used to display the Main Menu or enter the selected item (See "[Main Menu Items Overview](#)" on page 19).

## 4. Up button ▲

---

- Used to raise the set temperature.
- The next item on the upper side will be highlighted.  
(Keep pressing the button to cycle through the values or items).
- Used to change the selected item.

## 5. Down button ▼

---

- Used to lower the set temperature.
- The next item on the lower side will be highlighted.  
(Keep pressing the button to cycle through the values or items).
- Used to change the selected item.

## 6. Right button ►

---

- Used to highlight the next items on the right-hand side.
- The display contents are changed to the next screen.

## 7. Left button ◀

---

- Used to highlight the next items on the left-hand side.
- The display contents are changed to the previous screen.

## 8. ON/OFF button

---

- Press to start or stop the air conditioner.

## 9. Operation lamp (Green)

---

- This lamp lights up during operation.
- This lamp is not lit when the unit operation is OFF.
- This lamp blinks if an error or mode conflict occurs.

## 10. Cancel button

---

- This button is enabled by default. To disable, refer to "[Enable/disable the Menu/Enter and Cancel button](#)" on page 11.
- Used to return to the previous screen.

## 11. LCD (with backlight)


---

- The backlight will be lit for approximately 30 seconds when one of the buttons is pressed.
- The actions linked to the buttons, except for the ON/OFF button, are not carried out when the backlight is not lit.

# Liquid Crystal Display


- There are four display methods for the liquid crystal display (LCD) available. The Standard display, which is used by default, and the Detailed display. There is also the possibility to use only Icon or Icon and Text mode (see the Installation manual).
- To change the active display method, select the desired display method in the Display Method screen (See "Display" on page 34).
- The displayed contents on the screen may vary with the operation mode of the connected models. (E.g.: The following display will appear when the air conditioner is in heating operation).

## Standard display

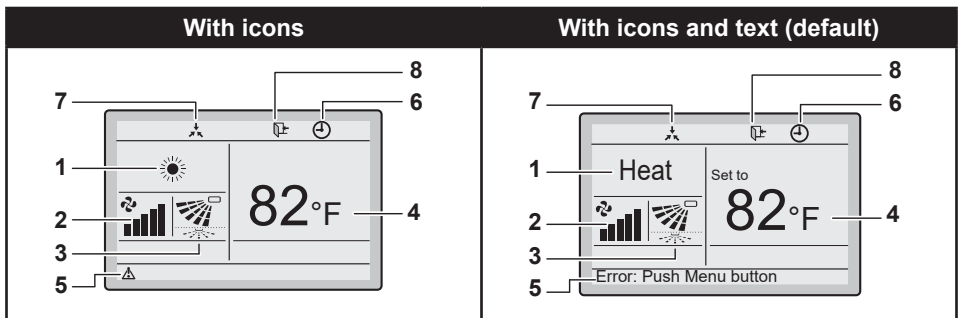





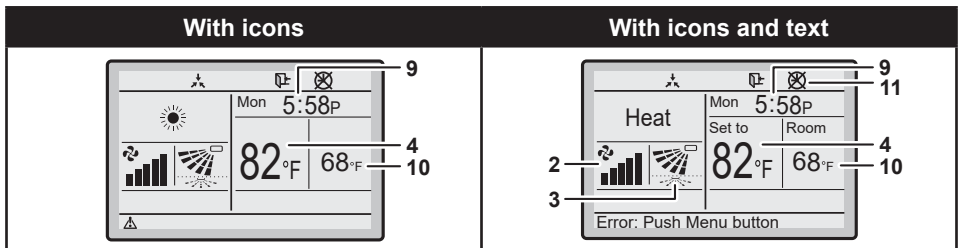

## Detailed display

- The clock and Detailed selection items appear on the Detailed display in addition to the items appearing on the Standard display.



## 1. Operation mode

- Indicates the current operation mode.

Operation Mode		
Cool	Heat	Auto (Heat)
		
Fan	Dry	Auto (Cool)
		

## 2. Fan speed

(See ["Cool/Heat/Fan/Dry/Auto Operation" on page 12](#))

- Indicates the fan speed that is set for the air conditioner.
- The fan speed will not be displayed if the air conditioner does not have the fan speed control function.

## 3. Airflow direction

- Displayed only when the air conditioner is in operation.
- Indicates the airflow direction that is set for the air conditioner.
- The possible directions depend on the indoor unit.

## 4. Set/Setback temperature display

(See ["Setback" on page 17](#))

- When the unit is turned ON, the temperature that is set for the air conditioner is displayed.
- When the unit is turned OFF and Setback is disabled, the temperature that is set for the air conditioner is displayed.
- When the unit is turned OFF and Setback is enabled, the temperature that is set for the setback function is displayed in smaller digits.

## 5. Error "△"

(See ["Error Code Display" on page 42](#))

- Indicates a unit error.

## 6. Timer enabled "⌚"

(See ["OFF Timer" on page 27](#) and ["Schedule" on page 28](#))

- Indicates that the schedule timer or the OFF timer is enabled.

## 7. Under Centralised control "⌘"

- Indicates that the air conditioner is under the management of central control equipment (optional accessories) and the operation of the system through the remote controller is prohibited.

## 8. Setback "⏮"

(See ["Setback" on page 17](#))

- The setback icon flashes when the unit is turned on under the setback control.

## 9. Clock (12/24 hours real time clock)

(See ["Clock & Calendar" on page 38](#))

- Indicates that the clock is set.
- If the clock is not set, "-- : --" will be displayed.

## 10. Detailed selection

(See ["Display Mode" on page 34](#))

- Displayed when the detailed display mode is selected.
- No detailed items are selected by default.

## 11. Timer problem "⌚"

- Indicates that the clock needs to be set again.
- The schedule timer function will not work unless the clock is set again.

# Basic Operation Method

## Remote Controller Functions






### Operation procedure

Operate the buttons according to the procedure.

### Button display

Displays the positions of the buttons to be operated.

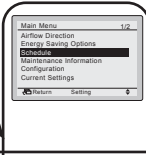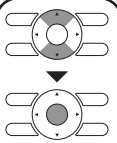Operation Method
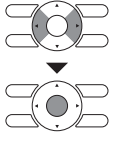
<p><b>Screen display</b> 1</p> <p>Screens that will be displayed on the remote controller.</p>		<ul style="list-style-type: none"> <li>• Display the Main Menu. (See "<a href="#">Manipulating the Main Menu</a>" on page 21).</li> <li>• Press the <b>▼▲</b> (Up/Down) buttons to select <b>Schedule</b> and press the Menu/Enter button.</li> </ul>	
<p>2</p>	 	<ul style="list-style-type: none"> <li>• Press the <b>◀▶</b> (Left/Right) buttons to select <b>Yes</b> and press the Menu/Enter button.</li> <li>• The Date &amp; Time screen will appear.</li> <li>• Set the current year, month, day, and time. (See "<a href="#">Clock &amp; Calendar</a>" on page 38).</li> </ul> <div style="background-color: #cccccc; padding: 5px;"> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• Before setting the schedule, the clock must be set.</li> <li>• If the clock has not been set, a screen like the one on the left will appear.</li> </ul> </div>	


## Enable/disable the Menu/Enter and Cancel button

Operation Method

By default, the Menu/Enter and Cancel button are enabled.

---


1

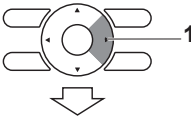

- To enable/disable the Menu/Enter and Cancel button, keep the **▶** (Right) button pressed in the Basic Screen.

---

2




- Press the 3 keys simultaneously while keeping the **▶** (Right) button pressed.

---

# Cool/Heat/Fan/Dry/Auto Operation

## Operation Method

1

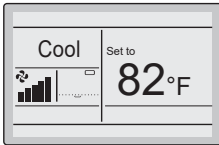

- Press the Operation Mode Selector button several times until the desired mode (Cooling, Heating, Fan Only, Dry or Auto) is selected.



### Note

- Unavailable operation modes are not displayed.
- Only Cooling, Dry or Fan Only mode can be selected if the air conditioner is a cooling-only model.


2




- Press the ON/OFF button. The Operation lamp (green) will be lit and the air conditioner will start operating.



3

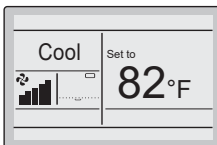


- The set temperature will increase by 1°F when the ▲ (Up) button is pressed and decrease by 1°F when the ▼ (Down) button is pressed.




### Note

Temperature settings are not possible while in Dry or Fan Only mode.


4

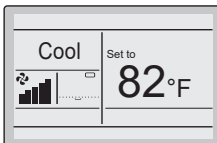


- To change the fan speed or airflow direction, press the Fan Speed/Airflow Direction button.

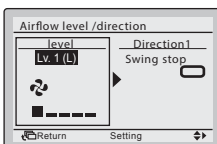


- To select air volume or airflow direction setting, press the ◀▶ buttons.
- Press the ▲▼ (Up/Down) buttons to select the desired level or position.



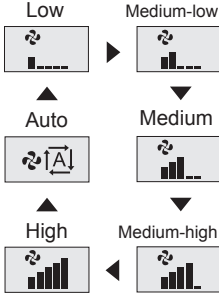


**Note**

- The air conditioner may be in automatic fan speed control for mechanical protection purposes.
- The air conditioner may be in automatic fan speed control according to the room temperature.
- The fan may stop operating, which is not a failure.
- It may take time until fan speed changes are actually carried out.
- In Auto fan speed, the fan speed is adjusted automatically according to the setpoint and indoor temperature.

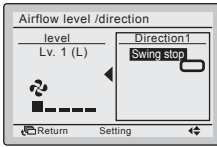

- With airflow direction selected, select the desired airflow direction from **Swing** or **Swing stop** using the ▲▼ (Up/Down) buttons.

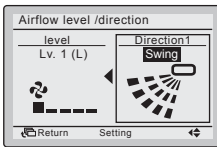

Airflow direction setting (up/down)

**Note**

- The airflow directions appear on the screen as follows:



Up/down direction



Left/right direction

- Selecting **Swing** will cause the airflow direction blades to swing back and forth.
- When you select **Swing stop**, the airflow direction blades stay in the position of when you press the Menu/Enter button.

**Note**

- To change the left/right airflow direction, refer to ["Change the Airflow direction"](#) on page 22.

5



- When the ON/OFF button is pressed again, the air conditioner will stop operating and the Operation lamp will turn OFF.

**Note**

- When the system is stopped while in heating operation, the fan will continue to operate for approximately 1 minute in order to eliminate the residual heat in the indoor unit.

## Characteristics of Cooling Operation

- When the outdoor air temperature is high, it takes some time until the room temperature reaches the set temperature.

## Characteristics of Heating Operation

### Starting operation

- Heating operation generally requires a longer time to attain the set temperature compared with cooling operation.  
It is recommended to start operating the air conditioner in advance by using the timer.

**Perform the following operation in order to prevent the degradation of the heating capability or cold drafts.**

### Defrost operation

- The air conditioner will automatically go into defrost operation to prevent frost accumulation at the outdoor unit which results in loss of the heating capacity.
- The air conditioner will return to normal operation after approximately 4 to 12 minutes.
- During defrost mode the temperature near the indoor room temp is displayed. This may be affected by the location of the unit.

### Outdoor temperature and heating capability

- The heating capacity of the air conditioner will drop when the outdoor temperature decreases.  
If the heating effect is insufficient, it is recommended to use another heating appliance in combination with the air conditioner. (When a combustion appliance is used, ventilate the room regularly).  
Do not use the heating appliance in places where the heating appliance is exposed to the airflow of the air conditioner.
- The air conditioner is a hot air circulation type. Therefore, it takes some time to warm up the room after the air conditioner starts operating.  
The indoor fan will automatically operate until the indoor temperature of the system rises to a certain level.
- If hot air stays around the ceiling and your feet feel cold, a circulator is recommended.  
For details, consult your Daikin dealer.


# Program Dry Operation

## Preparation

- The dry mode may not be selected if the remote controller has no eligibility to select cooling/heating mode.

## Operation Method

# 1

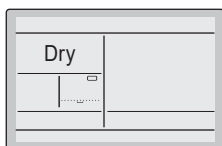

- Press the Operation Mode Selector button several times until Dry mode is selected.



### Note

Dry mode may not be available depending on the type of indoor unit.

# 2



- Press the ON/OFF button. The Operation lamp will be lit and the air conditioner will start operating.



### Note

The air conditioner is in automatic temperature and fan speed control. Therefore, the temperature or fan speed cannot be changed while the air conditioner is in operation.

# 3

- To set the airflow direction, see "[Airflow Direction](#)" on page 22.

# 4



- When the ON/OFF button is pressed again, the air conditioner will stop operating and the Operation lamp will turn OFF.



### Note


To prevent water leakage or system failure, do not turn OFF the power soon after the air conditioner stops operating. Be sure to wait at least 5 minutes so that the drain pump finishes discharging the residual water from the indoor unit.

## Characteristics of Dry Operation

In Dry operation, the air humidity will be lowered by intermittently turning the air conditioner ON in cooling and OFF again to minimize the temperature decrease.


### Note

- The temperature and fan speed are controlled automatically and cannot be controlled by the remote controller.
- Dry operation will not function if the room temperature is too low.

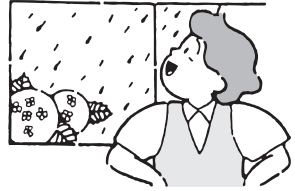

## Setback

The Setback function will maintain the room temperature in a specific range when the remote controller is turned OFF. This is done by temporarily starting the air conditioner that was previously turned OFF by the user, the schedule function or the OFF timer.

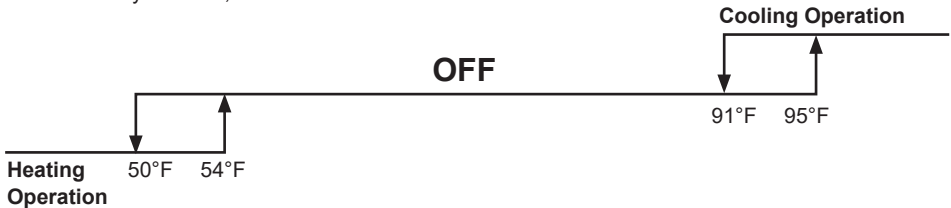

For example:

[ Setback setpoint temperature: cool 95°F, heat 50°F ]

[ Recovery differential: cool -4°F, heat +4°F ]

- If the room temperature drops below 50°F, heating is started automatically. If after half an hour the temperature increases to 54°F or above, the controller returns to its original state.
- If the room temperature goes above 95°F, cooling is started automatically. If after half an hour the temperature drops to 91°F or below, the controller returns to its original state.


### Note

- This function is disabled by default. This function can only be enabled/disabled in the Energy Saving List (See "[Energy Saving Options](#)" on page 23).
- The differential can be adjusted in the Setback Condition menu (See "[Setback Condition](#)" on page 25).
- The setback temperature can be set while the unit is turned off on the Basic Screen or set in the schedule.
- Setback will turn the unit ON for at least 30 minutes unless the setback temperature setpoint is changed or the unit is turned ON with the ON/OFF button.
- When setback turns the air conditioner ON while in Auto mode, the remote controller switches to Cooling or Heating only, depending on what is appropriate, and only the respective setback temperature setpoint is shown.
- The temperature is measured inside the air conditioner unit (when the unit is switched OFF). As there is no actual air flow, the measured temperature inside the air conditioner unit can deviate (up to 6°F) from the actual room temperature.

Setback should not be enabled when a centralised controller is connected via the KRP928 Interface adapter for Room Air Conditioner.

## Operation Method

# 1

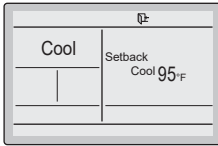

The setback icon "🏠" flashes when the unit is turned ON under the setback control.

The fan speed cannot be changed when setback is active and, as a result, the fan speed is not visible.


The airflow direction can only be changed through the menu when setback is active.

## Key Lock

### Operation Method

Disable the use of all buttons.


# 1

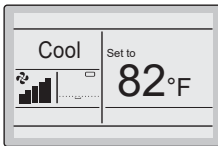

- Press the Menu/Enter button for at least 4 seconds. (During backlight lit)



# 2

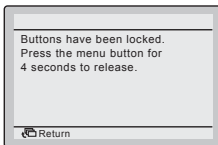

- All buttons are disabled when the keys are locked.
- When one of the buttons is pressed, the message on the left is displayed.

# 3

- To cancel the key lock, continue pressing the Menu/Enter button for at least 4 seconds. (During backlight lit)



# Quick Reference of Main Menu Items

## ■ Main Menu Items Overview

### Note

- The available items may vary with the connected model.
- Only the available items will appear in the menu.

Setting and display items		Description	Reference page
<b>Airflow Direction</b>		Change the airflow direction. <ul style="list-style-type: none"> <li>• The airflow direction blades can be automatically operated up and down and left and right.</li> <li>• There are swing or swing stop directions.</li> <li>• This function is not available on all models.</li> </ul>	<a href="#">22</a>
<b>Energy Saving Options<sup>(1)</sup></b>	<b>Energy Saving List</b>	<b>Enable or disable</b> the "Energy Saving Options".	<a href="#">23</a>
	<b>Setpoint Range Setting</b>	The setpoint temperature range can be restricted for the Cooling, Heating and Auto Mode.	<a href="#">24</a>
	<b>Setback Condition</b>	Set the setback differential temperature after which the unit will turn back OFF.	<a href="#">25</a>
	<b>Setpoint Auto Reset</b>	Change the temperature setpoint to a preset temperature setpoint after running for a set period of time, even if the temperature setpoint has been changed. <ul style="list-style-type: none"> <li>• Possible to set from 30 to 120 minutes in 30 minute increments.</li> </ul>	<a href="#">26</a>
	<b>Off Timer</b>	The system is turned off automatically after the selected time each time the system is activated. <ul style="list-style-type: none"> <li>• Possible to set in 10 minute increments from 30 to 180 minutes.</li> </ul>	<a href="#">27</a>
<b>Schedule<sup>(2)</sup></b>	<b>Enable/Disable</b>	<b>Enable or disable</b> schedule function.	<a href="#">28</a>
	<b>Select Schedule</b>	Select the active schedule number (schedule nr 1, 2 or 3).	<a href="#">29</a>
	<b>Holidays</b>	Select the days of the week for which the schedule will be disabled. This function is used for when the schedule doesn't need to be active, e.g. like when you are on holiday.	<a href="#">30</a>
	<b>Schedule Settings</b>	Select when the operation modes start and/or stop for each day of the week. Up to 5 actions can be set for each day.	<a href="#">31</a>

1) Setback, Setpoint Range, Setback Condition and Setpoint Auto Reset should not be used when a centralised controller is connected via the KRP928 Interface adapter for Room Air Conditioner.

2) The schedule can be restricted when a centralised controller is connected via the KRP928 Interface adapter for Room Air Conditioner.

Setting and display items		Description	Reference page
<b>Maintenance Information</b>		Display the service contact.	<a href="#">33</a>
<b>Configuration</b>	<b>Display</b>	<ul style="list-style-type: none"> <li>• Display: Switch between Standard or Detailed display.</li> <li>• Detailed display settings: Select if room temperature (near the indoor unit), outdoor temperature, or nothing is displayed.</li> </ul>	<a href="#">34</a>
	<b>Celsius / Fahrenheit</b>	Choose the temperature values from Celsius or Fahrenheit.	<a href="#">36</a>
	<b>Contrast Adjustment</b>	Adjust the LCD contrast.	<a href="#">36</a>
<b>Current Settings</b>		Display a list of the current settings of the available items.	<a href="#">37</a>
<b>Clock &amp; Calendar</b>	<b>Date &amp; Time</b>	Configure the date and time settings. <ul style="list-style-type: none"> <li>• The default time display is 12H.</li> <li>• The clock will maintain accurate within <math>\pm 30</math> seconds per month.</li> <li>• If there is a power failure for a period not exceeding 48 hours, the clock will continue working with the built-in backup power supply.</li> </ul>	<a href="#">38</a>
	<b>12H/24H Clock</b>	The time can be displayed in either a 12 hour or 24 hour time format.	<a href="#">39</a>
	<b>Daylight Saving Time</b>	Enable or Disable the Daylight Saving Time.	<a href="#">39</a>
<b>Language</b>		Choose the language from English, French or Spanish.	<a href="#">40</a>


# Menu Manipulation

## Main Menu

### ■ Manipulating the Main Menu

#### Operation Method

1

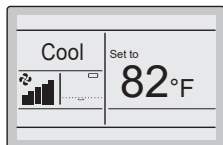


Basic Screen

- Press the Menu/Enter button.



2

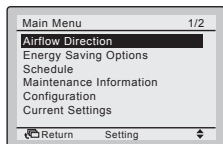


Main Menu

- The Main Menu will appear.

⇐ Instructions for operating the buttons will appear.

3

- Selecting items from the Main Menu.
  1. Press the ▼▲ (Up/Down) buttons to select the desired item.
  2. Press the Menu/Enter button to display the selected settings screen.

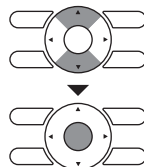

4

- To go back to the Basic Screen from the Main Menu, press the Cancel button.



### Caution


- When the Main Menu is visible and a button is not pressed for 5 minutes, the screen will automatically go back to the Basic Screen.

# Airflow Direction


## Change the Airflow direction

### Operation Method


1

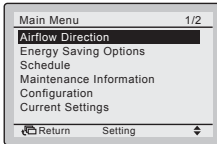



- Display the Main Menu (See "[Manipulating the Main Menu](#)" on page 21)
- Press the ▲▼ (Up/Down) buttons to select **Airflow Direction** and press the Menu/Enter button.

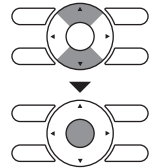


2

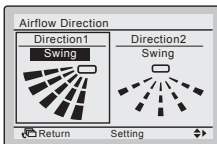

- Select the desired airflow direction from **Swing** or **Swing stop** using the ▲▼ (Up/Down) buttons.
- Select Up/down direction or Left/right direction using the ◀▶ (Left/Right) buttons.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

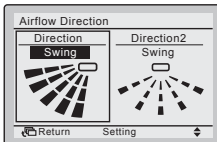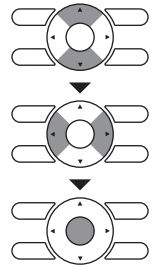

Airflow direction setting (up/down)

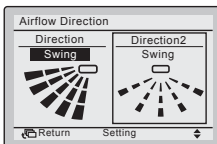

Airflow direction setting (left/right)

Remark: Only visible if available.

### Note

- The airflow directions appear on the screen as follows:



Up/down direction



Left/right direction

- Selecting **Swing** will cause the airflow direction blades to swing back and forth. When **Swing** is selected, all airflow directions will be visible at the same time.
- When you select **Swing stop**, the airflow direction blades stay in the position that you press the Menu/Enter button.


# Energy Saving Options

## ■ Energy Saving List


### Operation Method

Some functions should not be enabled when a centralised controller is connected via the KRP928 Interface adapter for Room Air Conditioner.


1

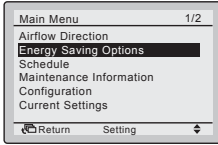


- Display the Main Menu. (See "Manipulating the Main Menu" on page 21).
- Press the ▼▲ (Up/Down) buttons to select **Energy Saving Options** and press the Menu/Enter button.

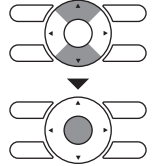


2

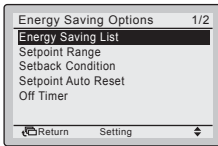


- Press the ▼▲ (Up/Down) buttons to select **Energy Saving List** and press the Menu/Enter button.

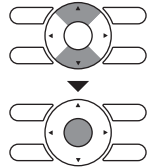


3

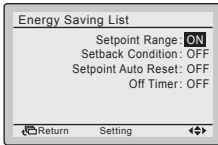


- Press the ▼▲ (Up/Down) buttons to change the setting to **ON** or **OFF**.
- Move the cursor using the ◀▶ (Left/Right) buttons.
- Press the Menu/Enter button when all changes are made. The confirmation screen will appear.

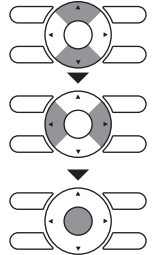

4

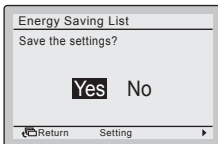

- Press the ◀▶ (Left/Right) buttons to select **Yes**.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

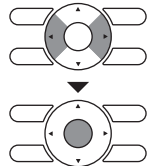


## ■ Setpoint Range Setting


This function should not be used when a centralised controller is connected via the KRP928 Interface adapter for Room Air Conditioner.

### Operation Method


# 1

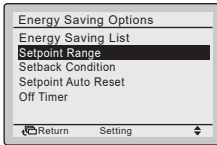


- Display the Energy Saving Options (See "[Energy Saving List](#)" on page 23).
- Press the ▼▲ (Up/Down) buttons to select **Setpoint Range** and press the Menu/Enter button.

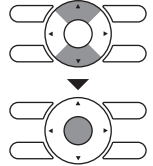

# 2

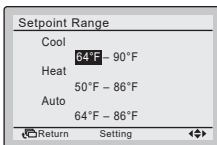


- Press the ▼▲ (Up/Down) buttons to change the cooling or heating temperature setpoint range.
- Move the cursor using the ◀▶ (Left/Right) buttons.
- Press the Menu/Enter button when all changes are made. The confirmation screen will appear.

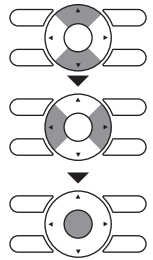


### Note

- The default setpoint range restriction is [64°F→90°F] for cooling, [50°F→86°F] for heating, and [64°F→86°F] for auto. This setpoint range is the general setpoint range and is as a result always active regardless of whether Setpoint Range is enabled or disabled.
- The default setpoint range for setback operation is [92°F→99°F] for cooling and [50°F→59°F] for heating. This setpoint range cannot be changed.

# 3

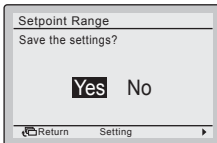

- Press the ◀▶ (Left/Right) buttons to select **Yes**.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

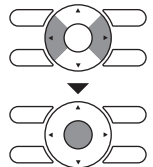


# ■ Setback Condition


This function should not be used when a centralised controller is connected via the KRP928 Interface adapter for Room Air Conditioner.

## Operation Method


1

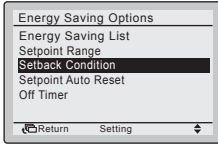


- Display the Energy Saving Options (See "Energy Saving List" on page 23).
- Press the ▼▲ (Up/Down) buttons to select **Setback Condition** and press the Menu/Enter button.

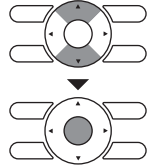


2

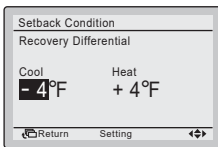


- Press the ▼▲ (Up/Down) buttons to change the differential for setback operation.
- Move the cursor using the ◀▶ (Left/Right) buttons.
- Press the Menu/Enter button when all changes are made. The confirmation screen will appear.

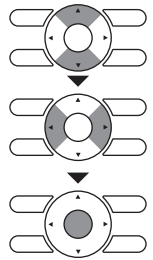

3

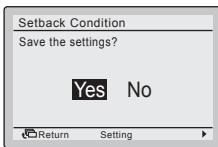

- Press the ◀▶ (Left/Right) buttons to select **Yes**.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

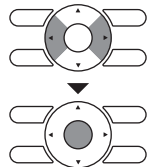


## ■ Setpoint Auto Reset


This function should not be used when a centralised controller is connected via the KRP928 Interface adapter for Room Air Conditioner.

### Operation Method


# 1

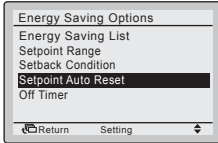


- Display the Energy Saving Options (See "[Energy Saving List](#)" on page 23).
- Press the ▼▲ (Up/Down) buttons to select **Setpoint Auto Reset** and press the Menu/Enter button.

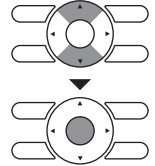


# 2

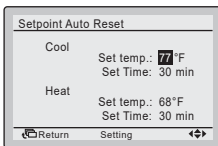


- Press the ▼▲ (Up/Down) buttons to set the preset temperature and timing for the auto reset of the setpoint.
- Move the cursor using the ◀▶ (Left/Right) buttons.
- Press the Menu/Enter button when all the changes are made. The confirmation screen will appear.

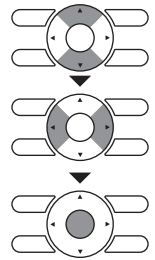

# 3

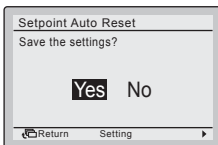


- Press the ◀▶ (Left/Right) buttons to select **Yes**.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

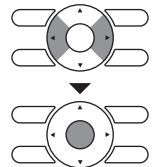


# ■ OFF Timer

## Operation Method


1

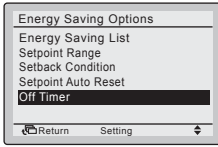


- Display the Energy Saving Options (See "[Energy Saving List](#)" on page 23).
- Press the ▼▲ (Up/Down) buttons to select **Off Timer** and press the Menu/Enter button.

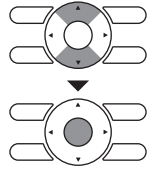


2

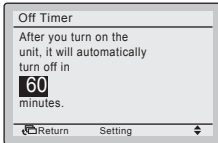


- Use the ▼▲ (Up/Down) buttons to set the time after which the unit automatically turns off again. Selections can be made in increments of 10 minutes from 30 to 180 minutes. Holding down the button causes the number to change continuously. The settings confirmation screen will appear when the Menu/Enter button is pressed.

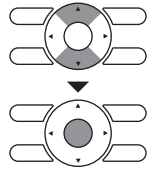

3

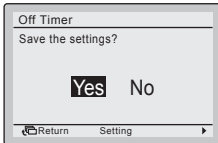

- Press the ◀▶ (Left/Right) button to select **Yes**.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

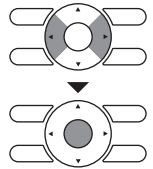


# Schedule

## ■ Enable/Disable


The schedule can be restricted when a centralised controller is connected via the KRP928 Interface adapter for Room Air Conditioner.

### Operation Method


# 1

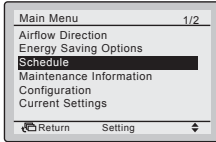

- Display the Main Menu.  
(See ["Manipulating the Main Menu" on page 21](#)).
- Press the ▼▲ (Up/Down) buttons to select **Schedule** and press the Menu/Enter button.

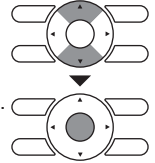


# 2

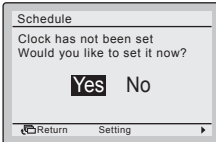


#### Note


- Before setting the schedule, the clock must be set.
- If the clock has not been set, a screen like the one on the left will appear.

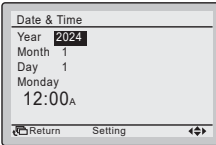


- Press the ◀▶ (Left/Right) buttons to select **Yes** and press the Menu/Enter button.
- The Date & Time screen will appear.
- Set the current year, month, day and time. (See ["Clock & Calendar" on page 38](#)).

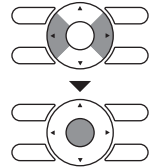


# 3

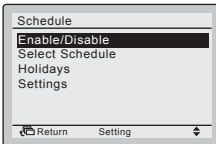


- Press the ▼▲ (Up/Down) buttons to select **Enable/Disable** and press the Menu/Enter button.

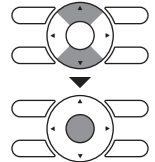

# 4

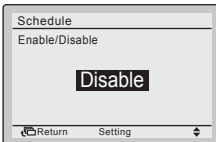


- Press the ▼▲ (Up/Down) buttons to select **Enable** or **Disable**.
- The confirmation screen will appear when the Menu/Enter button is pressed.

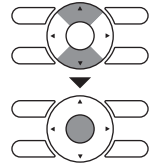

#### Note

The Schedule is enabled. To modify the Selected schedule number see ["Select Schedule" on page 29](#).

5

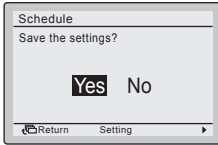

- Press the ◀▶ (Left/Right) buttons to select **Yes**.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.




## ■ Select Schedule


### Operation Method

It is possible to program up to three different schedules.


1

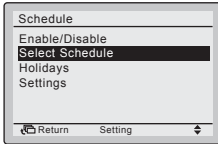


- Display the Schedule menu. (See "[Enable/Disable](#)" on page 28).
- Press the ▼▲ (Up/Down) buttons to select **Select Schedule** and press the Menu/Enter button.

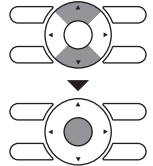


2

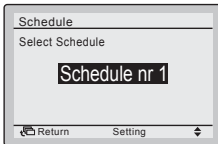


- Press the ▼▲ (Up/Down) buttons to select **Schedule nr 1**, **Schedule nr 2** or **Schedule nr 3**.
- The confirmation screen will appear when the Menu/Enter button is pressed.

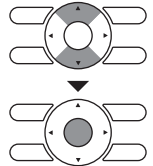

3

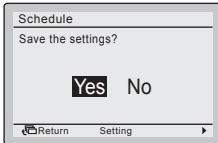


- Press the ◀▶ (Left/Right) buttons to select **Yes**.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

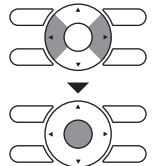


# ■ Holidays

**Operation Method** The schedule timer will be disabled for days that have been set as a holiday.


## 1

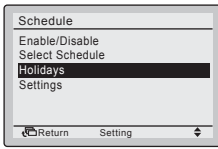


- Display the Schedule menu. (See "Enable/Disable" on page 28).
- Press the ▼▲ (Up/Down) buttons to select **Holidays** and press the Menu/Enter button.

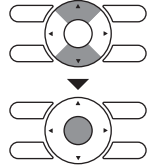

## 2

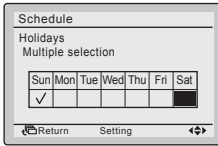


- Press the ◀▶ (Left/Right) buttons to select the desired day.
- Press the ▼▲ (Up/Down) buttons to display "✓" to set this day as a holiday.

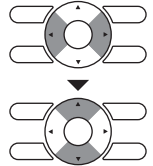

### Note

- Multiple days can be selected as holidays.
- To re-enable the schedule timer for the day selected as a holiday, the holiday setting must be released.


## 3

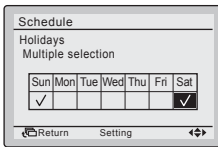



- Press the Menu/Enter button when all changes are made. The settings confirmation screen will appear.



## 4

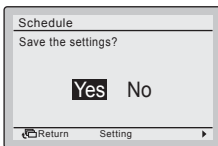

- Press the ◀▶ (Left/Right) button to select **Yes**.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

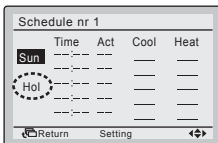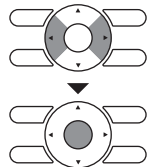


### Note

"Hol" will be displayed on the schedule settings screen for days that have been set as a holiday.


# ■ Schedule Settings

**Operation Method** After saving a schedule, the schedule is automatically enabled.

1

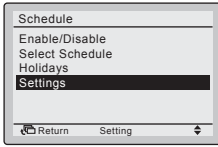


- Display the Schedule menu. (See "Enable/Disable" on page 28).
- Press the ▼▲ (Up/Down) buttons to select **Settings** and press the Menu/Enter button.

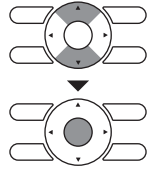


**Note**

The Schedule Settings of the selected schedule can be modified. To modify the selected schedule see "Select Schedule" on page 29.


2

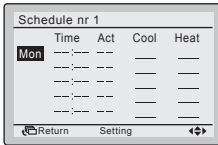


- Press the ▼▲ (Up/Down) buttons to select the day to be set.



3

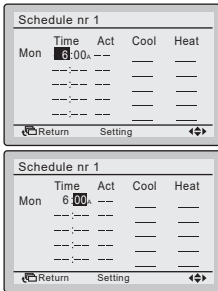

- Set the time for the selected day.
- Press the ◀▶ (Left/Right) buttons to move the highlighted item and press the ▼▲ (Up/Down) buttons to input the desired operation start time. Each press of the ▼▲ (Up/Down) buttons moves the numbers by 1 hour or 1 minute.

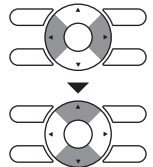


# 4

Schedule nr 1				
	Time	Act	Cool	Heat
Mon	6:00	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
		Return	Setting	↔

Schedule nr 1				
	Time	Act	Cool	Heat
Mon	6:00	ON	74°F	69°F
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
		Return	Setting	↔

Schedule nr 1				
	Time	Act	Cool	Heat
Mon	6:00	ON	74°F	69°F
---	---	---	---	---
---	---	---	89°F	52°F
---	---	---	---	---
---	---	---	---	---
		Return	Setting	↔


- Press the ◀▶ (Left/Right) buttons to move the highlighted item and press the ▼▲ (Up/Down) buttons to configure ON/OFF/-- settings.

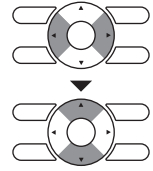

**"Act"-column:**

- ON : The temperature setpoints can be configured.
- OFF : The setback temperature setpoints can be configured.
- : The temperature and setback temperature setpoints will be disabled.

- Press the ◀▶ (Left/Right) buttons to move the highlighted item and press the ▼▲ (Up/Down) buttons to input the cooling and heating temperature setpoints for ON or OFF (Setback) operation.

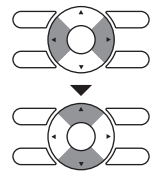

**"Cool" and "Heat" column:**

- "\_": Indicates that the temperature and setback temperature setpoint for this time period is not specified. The last active setpoint will be utilized.
- "--": Indicates that the setback function is disabled for this time period.


# 5

Schedule nr 1				
	Time	Act	Cool	Heat
Mon	6:00	ON	74°F	69°F
---	---	---	---	---
---	---	---	95°F	52°F
---	5:30	ON	74°F	69°F
---	10:00	---	---	---
		Return	Setting	↔

Schedule nr 1				
	Time	Act	Cool	Heat
Mon	6:00	ON	74°F	69°F
---	---	---	---	---
---	8:00	OFF	95°F	52°F
---	5:30	ON	74°F	69°F
---	10:00	OFF	95°F	52°F
		Return	Setting	↔

Schedule nr 1				
	Time	Act	Cool	Heat
Tue	6:00	ON	74°F	69°F
---	---	---	---	---
---	8:00	OFF	95°F	52°F
---	5:30	ON	74°F	69°F
---	10:00	OFF	95°F	52°F
		Return	Setting	↔


**Note**  
A maximum of 5 actions per day can be set.

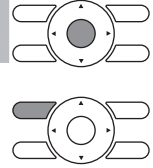


- Press the Menu/Enter button when all changes are made. The confirmation screen will appear.

**Note**  
To copy the settings from the previous day, press the Operation Mode Selector button.  
Example: To copy the contents of Monday to Tuesday, select Tuesday and press the Operation Mode Selector button.

6

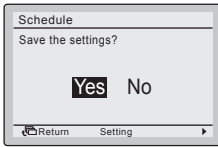

- Press the ◀▶ (Left/Right) buttons to select **Yes**.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

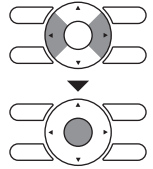


## Maintenance Information


### ■ Display the Maintenance Information

#### Operation Method


1

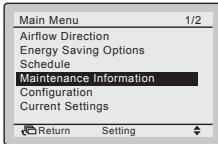

- Display the Main Menu. (See "Manipulating the Main Menu" on page 21).
- Press the ▼▲ (Up/Down) buttons to select **Maintenance Information** and press the Menu/Enter button.

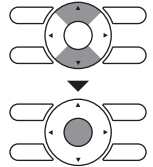

2

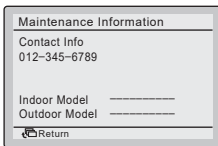

- The phone number for the contact address will appear at the top of the screen. (If you have not yet registered your product, it will not appear).
- The model information of the indoor and outdoor units of your product will always show -----.
- Press the Cancel button to return to the previous screen.



#### Note

- The error code may also appear. If the operation lamp is not blinking, the unit is working properly.
- The error code record will disappear if you press the ON/OFF button for more than 4 seconds.




# Configuration

## ■ Display


### Display Mode

#### Operation Method


# 1

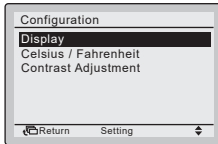


- Display the Configuration menu.
- Press the ▼▲ (Up/Down) buttons to select **Display** and press the Menu/Enter button.

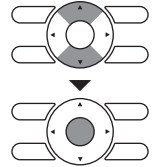


# 2

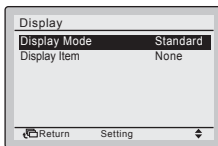


- Press the ▼▲ (Up/Down) buttons to select **Display Mode** and press the Menu/Enter button.

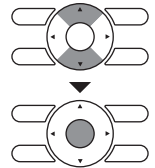

# 3

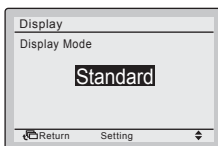

- Press the ▼▲ (Up/Down) buttons to select **Standard** or **Detailed**.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

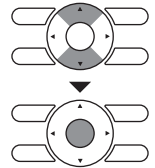


#### Note

To select which item is displayed in the detailed display selection area, refer to ["Detailed Item" on page 35](#).


# Detailed Item

## Operation Method


1

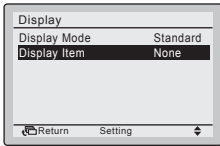



- Display the Display menu. (See "Display Mode" on [page 34](#)).
- Press the ▼▲ (Up/Down) buttons to select **Display Item** and press the Menu/Enter button.

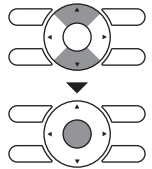

2

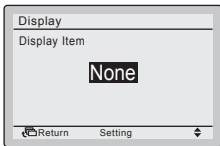

- Press the ▼▲ (Up/Down) buttons to display the following.



\* Some models may not display these items even if they are selected.

- Be sure to read the following regarding the display of the room and outdoor temperature.

### Room Temp

- The temperature near the indoor unit.
- The temperature that is detected may be affected by the location of the unit.

### Outside Air Temp

- The temperature detected near the outdoor unit.
- The temperature that is detected may be affected by factors such as the location of the unit (e.g. if it is in direct sunlight) and unit operation during defrosting.
- "Outside Air Temp" will not display after stopping or immediately after starting.


- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.




## ■ Celsius / Fahrenheit

### Operation Method


1

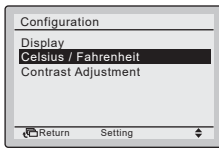


- Display the Configuration menu.
- Press the ▼▲ (Up/Down) buttons to select **Celsius / Fahrenheit** and press the Menu/Enter button.

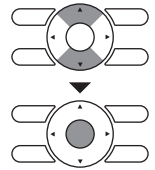

2

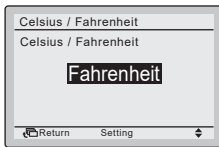


- Press the ▼▲ (Up/Down) buttons to select **Fahrenheit** or **Celsius**.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

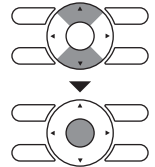


## ■ Contrast Adjustment

### Operation Method


1

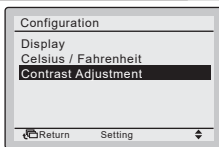


- Display the Configuration menu.
- Press the ▼▲ (Up/Down) buttons to select **Contrast adjustment** and press the Menu/Enter button.

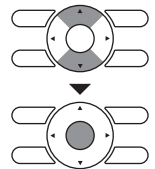

2

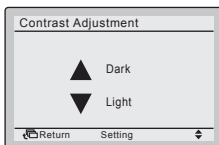

- Press the ▼▲ (Up/Down) buttons until you reach the desired contrast.
- Press the Menu/Enter button to confirm the setting and to return to the Basic Screen.

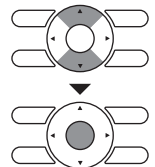


# Current Settings


## Overview of the Current Settings

### Operation Method


1

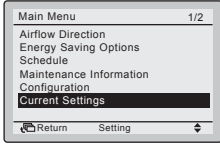


- Display the Main Menu. (See "[Manipulating the Main Menu](#)" on page 21).
- Press the ▼▲ (Up/Down) buttons to select **Current Settings** and press the Menu/Enter button.

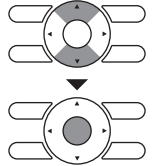

2

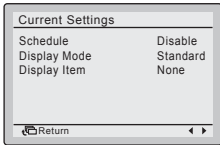

- A list showing the status of the current settings will appear.
- Press the Cancel button to return to the Main Menu.



Display items		
Schedule	Display Mode	Display Item


\* Display items may differ depending on the model. Only the items that can be set are displayed.

# Clock & Calendar


## ■ Date & Time

### Operation Method


1

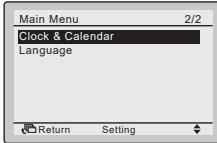


- Display the Main Menu. (See "Manipulating the Main Menu" on page 21).
- Press the ▼▲ (Up/Down) buttons to select **Clock & Calendar** and press the Menu/Enter button.

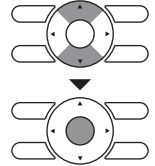


2

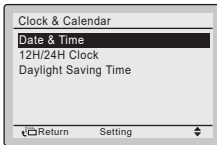


- Press the ▼▲ (Up/Down) buttons to select **Date & Time** and press the Menu/Enter button.

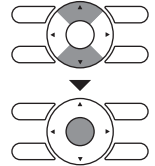

3

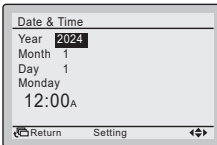

- Use the ▼▲ (Up/Down) buttons to change the date and time.
- Move the cursor using the ◀▶ (Left/Right) buttons.
- Press the Menu/Enter button when all changes are made. The confirmation screen will appear.

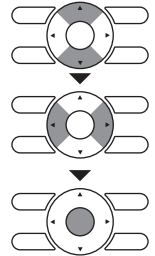


### Caution

- By default, Daylight Saving Time (DST) is active. The following rules apply:
  - Start: Second Sunday of March 2:00 am
  - End: First Sunday of November 2:00 am
- Please consult your Daikin dealer if the DST settings need to be changed.


### Note

The day of the week is set automatically.

4

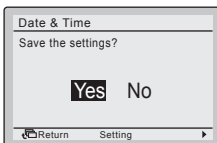


- Press the ◀▶ (Left/Right) button to select **Yes**.
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

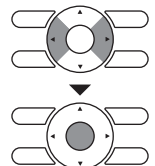


## ■ 12H/24H CLOCK

### Operation Method


1

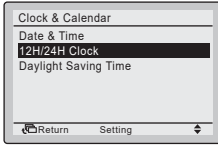


- Display the Clock & Calendar menu. (See "Date & Time" on page 38).
- Press the ▼▲ (Up/Down) buttons to select **12H/24H Clock** and press the Menu/Enter button.

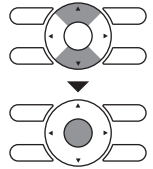

2

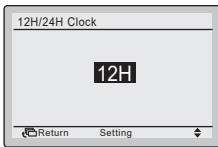


- Press the ▼▲ (Up/Down) buttons to select **12H** or **24H**.
- The confirmation screen will appear when the Menu/Enter button is pressed.

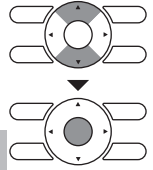


#### Note

By default, the time display is set to the 12H format.

3

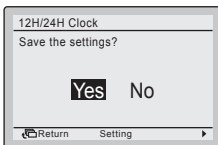


- Press the ◀▶ (Left/Right) buttons to select **Yes**.
- Press the Menu/Enter button to confirm the setting and to return to the Main Menu.

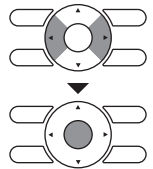


## ■ Daylight Saving Time

### Operation Method


1

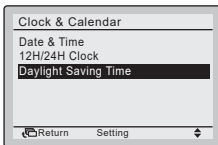


- Display the Clock & Calendar menu. (See "Date & Time" on page 38).
- Press the ▼▲ (Up/Down) buttons to select **Daylight Saving Time** and press the Menu/Enter button.

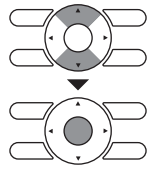


2

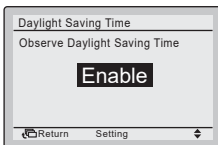


- Press ▼▲ (Up/Down) buttons to select **Enable** or **Disable**.
- Press Menu/Enter button to display the setting confirmation screen.

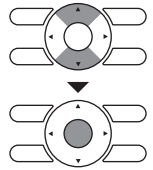

3

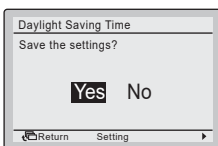

- Press the ◀▶ (Left/Right) buttons to select **Yes**.
- Press the Menu/Enter button to confirm the setting and to return to the Main Menu.

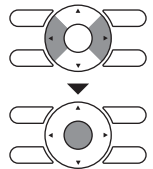


# Language


## ■ Select the Language

### Operation Method


# 1

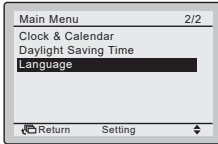


- Display the Main Menu. (See "[Manipulating the Main Menu](#)" on page 21).
- Press the ▼▲ (Up/Down) buttons to select **Language** and press the Menu/Enter button.

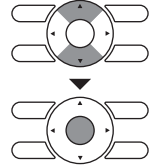

# 2

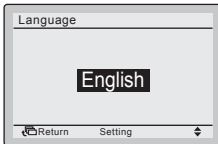

- Press the ▼▲ (Up/Down) buttons to select the preferred language (English, French or Spanish).
- Press the Menu/Enter button to confirm the settings and to return to the Basic Screen.

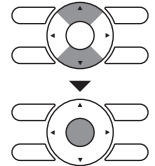

# Maintenance

---

## Caution

- **Do not wash the remote controller.**

Doing so may cause electric leakage and result in electric shocks or fire.



- **Be sure to stop the operation of the air conditioner and turn off the power supply breaker when performing maintenance activities.**

Failure to do so may result in electric shocks or injury.



## Maintenance of Unit and the LCD display

### Note:

- Wipe the LCD display and the rest of the surface of the remote controller with a dry cloth when they become dirty.
- If the dirt on the surface cannot be removed, soak the cloth in neutral detergent diluted with water, squeeze the cloth tightly, and clean the surface. Wipe the surface with a dry cloth afterwards.
- Do not use any paint thinner, organic solvent or strong acid.

## Warning

**Do not use flammable materials (e.g., hair spray or insecticide) near the air conditioner.**

**Do not clean the product with organic solvents such as benzine or paint thinner.**

The use of organic solvents may cause crack damage to the product, electric shocks or fire.



# Reference Information

## Error Code Display

### Contact your Daikin dealer in the following cases

#### Warning


When the air conditioner is malfunctioning (e.g., giving off a burning odor), stop the air conditioner and turn off the power.

Continued operation under such circumstances may result in failure, electric shocks or fire. Contact your Daikin dealer.




### Operation Method


1

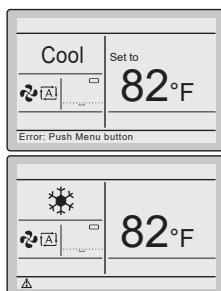

- If an error occurs, the error message or error icon and the operation lamp will blink.
- To display the error code and contact information, the Menu/Enter button needs to be enabled (See "[Manipulating the Main Menu](#)" on page 21).
- Press the Menu/Enter button.

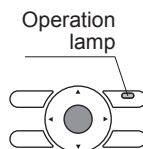


2

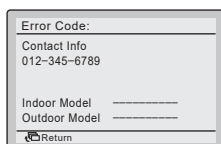

- The error code blinks and the contact address will appear.
- Notify your Daikin dealer of the Error code and Model name.

## "Mode Conflict" message

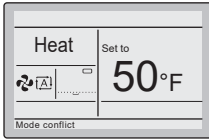

Only applicable in the case of multi systems (multiple indoor units connected to the outdoor unit) and for connected indoor units that support this functionality. When multiple indoor units are instructed to operate simultaneously, but in different operation modes, an operation mode conflict occurs:

- The operation lamp flashes
- **Mode conflict** appears on the user interface

- The units that do not have priority enter standby mode

This is not a malfunction. To solve the conflict, make the units that do not have priority run in the same operation mode as that of the unit that has priority. Which unit has priority depends on whether the Priority Room setting is present and/or active:

If...	Then...
The <b>Priority Room</b> setting is present and active.	The operation mode of the indoor unit to which the <b>Priority Room</b> setting is applied takes priority. In case of an operation mode conflict, the other units will enter standby mode.

### ! NOTICE

- COOL, DRY and FAN operation can be used simultaneously.
- If the conflict is not solved manually, non-priority units will automatically resume operation as soon as the priority unit stops operating.

If...	Then...
The <b>Priority Room</b> setting is not present OR present but not active.	The operation mode of the indoor unit that was turned on first takes priority. In case of an operation mode conflict, the units that were turned on later will enter standby mode.

### ! NOTICE

- COOL, DRY and FAN operation can be used simultaneously.
- Units running in HEAT operation mode always have priority over units running in FAN operation mode, even if they were not turned on first.
- When solving the conflict, it is possible to make the non-priority units run in AUTO operation mode: they will automatically start operation in the same operation mode as that of the priority unit.

## Caution

The **MODE CONFLICT** can also happen to units that are turned on by the **setback** function. This means that due to priority, they will not run and consequently will not be able to maintain the temperature in the room. Please consider the use of the **setback** feature in a multi system carefully to avoid situations like these.



## Caution

When a KRP928 Interface adapter for Room Air Conditioner is connected, the mode conflict message will not be shown on the user interface, but the indoor unit will go into standby mode.



## Combined use of the wired and wireless user interface

Avoid using the wired remote controller and the wireless remote controller at the same time.

- The wireless user interface does not receive feedback from the unit. When a setting is changed on the wired remote controller, the change is not communicated to the wireless remote controller.
- Since some functions of both controllers are not supported by each other, the displays will not match.

## FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

CAN ICES-003(B)/NMB-003(B)

The FCC responsible party is Daikin Comfort Technologies Manufacturing, L.P., and may be contacted by calling (713)-861-2500, or at 19001 Kermier Rd., Waller, TX 77484.  
(<https://www.northamerica-daikin.com>)

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

**DAIKIN COMFORT TECHNOLOGIES NORTH AMERICA, INC.**

19001 Kermier Road

Waller, TX 77484

<https://www.northamerica-daikin.com>



The two-dimensional bar code is a manufacturing code.

3P754594-1 M23B264 (2404) HT